



Accessory Fitting Instructions


Alarm Disc Lock Kit	
Kit Number	Models Affected
A9810027	All Models

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

Parts Supplied

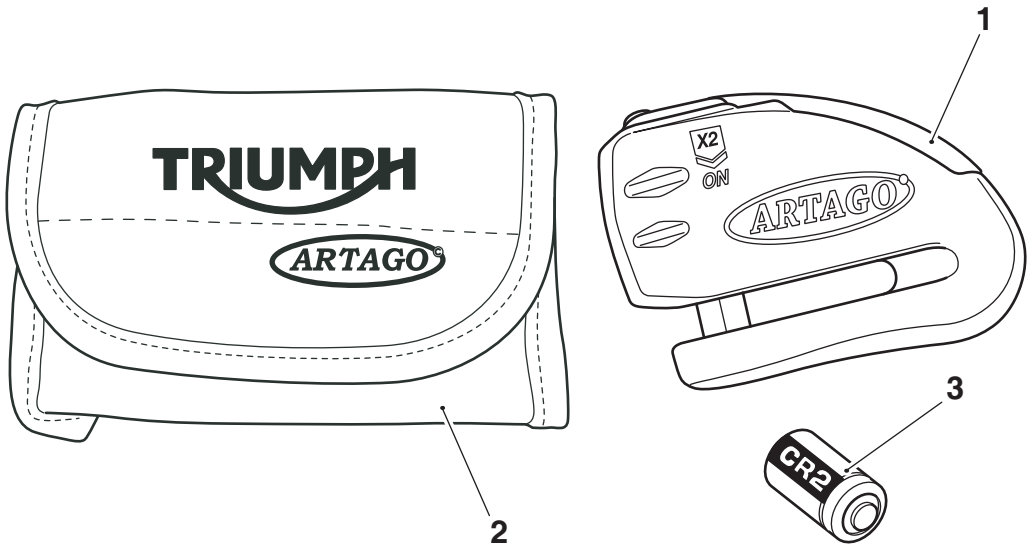

1. Alarm disc lock	1 off	3. Battery	1 off
2. Storage pouch	1 off		

Warning

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle will affect the performance, stability and handling of the motorcycle. This may affect the rider's ability to control the motorcycle and could cause an accident.

Warning

Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.

Warning

A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability. This may result in loss of motorcycle control and an accident.

Note:

- **Triumph offers a broad range of approved genuine accessories for your motorcycle. We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit. To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorised Triumph dealer.**


Locking and Unlocking the Disk Lock

Caution


When using the key to lock or unlock the disc lock if resistance is felt when turning the key do not attempt to turn the key further. Applying force to the key in an attempt to overcome any resistance may result in damage to the disc lock or key.

Note:

- **The disc lock key must be fully inserted in to the lock to allow the key to rotate through 180 degrees. If the key does not rotate fully through 180 degrees it may not be fully inserted into the lock, as shown below.**
- **If the lock mechanism becomes difficult to turn with the key apply a PTFE lubricant into the lock barrel.**

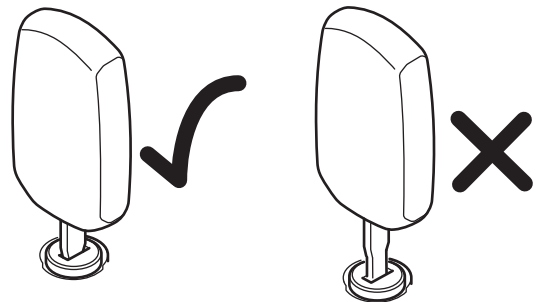

1. To lock the disc lock, insert the key fully into the lock, push in the locking bolt and turn the key through 180 degrees in an anticlockwise direction, as shown.
2. To unlock the disc lock, insert the key fully into the lock and turn the key through 180 degrees in a clockwise direction, as shown.

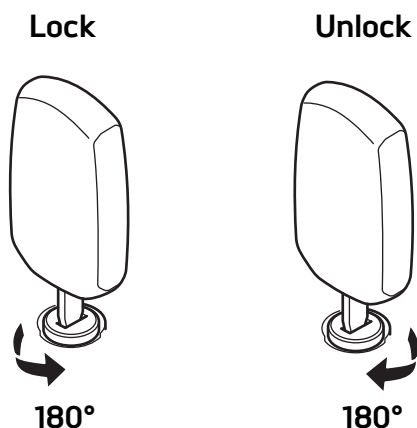


Alarm Operation

- To activate the alarm, press the locking bolt down twice within fifteen seconds. A short audible beep will be heard and an LED light on the disc lock will illuminate to indicate the alarm is being activated.
- After ten seconds two audible beeps should be heard to confirm the disc lock is activated.
- If an attempt is made to remove the lock while activated the alarm will sound six beeps and the LED light will illuminate. If the attempt to remove the lock continues past 5 seconds the alarm will continue to sound.
- The alarm will reset itself if no disturbance of the lock is sensed after fifteen seconds from the last activation.
- To deactivate the alarm, unlock the disc lock with the key, as described on page 2.


Replacing the Battery

1. Remove the fixing from the base of the disc lock which retains the alarm module cover, as shown. Retain the fixing for reuse

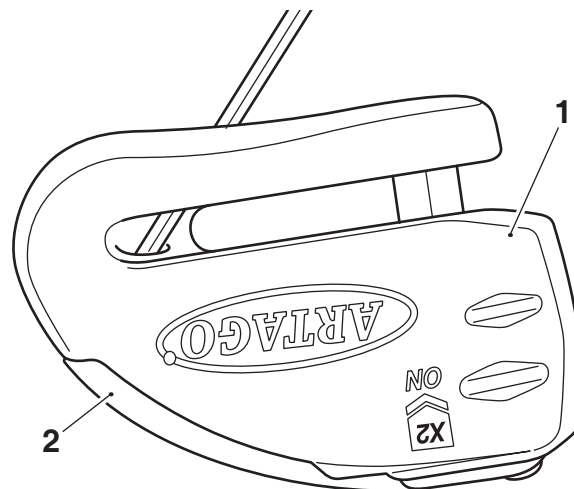

1. Disc lock
2. Alarm module cover

2. Remove the alarm module cover and alarm module from the disc lock.

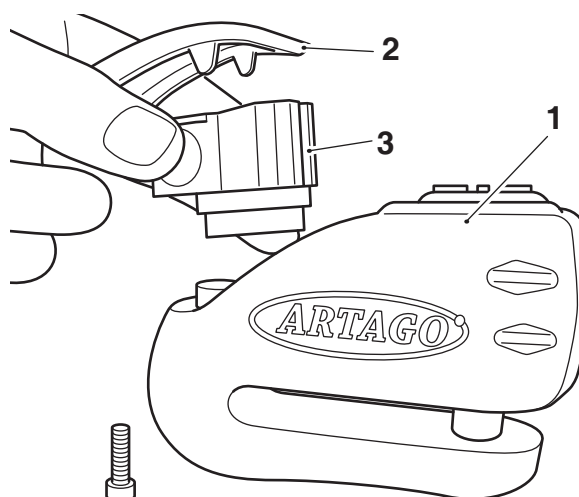


1. Disc lock
2. Alarm module cover
3. Alarm module



Caution


Do not use excessive force when removing the battery cover from the alarm module. Using excessive force to remove the battery cover could result in damage to the alarm module or battery cover.

-
3. Using a small flat blade screwdriver carefully lever open the battery cover. Remove the battery cover from the alarm module.

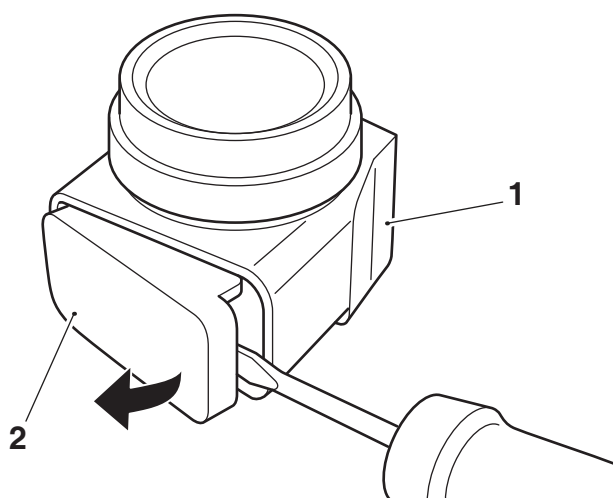

1. Alarm module
2. Battery cover


4. Remove the worn battery and replace it with a new CR 2 battery in the orientation shown.

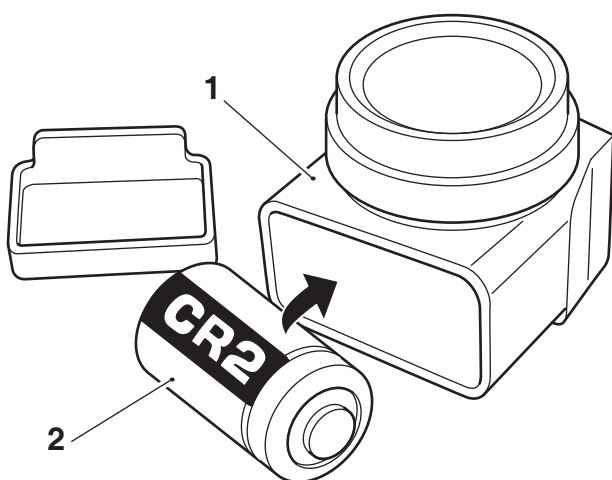

1. Alarm module
2. Battery

5. Refit the alarm module battery cover.

6. Refit the alarm module into the disc lock in the orientation shown. Refit the alarm module cover.

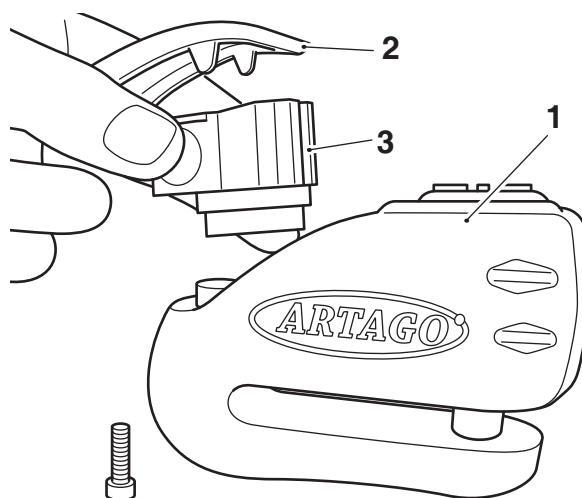

1. Disc lock
2. Alarm module cover
3. Alarm module

7. Refit the original alarm module cover fixings and tighten the fixing to **5 Nm**.