


English**Fitting Instructions:
Sprint GT 1050, Tiger Sport, Trophy and Trophy SE
A9500506**

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory-equipped motorcycle is subsequently sold.

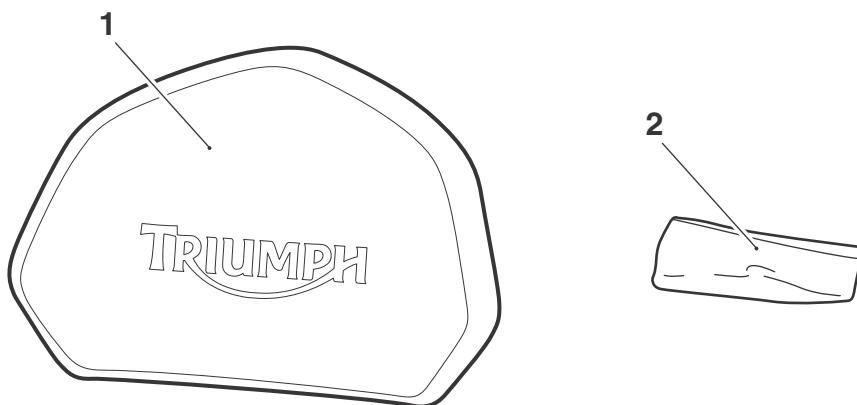

cgoy_1

Parts Supplied:

1. Backrest	1 off	2. Cleaning wipe	1 off
-------------	-------	------------------	-------



Warning

This accessory kit is designed for use on Triumph Sprint GT 1050, Tiger Sport, Trophy and Trophy SE motorcycles only and should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting this accessory kit to any other Triumph model, or to any other manufacturer's motorcycle, will affect the performance, stability and handling of the motorcycle. This may affect the rider's ability to control the motorcycle and could cause an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation which may result in loss of motorcycle control and an accident.



Warning


Throughout this operation, ensure that the motorcycle is stabilised and adequately supported on a paddock stand to prevent risk of injury from the motorcycle falling.

1. Remove the top box as described in its instructions.

Note:

- **Read the warning notices printed on the cleaning wipe packet in the kit.**
- **The surface to which the backrest is affixed must be clean and dry to ensure that the adhesive has a sound base to adhere to. Use the cleaning wipe provided for this purpose.**



2. Using the wipe provided, clean the mounting surface area of the top box.

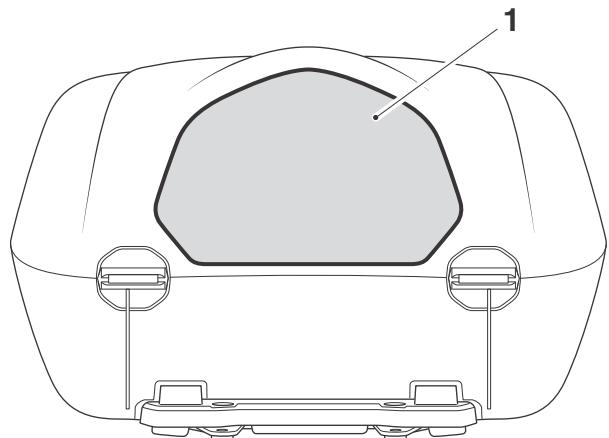

cg0z


1. Cleaned area

3. Cut two pieces of masking tape approximately 15 mm long, using scissors. The ends must be cut square.
4. Mark a straight line on each length of tape at 10 mm, as shown below.

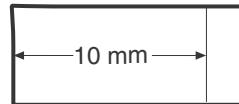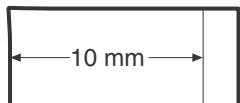

Markings On The Tape

5. Position the two pieces of masking tape onto the top box with the marked line level with the lower edge of the lid as shown below.

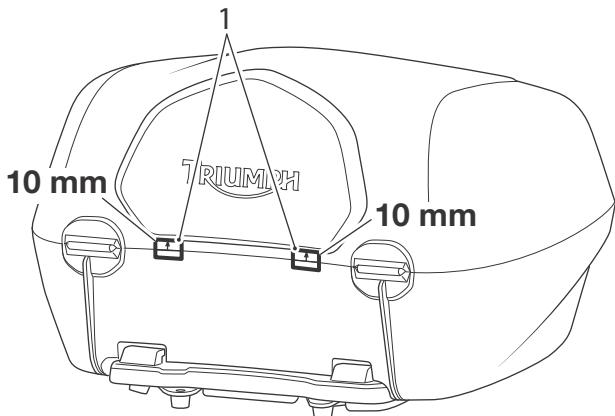

copy

1. Masking tape

6. Before removing the protective film from the backrest, align it centrally between the top box hinges with its bottom edge touching the top edge of the masking tape.
7. Before continuing, ensure that the backrest is a close fit to the top box without any large visible gaps. Adjust the position by ± 2 mm if necessary.



Caution

When fitting self-adhesive parts care must be taken to ensure positioning is correct and accurate. Once the adhesive has been attached to the mounting surface, there is no satisfactory method of removal or repositioning if incorrectly aligned. Initial bonding is instant, full bonding is achieved after 72 hours.

8. Remove the protective film strips from the rear of the backrest and attach the backrest to the top box at the marked positions.
9. Remove the masking tape.



Warning

If, after fitment of this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of control of the motorcycle leading to an accident.



Warning

Never ride an accessory-equipped motorcycle (including those fitted with Triumph approved windscreens and luggage systems) at speeds above 80 mph (130 km/h).

The presence of accessories such as windscreens and luggage systems will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of control or an accident.

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.



Warning

The motorcycle must not be operated above the legal road speed limit except in closed course conditions.



Warning

Only operate this Triumph motorcycle at high speed in close course, on-road competition or on closed course racetracks. High speed operation should only be attempted by riders who have been instructed in the techniques necessary for high speed riding and are familiar with the motorcycle's characteristics in all conditions.

High speed operation in any other circumstances is dangerous and will lead to loss of motorcycle control and an accident.