



Accessory Fitting Instructions

Mobile Phone Holder Kit. 140 mm x 90 mm	
Kit Number	Models Affected
A9510289	Street Twin up to VIN 914972, Street Cup, Street Scrambler up to VIN 910740, Bonneville T100 from VIN 759204, Bonneville T120, Bonneville Bobber, Bonneville Bobber Black, Bonneville Speedmaster from VIN 739143, Tiger Explorer XR from VIN 740277, Tiger Explorer XR _x from VIN 740277, Tiger Explorer XR _T from VIN 740277, Tiger Explorer XC from VIN 740277, Tiger Explorer XC _x from VIN 740277, Tiger Explorer XCA from VIN 740277, Speed Triple S, Speed Triple R from VIN 735337, Tiger XR, Tiger XR _T , Tiger XR _x , Tiger XC, Tiger XCA, Tiger XC _x , Tiger Sport from VIN 750470
Mobile Phone Holder Kit. 160 mm x 100 mm	
Kit Number	Models Affected
A9510290	Street Twin up to VIN 914972, Street Cup, Street Scrambler up to VIN 910740, Bonneville T100 from VIN 759204, Bonneville T120, Bonneville Bobber, Bonneville Bobber Black, Bonneville Speedmaster from VIN 739143, Tiger Explorer XR from VIN 740277, Tiger Explorer XR _x from VIN 740277, Tiger Explorer XR _T from VIN 740277, Tiger Explorer XC from VIN 740277, Tiger Explorer XC _x from VIN 740277, Tiger Explorer XCA from VIN 740277, Speed Triple S, Speed Triple R from VIN 735337, Tiger XR, Tiger XR _T , Tiger XR _x , Tiger XC, Tiger XCA, Tiger XC _x , Tiger Sport from VIN 750470
Mobile Phone Holder Kit. 70 mm x 130 mm	
Kit Number	Models Affected
A9510291	Street Twin up to VIN 914972, Street Cup, Street Scrambler up to VIN 910740, Bonneville T100 from VIN 759204, Bonneville T120, Bonneville Bobber, Bonneville Bobber Black, Bonneville Speedmaster from VIN 739143, Tiger Explorer XR from VIN 740277, Tiger Explorer XR _x from VIN 740277, Tiger Explorer XR _T from VIN 740277, Tiger Explorer XC from VIN 740277, Tiger Explorer XC _x from VIN 740277, Tiger Explorer XCA from VIN 740277, Speed Triple S, Speed Triple R from VIN 735337, Tiger XR, Tiger XR _T , Tiger XR _x , Tiger XC, Tiger XCA, Tiger XC _x , Tiger Sport from VIN 750470

Note:


- The Mobile Phone Holder Kit must not be fitted to a motorcycle when accessory low bars are fitted.
- The Mobile Phone Holder Kit must not be fitted to a motorcycle when a Tank Bag is fitted, with the exception of Tank Bag A9510280 on Tiger Explorer models.
- The Mobile Phone Holder Kit must not be fitted to a motorcycle when GPS Mounting Kit A9828038 is fitted.

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory-equipped motorcycle is subsequently sold.

Parts Supplied

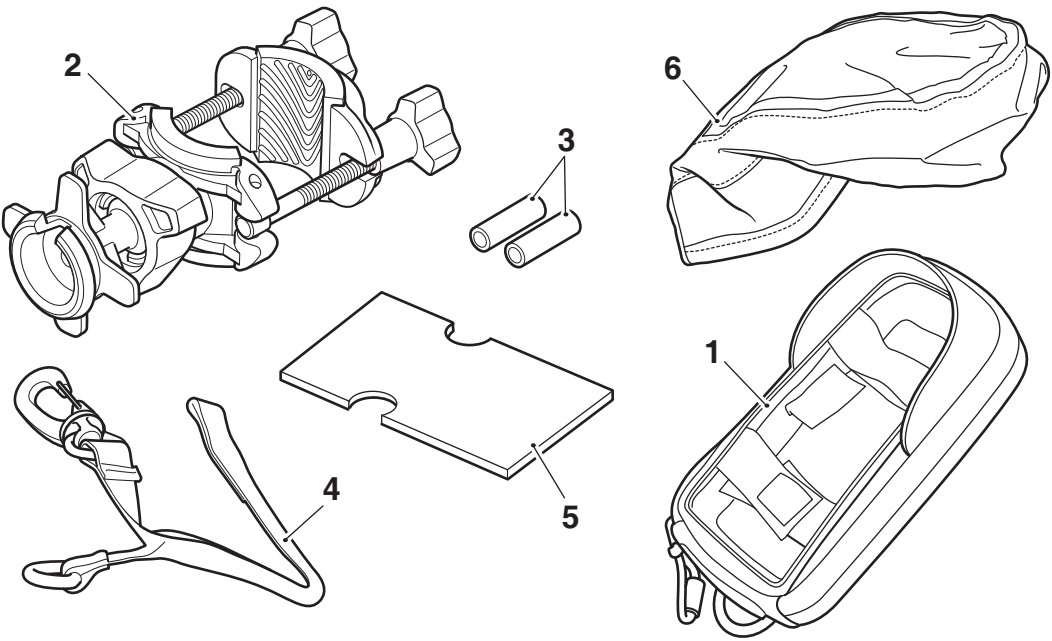

1. Holder, mobile phone	1 off	4. Security strap	1 off
2. Clamp assembly	1 off	5. Packing	1 off
3. Thread protectors	2 off	6. Rain cover	1 off



Warning

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle will affect the performance, stability and handling of the motorcycle. This may affect the rider's ability to control the motorcycle and could cause an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation which may result in loss of motorcycle control and an accident.



Warning

Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.

Note:

- Triumph offers a broad range of approved genuine accessories for your motorcycle. We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit. To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorised Triumph dealer.

Installing the Clamp assembly



Danger

Do not use a mobile phone while you ride.

Do not text while you ride.


Do not attempt to adjust any GPS device while you ride.

Telephone calls, texting or any attempt to use your mobile device for any purpose will distract you, this will cause accidents that can seriously injure or kill riders, passengers, occupants in other vehicles and pedestrians.

Note:

- When installing the clamp assembly it should be fitted directly on to the handlebars. Do not use the rubber strip included in the kit.

- Collect the clamp assembly from the kit. Loosen the plastic nuts sufficiently to allow the clamp to be opened.

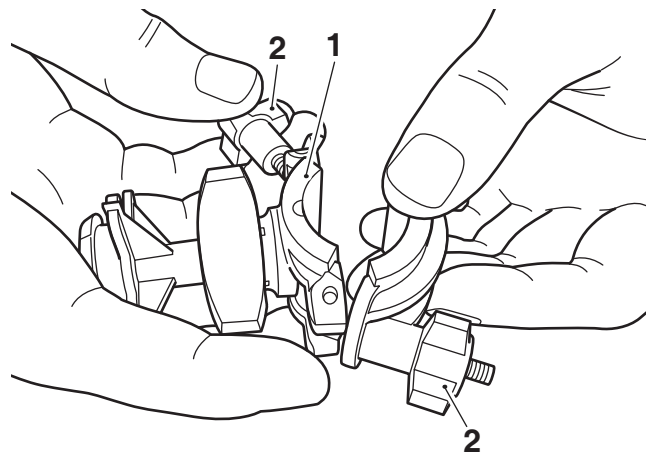

- Clamp assembly
- Plastic nut


**Tiger Explorer XR, Tiger Explorer XRx,
Tiger Explorer XRt, Tiger Explorer XC,
Tiger Explorer XCx, Tiger Explorer XCa**



Caution

A wiring harness which becomes trapped or kinked during installation, or general motorcycle operation, may result in wiring harness damage and electrical malfunctions.


1. Fit the clamp assembly to the handlebars between the handlebar risers as shown. Ensure no cables or wiring harnesses are trapped between the clamp assembly and the handlebars.

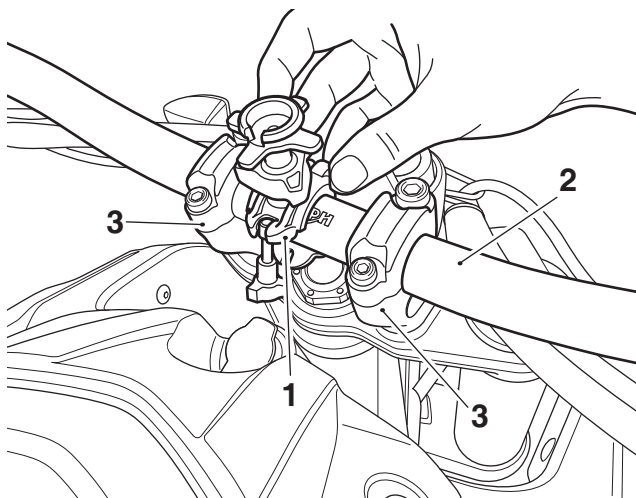

1. Clamp assembly
2. Handlebar
3. Handlebar risers

2. Position the clamp assembly centrally between the handlebar risers in the orientation shown below.

3. Tighten the plastic nuts evenly until the clamp assembly is secured to the handlebars and cannot rotate around the handlebars. Do not fully tighten the plastic nuts at this stage.

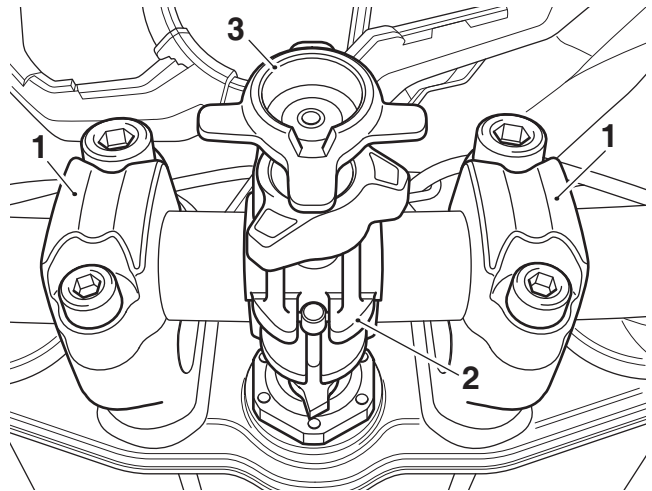

1. Handlebar risers
2. Clamp assembly
3. Adjustable mount

**Tiger XR, Tiger XR_T, Tiger XR_x, Tiger XC,
Tiger XC_A, Tiger XC_x Models**



Warning


The phone holder kit must not be used if a GPS mount is fitted to the motorcycle. If a phone holder kit is used when a GPS mount is fitted it will restrict handlebar movement which may result in loss of motorcycle control and an accident.



Caution

A wiring harness which becomes trapped or kinked during installation, or general motorcycle operation, may result in wiring harness damage and electrical malfunctions.


1. Fit the clamp assembly to the handlebars to the left hand side of the handlebar riser. Ensure no cables or wiring harness are trapped between the clamp assembly and the handlebars.

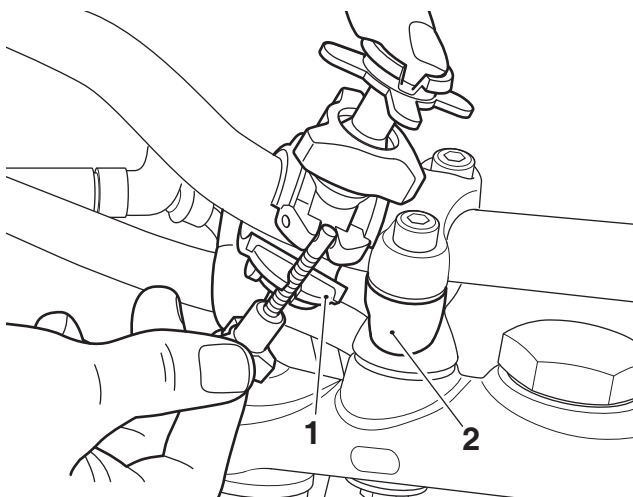

1. Clamp assembly
2. Handlebar risers

2. Position the clamp as close as possible to the bend in the handlebar. The adjustable mount on the clamp is positioned to the front, as shown.

3. Tighten the plastic nuts evenly until the clamp assembly is secured to the handlebars. Do not fully tighten the plastic nuts at this stage.

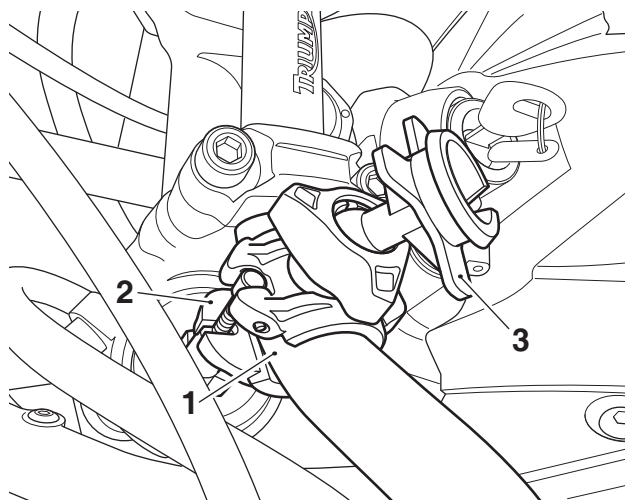

1. Handlebar, left hand side
2. Clamp assembly
3. Adjustable mount


**Street Twin up to VIN 914972, Street Cup,
Street Scrambler up to VIN 910740 without
Handlebar Brace,
Bonneville T100 from VIN 759204,
Bonneville T120, Bonneville Bobber,
Bonneville Bobber Black,
Bonneville Speedmaster from VIN 739143
Models**



Caution

A wiring harness which becomes trapped or kinked during installation, or general motorcycle operation, may result in wiring harness damage and electrical malfunctions.


1. Fit the clamp assembly to the handlebars to the left hand side of the handlebar riser. Ensure no cables or wiring harness are trapped between the clamp assembly and the handlebars.

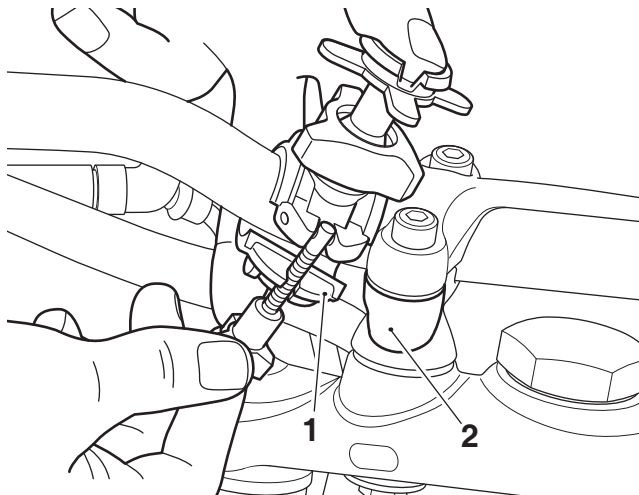

1. Clamp assembly
2. Handlebar riser

2. Position the clamp assembly so that it touches the handlebar clamp and riser, the adjustable mount on the clamp is positioned to the front, as shown.


3. Tighten the plastic nuts evenly until the clamp assembly is secured to the handlebars. Do not fully tighten the plastic nuts at this stage.

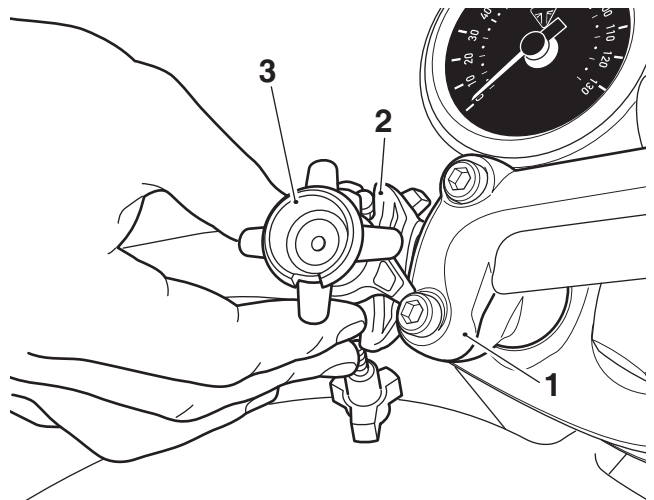

1. Handlebar clamp and riser
2. Clamp assembly
3. Adjustable mount

Street Scrambler with Handlebar Brace

1. Fit the clamp assembly, with the adjustable mount facing the rider, to the left hand side of the handlebars positioned between the clutch lever and handlebar brace clamp, as shown. Ensure no cables or wiring harness are trapped between the clamp assembly and the handlebars.

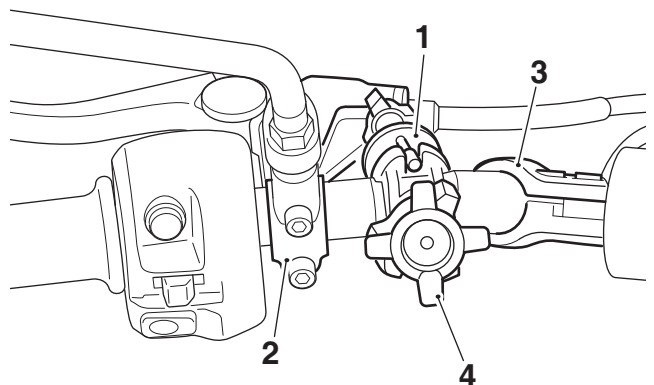

1. Clamp assembly
2. Clutch lever
3. Handlebar brace clamp
4. Adjustable mount

2. Tighten the plastic nuts evenly until the clamp assembly is secured to the handlebars. Do not fully tighten the plastic nuts at this stage.


**Speed Triple S, Speed Triple R Models from
VIN 735337**



Caution


A wiring harness which becomes trapped or kinked during installation, or general motorcycle operation, may result in wiring harness damage and electrical malfunctions.

1. Fit the clamp assembly to the handlebars to the left hand side of the handlebar riser. Ensure no cables or wiring harness are trapped between the clamp assembly and the handlebars.

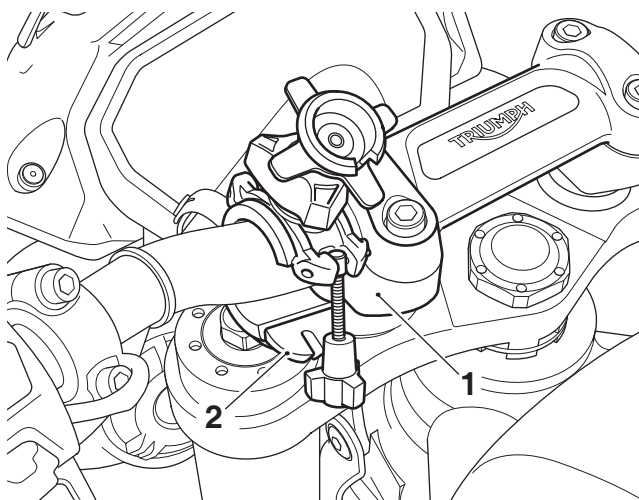

1. Handlebar risers
2. Clamp assembly

2. Position the clamp 10 mm from the left hand handlebar clamp, allowing sufficient clearance to access the adjustment ring, as shown.
3. Tighten the plastic nuts evenly until the clamp assembly is secured to the handlebars. Do not fully tighten the plastic nuts at this stage.

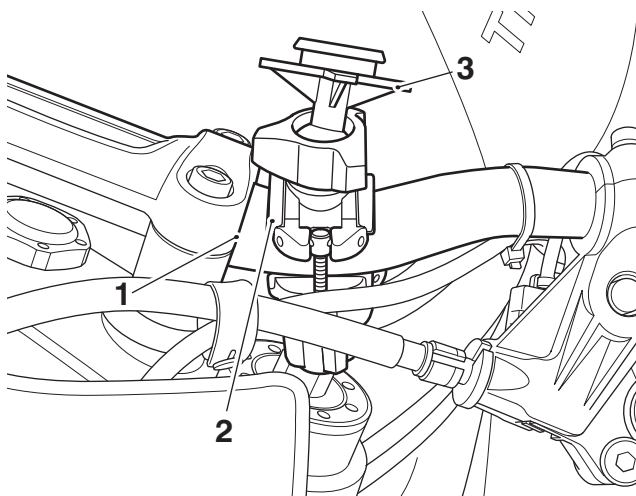

1. Handlebar clamp and riser
2. Clamp assembly
3. Adjustable mount

Tiger Sport



Warning


The phone holder kit must not be used if a GPS mount is fitted to the motorcycle. If a phone holder kit is used when a GPS mount is fitted it will restrict handlebar movement which may result in loss of motorcycle control and an accident.



Caution

A wiring harness which becomes trapped or kinked during installation, or general motorcycle operation, may result in wiring harness damage and electrical malfunctions.


1. Fit the clamp assembly to the handlebars to the right hand side of the left hand mirror clamp. Ensure no cables or wiring harness are trapped between the clamp assembly and the handlebars.

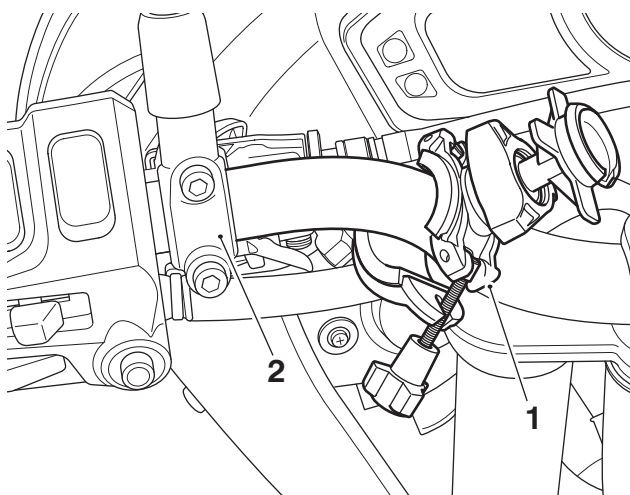

1. Clamp assembly
2. Mirror clamp, left hand side

2. Position the clamp 35 mm from the left hand mirror clamp, as shown.


3. Tighten the plastic nuts evenly until the clamp assembly is secured to the handlebars. Do not fully tighten the plastic nuts at this stage.

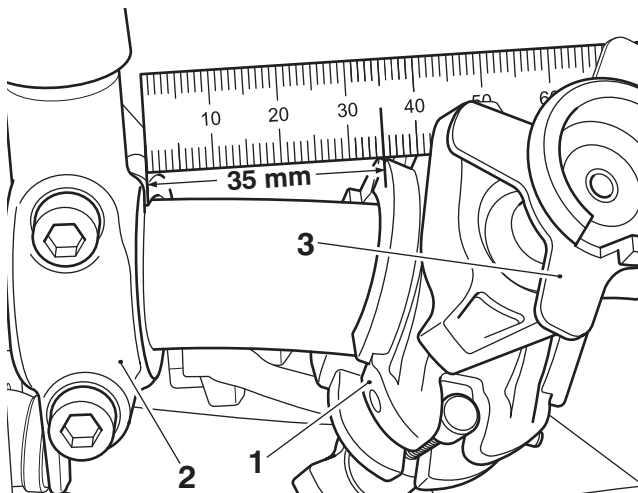

1. Clamp assembly
2. Left hand mirror clamp
3. Adjustable mount

All Models


1. Fit the thread protectors from the kit to the exposed thread sections of the clamp assembly screws, inside the plastic nuts.

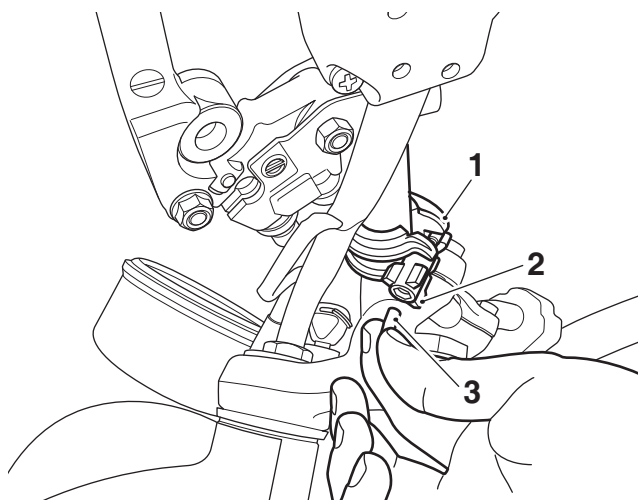

1. Clamp assembly
2. Plastic nut
3. Thread protector


Installing and Removing the Phone Holder

1. Align the peg on the phone holder with the corresponding slot in the phone holder mounting and press the phone holder onto the mounting until a click is heard.

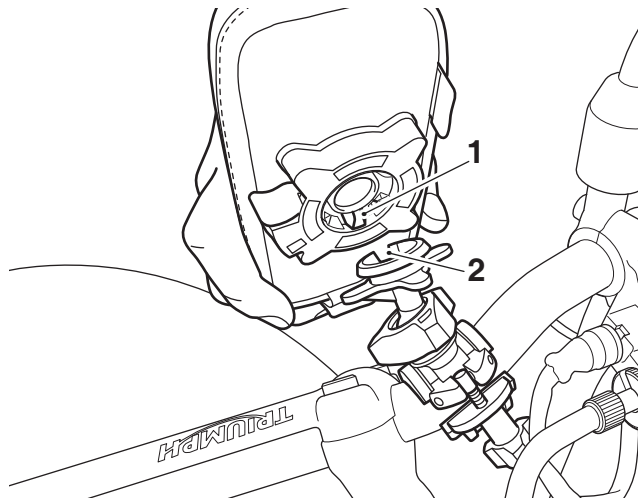


1. Notch, phone holder
2. Slot, phone holder mounting

2. Loosen the phone holder mounting by turning the adjustment ring in an anti-clockwise direction.

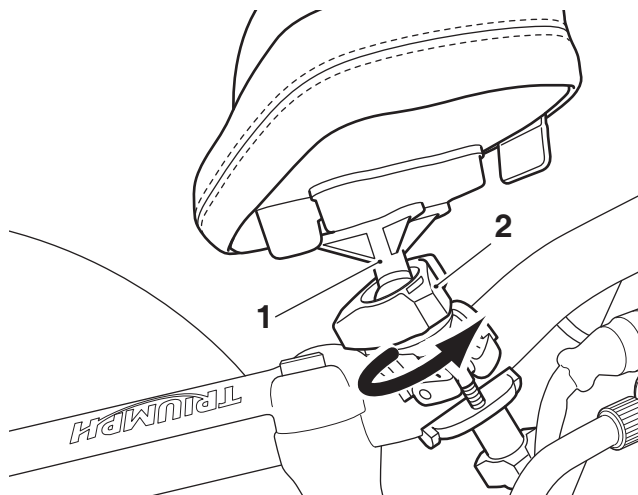


1. Mounting, phone holder
2. Adjustment ring

3. Adjust the phone holder to the desired position. Turn the adjustment ring in a clockwise direction to lock the phone holder in position. If necessary, loosen the plastic clamp nuts and adjust the position of the clamp on the handlebars to achieve the desired position. Tighten the plastic nuts evenly until the clamp assembly is secured to the handlebars and cannot rotate around the handlebars. Do not overtighten the plastic nuts.

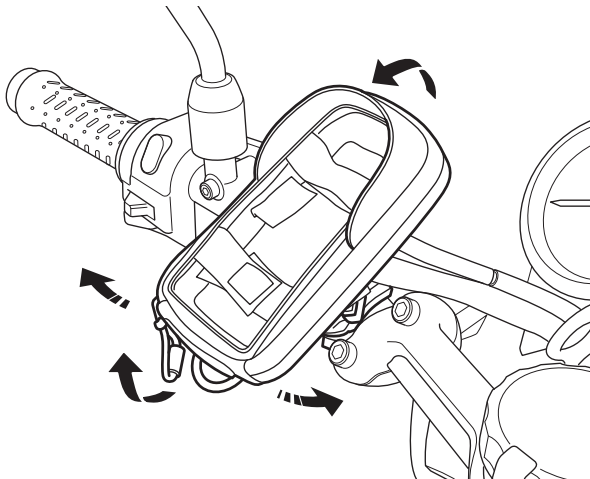


4. Collect the security strap from the kit. Feed the security strap around the handlebars with the retaining clip and D-ring sections of the strap at the top, as shown.

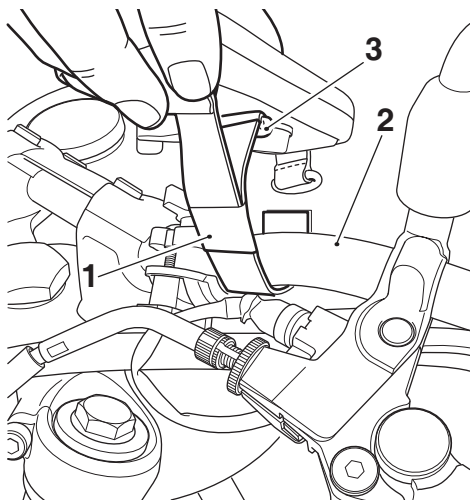


1. Security strap
2. Handlebars
3. D-Ring

5. Feed the plain end of the strap through the D-ring and fold back around the handlebars to attach the hook and loop sections of the straps together. Ensure no cables or wiring harness are trapped between the security strap and the handlebars.

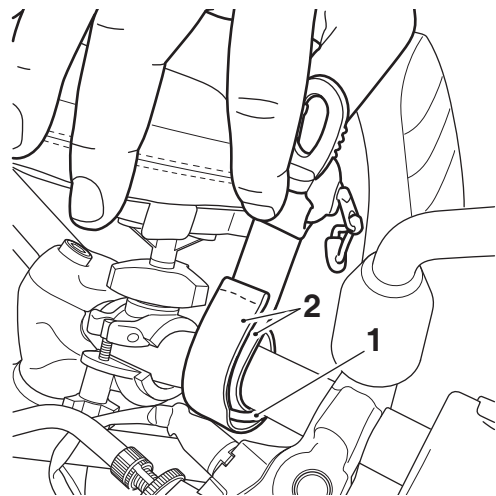

1. D-Ring
2. Straps, hook and loop sections


6. Attach the security strap clip to the D-ring on the phone holder.

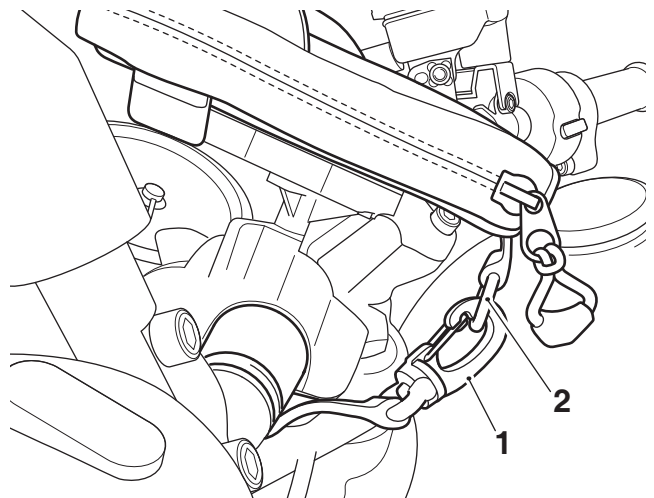

1. Clip, security strap
2. D-ring, phone holder

7. To remove the phone holder first release the security strap from the D-ring on the phone holder.

8. Locate the red release lever on the right hand underside of the phone holder. Press the release lever down and lift the phone holder clear of the mounting.

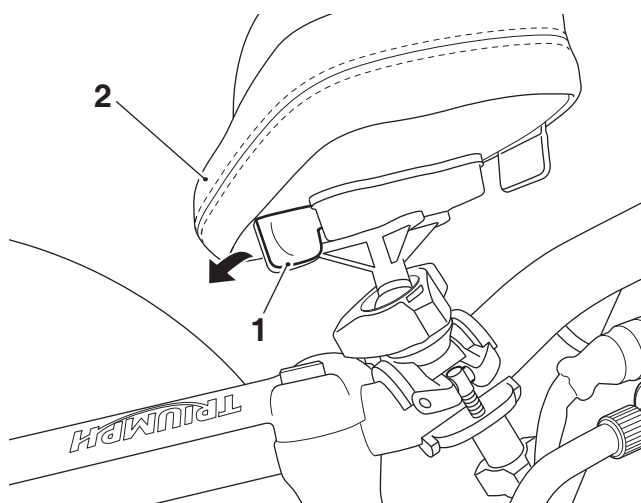

1. Release lever
2. Phone holder



Caution

Move the handlebar to the left and right full lock while checking that the phone holder or phone holder mounting clamp assembly do not contact the fuel tank, or any other part of the motorcycle. This will result in damage to the fuel tank, or other parts of the motorcycle. Adjust the phone holder position as required to ensure the phone holder or phone holder mounting clamp do not contact any part of the motorcycle.



Warning

When mounting a phone holder to the mounting clamp, ensure the view to the instruments is not impaired.

If the view to the instruments is impaired, the rider may not be in full control of the motorcycle which may result in loss of motorcycle control and an accident.



Warning

Move the handlebars to left and right full lock while checking that the phone holder or phone holder mounting clamp do not restrict full lock operation. Any component that will restrict the steering may result in loss of motorcycle control and an accident.

Fitting a Mobile Phone into the Phone Holder



Danger


Do not use a mobile phone while you ride.

Do not text while you ride.

Do not attempt to adjust any GPS device while you ride.


Telephone calls, texting or any attempt to use your mobile device for any purpose will distract you, this will cause accidents that can seriously injure or kill riders, passengers, occupants in other vehicles and pedestrians.

1. Unzip the clear cover on the phone holder and peel back the hook and loop straps, as shown.

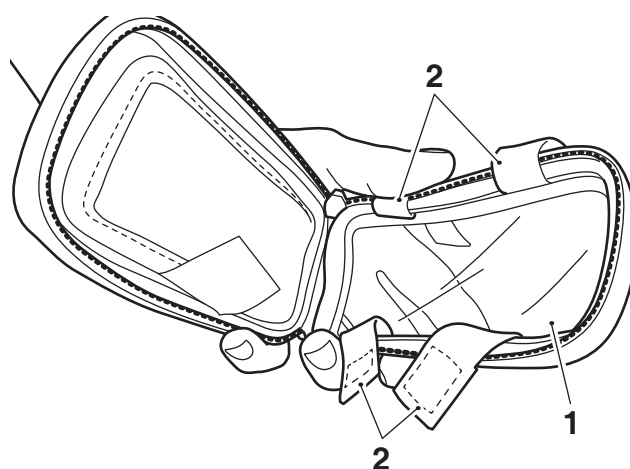

1. Clear cover, phone holder
2. Hook and loop straps


2. Place the mobile phone in the phone holder with the phone screen towards the clear plastic cover and secure in place with the hook and loop straps. If necessary, use the packing from the kit to ensure the mobile phone is correctly held in place.

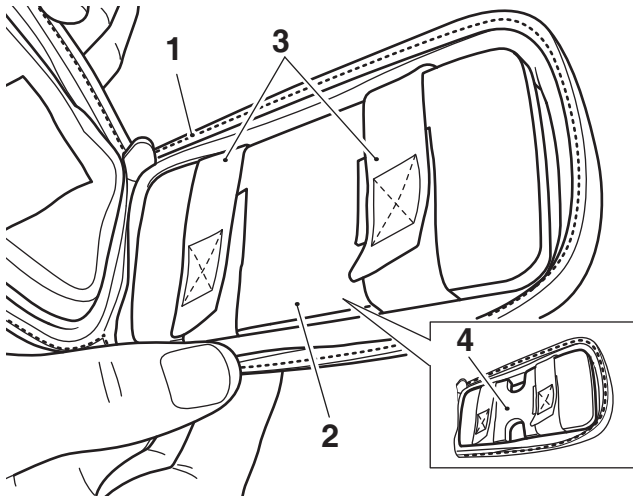


1. Phone holder
2. Mobile phone
3. Hook and loop straps
4. Packing

Installing the Rain Cover

1. Slide the rain cover over the phone holder, as shown.

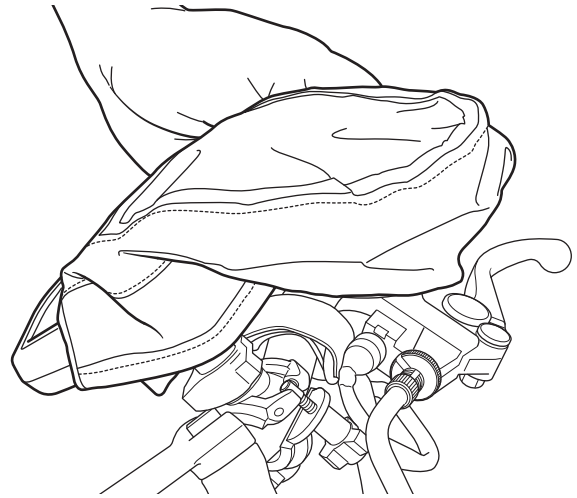

2. Squeeze the flaps on the rain cover together to attach the hook and loop pads and retain the rain cover in position.

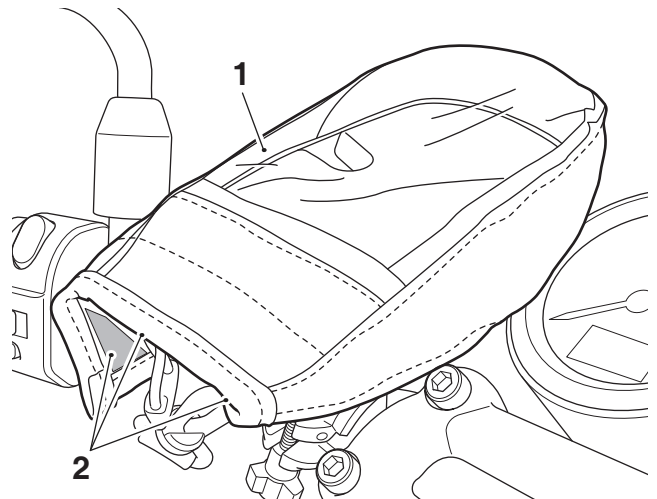

1. Rain cover
2. Hook and loop pads

3. During heavy rain conditions remove the mobile phone from the holder and place it in a suitable IP rated protector. The rain cover is only shower proof.



Warning

When connecting a power harness to the mobile phone holder, ensure the harness is routed correctly and cannot contact any hot surfaces of the motorcycle or interfere with any of the motorcycle controls. Contact with a hot surface may result in wiring harness damage and electrical malfunctions. Any interference with the motorcycle controls may result in loss of motorcycle control and an accident.



Warning

The maximum safe load for the phone holder is 250 grams (9 oz).

Never exceed the safe load limit as this may cause the motorcycle to become unstable resulting in loss of motorcycle control and an accident.



Warning

After fitting the accessory kit the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.



Warning

If, after fitting this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of motorcycle control and an accident.



Warning

Never ride an accessory-equipped motorcycle at speeds above 80 mph (130 km/h).

The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may result in loss of control or an accident.

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.



Warning

The motorcycle must not be operated above the legal road speed limit except in closed-course conditions.



Warning

Only operate this Triumph motorcycle at high speed in closed-course, on-road competition or on closed-course racetracks. High-speed operation should only be attempted by riders who have been instructed in the techniques necessary for high-speed riding and are familiar with the motorcycle's characteristics in all conditions.

High-speed operation in any other circumstances is dangerous and may result in loss of motorcycle control and an accident.