


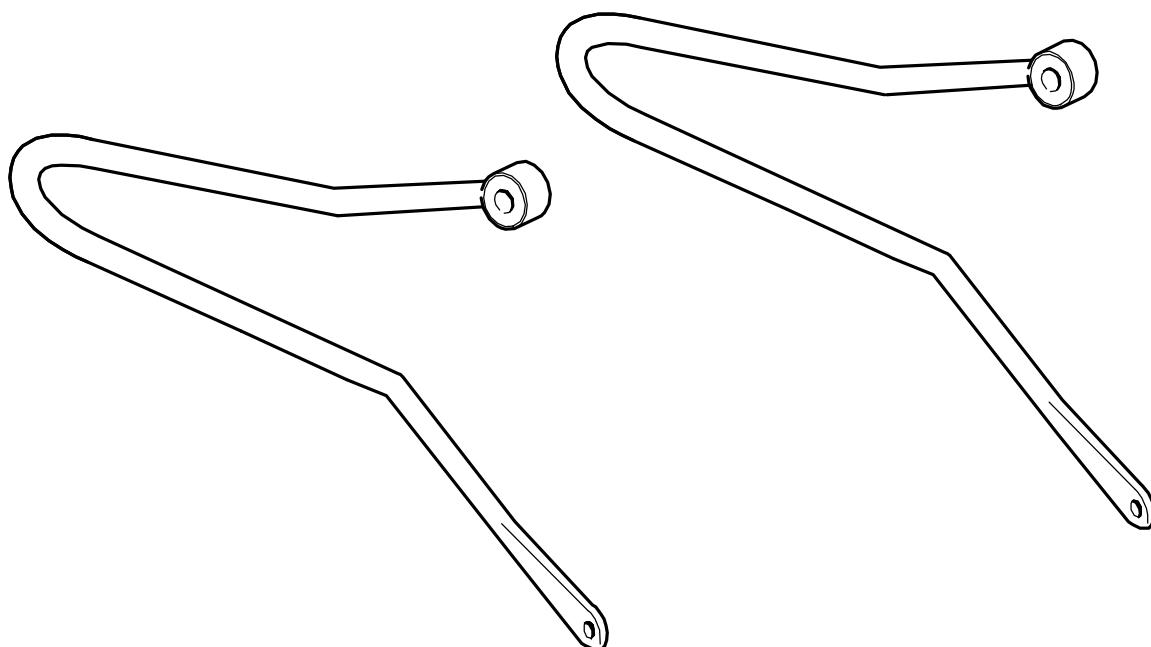

WARNING: Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle operation which may result in an accident causing injury or death.



WARNING: Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent the risk of injury from the motorcycle falling.




WARNING: These rails are designed for use solely on Triumph Bonneville motorcycles and should not be fitted to any other Triumph model or motorcycles from other manufacturers. Fitting this kit to any other Triumph model, or motorcycles from other manufacturers, may interfere with the rider and could affect the stability and handling of the motorcycle leading to an accident causing injury or death.

Instructions part number A9900131 issue 3, ADC 8324


© Triumph Designs 2009

1. Undo the two screws located under the rear of the seat and remove the seat.
2. Slacken and remove the left-hand rear suspension unit upper mounting bolt and washer.
3. Unscrew the nut securing the left-hand passenger footrest to the frame.
4. Fit the left-hand pannier rail, engaging it with the suspension unit upper mounting and footrest.

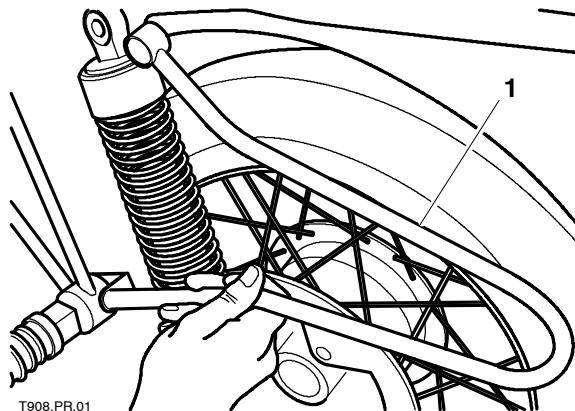

1. Pannier rail

5. Refit the suspension unit upper mounting bolt and washer, tightening it to **27 Nm**.
6. Refit the nut to the footrest and tighten to **27 Nm**.

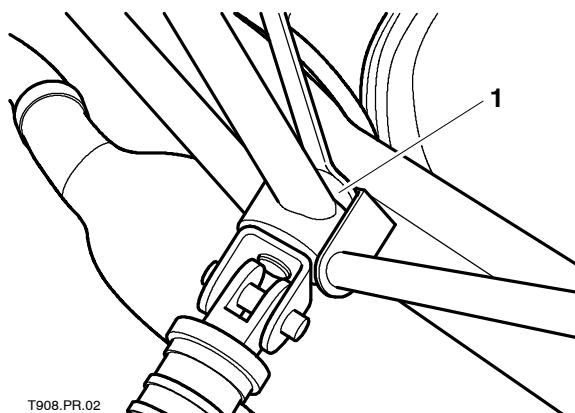

1. Passenger footrest nut

7. Repeat the operations in Steps 2 to 6 on the right-hand side and install the right-hand pannier rail.
8. Refit the seat, tightening its screws to **10 Nm**.