



Accessory Fitting Instructions


Tank Bag, Waxed Cotton, Olive	
Kit number	Models Affected
A9518089	Street Twin, Speed Twin 900, Street Cup, Street Scrambler, Scrambler 900, Speed Twin, Bonneville T100 from VIN 759204, Bonneville T120
Tank Bag, Waxed Cotton, Black	
Kit number	Models Affected
A9518100	Street Twin, Speed Twin 900, Street Cup, Street Scrambler, Scrambler 900, Speed Twin, Bonneville T100 from VIN 759204, Bonneville T120
Tank Bag, Nylon	
Kit number	Models Affected
A9518091	Street Twin, Speed Twin 900, Street Cup, Street Scrambler, Scrambler 900, Speed Twin, Bonneville T100 from VIN 759204, Bonneville T120

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory-equipped motorcycle is subsequently sold.


Parts supplied: A9518089, A9518100

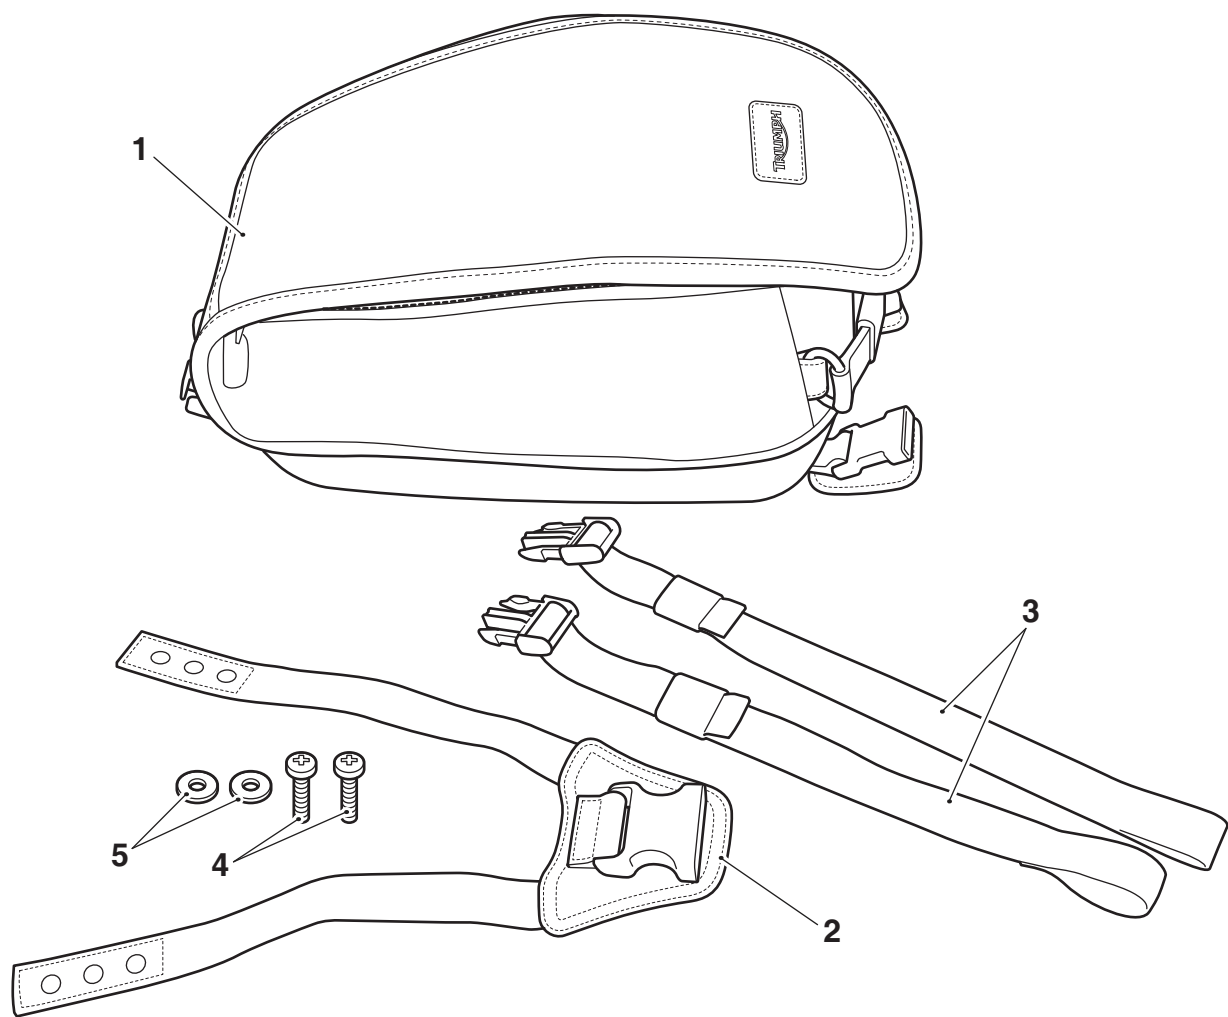

T2120

1.	Tank Bag, Waxed cotton	1 off	4.	Screw, M6 x 20 mm	2 off
2.	Front mounting harness	1 off	5.	Washer, M6	2 off
3.	Rear mounting strap	2 off			

Parts supplied: A9518091

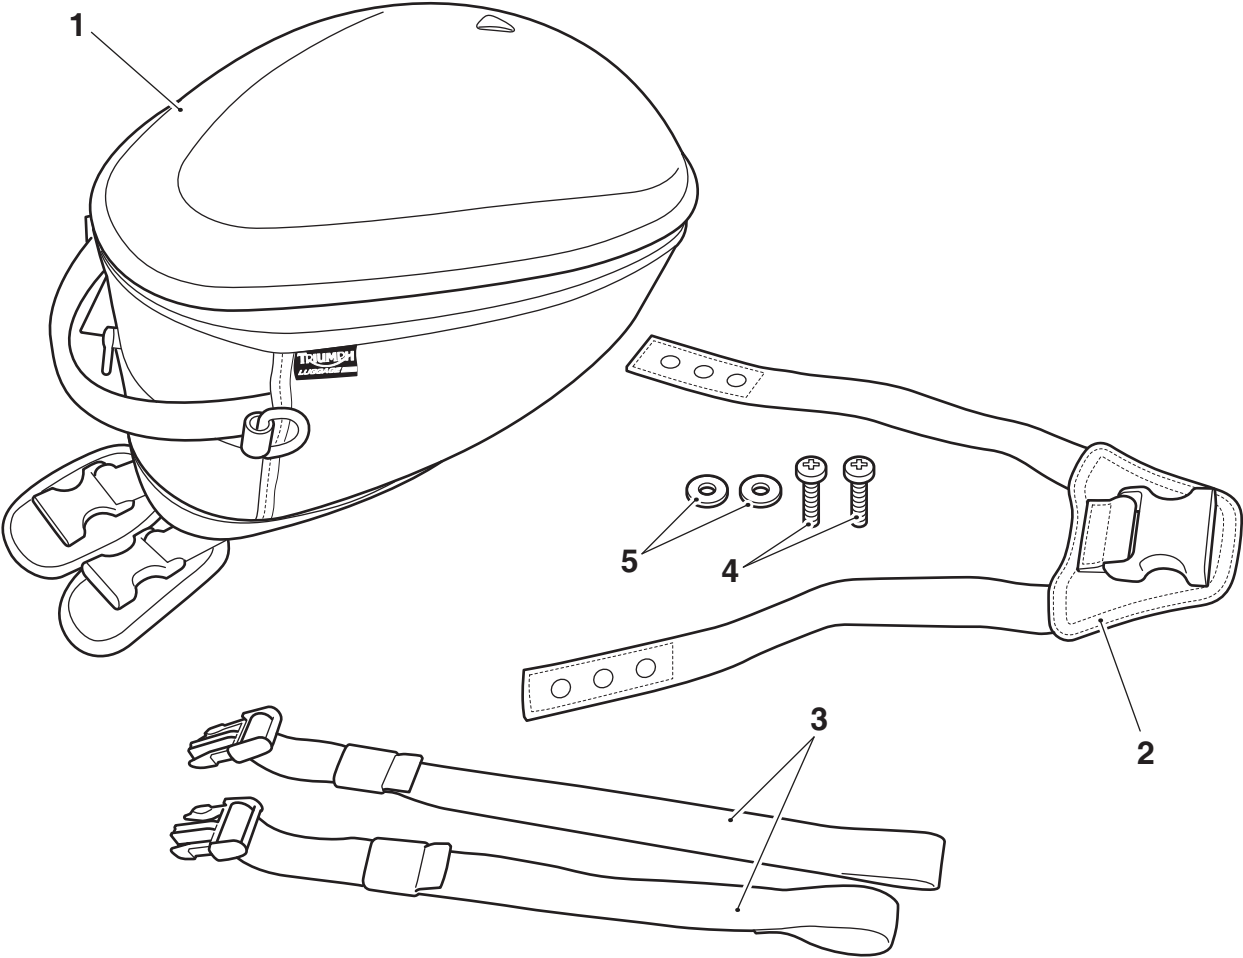

1.	Tank Bag, Nylon	1 off	4.	Screw, M6 x 20 mm	2 off
2.	Front mounting harness	1 off	5.	Washer, M6	2 off
3.	Rear mounting strap	2 off			



Warning

Fit only genuine Triumph accessories to those models approved by Triumph as listed in the associated Triumph fitting instructions. The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should never be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle will affect the performance, stability and handling of the motorcycle. This may affect the rider's ability to control the motorcycle and could result in an accident causing severe injuries or death.

Chrome Line Edition models only



Caution

The use of tank bags, tank-mounted accessories, or abrasive rider clothing may cause damage to the chrome finish and must not be used.

Guidance on cleaning and storage is given in the Owner's Handbook.

All Models



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation which may result in loss of motorcycle control and an accident.



Warning

Throughout this operation, make sure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.



Warning

A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability. This may result in loss of motorcycle control and an accident.

Note:

- Triumph offers a broad range of approved genuine accessories for your motorcycle. We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit. To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorised Triumph dealer.

Note:


- The installation is the same for all tank bag variants for the models listed above. The instructions below show the Waxed Cotton version.

Note:

- This tank bag is not to be used on Chrome Edition models.


Front Mounting Harness Installation

- Position the front mounting harness on the fuel tank in the orientation shown.

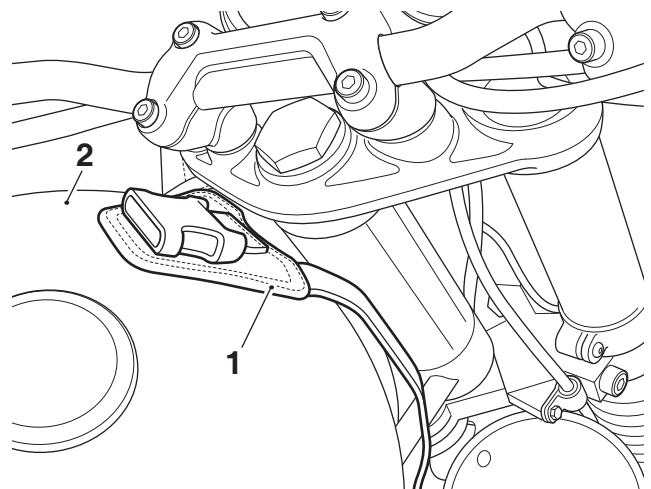

- Front mounting harness
- Fuel tank


2. Feed the front mounting harness straps around the front of the motorcycle frame, over the main harness bundle. Make sure any additional cables or wiring harnesses are not trapped between the straps and the frame.

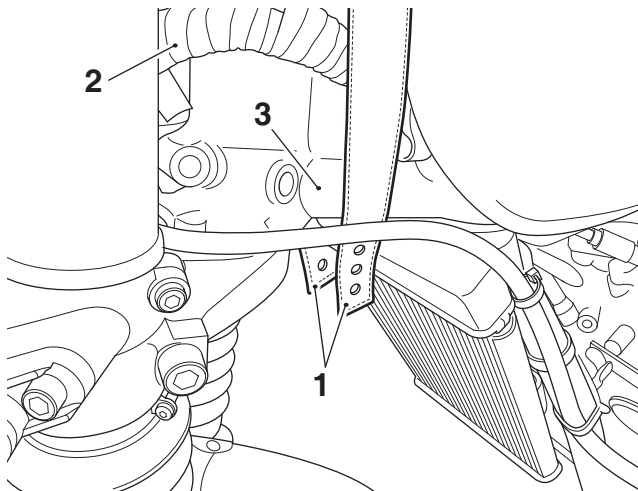

1. Front mounting harness straps
2. Main harness bundle
3. Motorcycle frame


3. Looking from the front underside of the motorcycle, position the left hand harness strap closest to the motorcycle frame, under the right hand harness strap and align the fixing holes to suit the particular motorcycle model, as shown below.

**Street Twin, Speed Twin 900, Street Cup,
Street Scrambler, Scrambler 900**

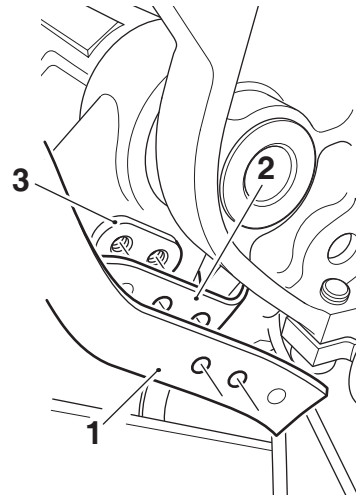


1. Harness strap, right hand
2. Harness strap, left hand
3. Frame fixing holes

**Bonneville T100, Bonneville T120,
Speed Twin**

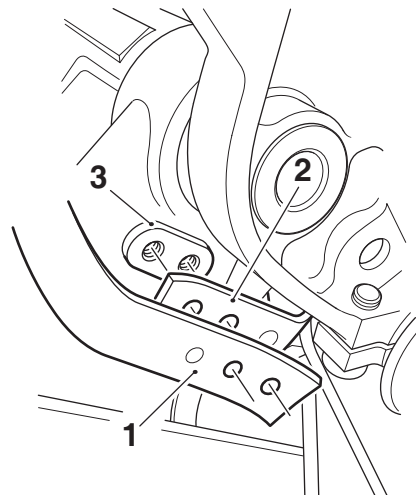

1. Harness strap, right hand
2. Harness strap, left hand
3. Frame fixing holes

4. Secure the front harness mounting straps to the motorcycle frame with the M6 x 20 mm screws and washers from the kit. Tighten the fixings to **8 Nm**.

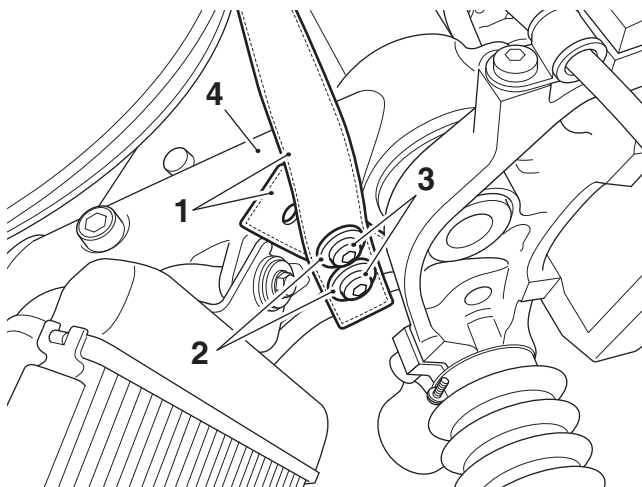


1. Harness straps
2. Washer
3. Screw, M6 x 20 mm
4. Motorcycle frame

Rear Strap Installation

5. Remove the seat, as described in the Owner's Handbook.
6. Remove the left and right hand side panels, as described in the Service Manual.


Street Twin, Speed Twin 900, Street Cup, Street Scrambler, Scrambler 900, Bonneville T100 from VIN 759204 and Bonneville T120 Models

7. Take one of the rear mounting straps from the kit and feed the loop end of the strap under the frame on the right hand side of the motorcycle, as shown. Make sure the strap is tight to the frame and does not trap any pipework or wiring harnesses.

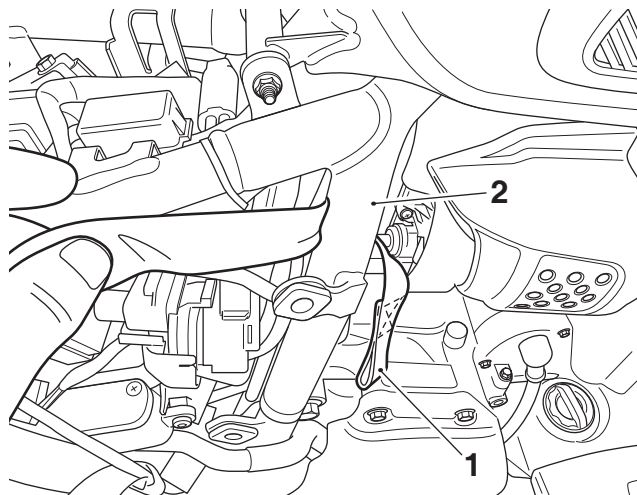

1. Loop, rear mounting strap
2. Motorcycle frame

8. Pass the other end of the harness, with clip, through the loop and pull tight to secure the harness to the motorcycle frame.

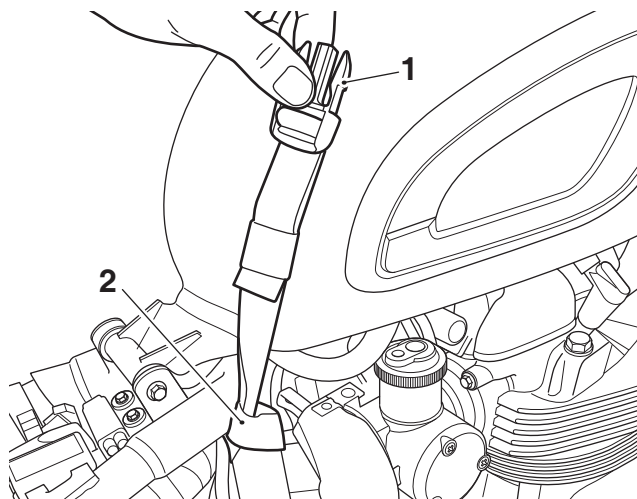


1. Clip
2. Loop

9. Repeat steps 7 and 8 for the second rear mounting strap, on the left hand side of the motorcycle.


Speed Twin Models

10. Take one of the rear mounting straps from the kit and feed the loop end of the strap under the frame on the right hand side of the motorcycle, as shown. Make sure the strap is tight to the frame and does not trap any pipework or wiring harnesses.

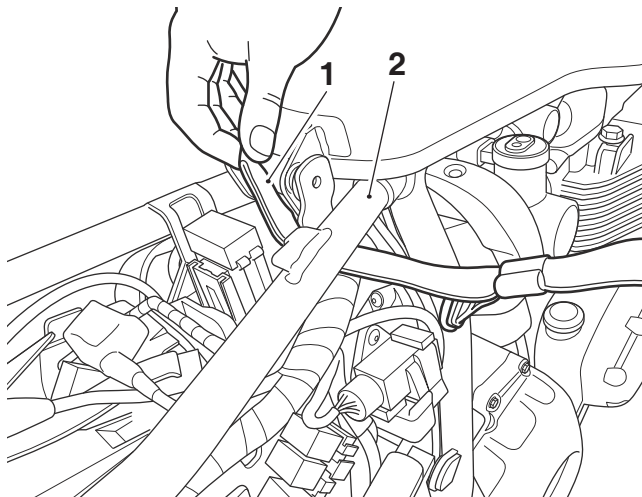

1. Loop, rear mounting strap
2. Motorcycle frame

11. Pass the end of the harness, with clip, through the loop at the other end of the harness and pull tight to secure the harness to the motorcycle frame.

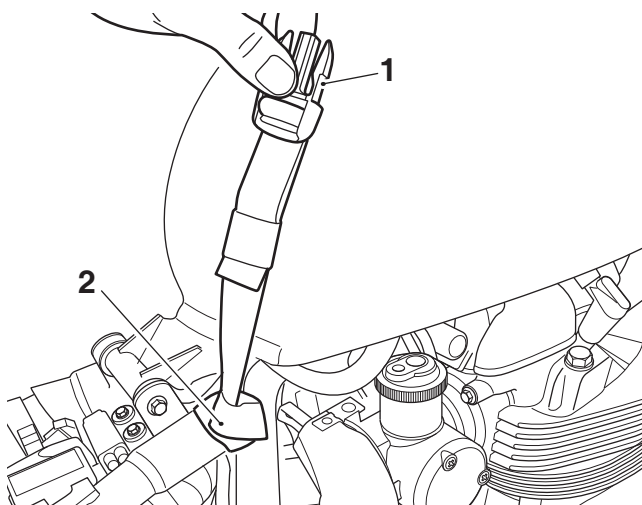

1. Clip
2. Loop

12. Repeat steps 10 and 11 for the second rear mounting strap, on the left hand side of the motorcycle.

All Models


13. Refit the left and right hand side panels, as described in the Service Manual.
14. Refit the seat, as described in the Owner's Handbook.

Installing the Tank Bag

Note:


- **Make sure the underside of the tank bag is clean and dry prior to fitting.**

15. Position the tank bag on the fuel tank and attach the retaining clip at the front of the tank bag to the front mounting harness clip.

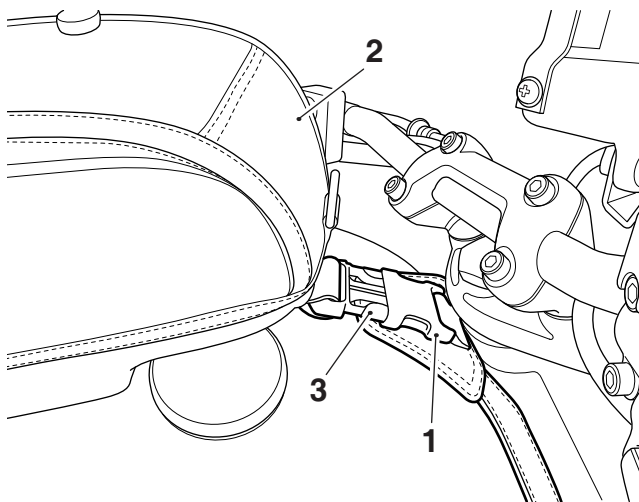

1. Front mounting harness clip
2. Tank bag
3. Tank bag clip


16. Attach the clips on the rear of the tank bag to the clips on the rear straps.

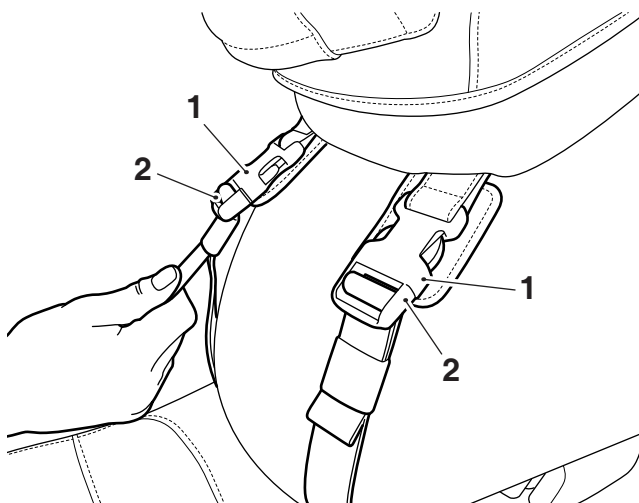

1. Tank bag clip
2. Rear strap clips

17. Adjust the rear straps to make sure the tank bag is held securely on the fuel tank.
18. Check there is no significant side to side, or upwards movement of the tank bag. It should not be possible to lift the tank bag away from fuel tank when the tank bag rear straps are adjusted correctly. If necessary re-adjust the tank bag rear straps.


19. If riding without the tank bag, remove the seat, as described in the Owner's Handbook, and store the rear straps in the area below the seat. Make sure the rear straps do not interfere with the seat's front mounting.

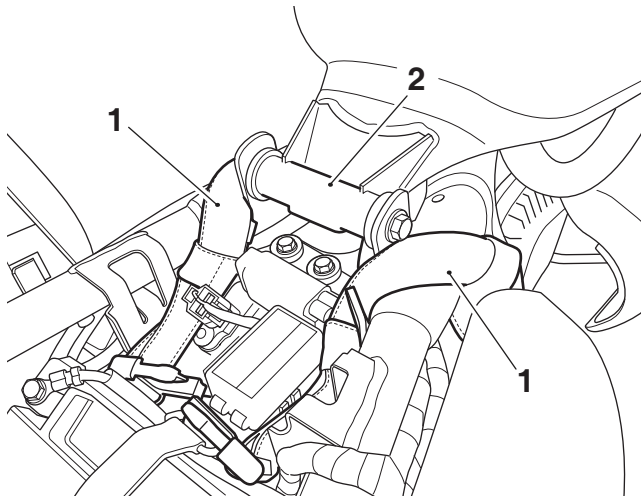

1. Rear straps
2. Seat's front mounting


Installing the Map Pocket

20. Position the map pocket centrally on the tank bag with the single fixing strap at the front.
21. Loop the clip of the front strap on the map pocket through the D-ring on the tank bag and attach to the D-ring on the map pocket, as shown.

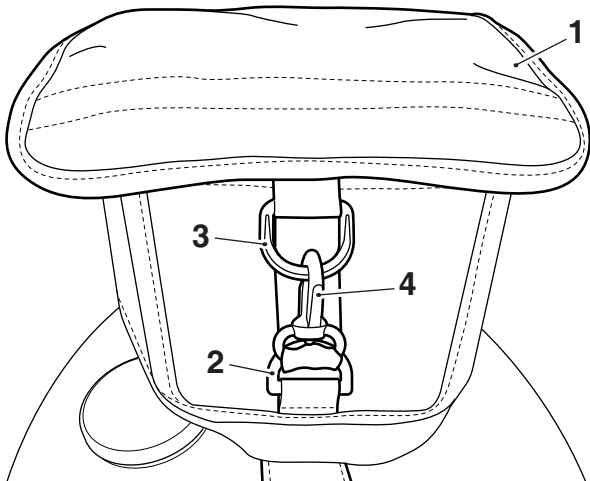

1. Map pocket
2. D-ring, tank bag
3. D-ring, map pocket
4. Clip


22. Attach the left and right hand rear map pocket fixing clips to the rings provided on the tank bag.

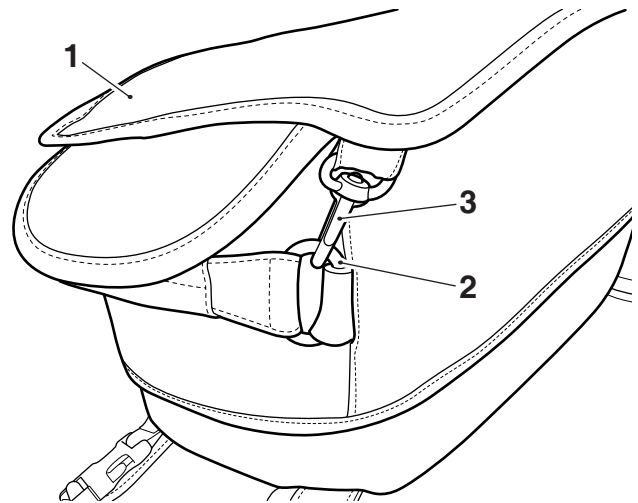

1. Map pocket
2. Ring, tank bag
3. Clip, right hand shown

Installing the Rain Cover

23. Position the rain cover over the tank bag, as shown below.

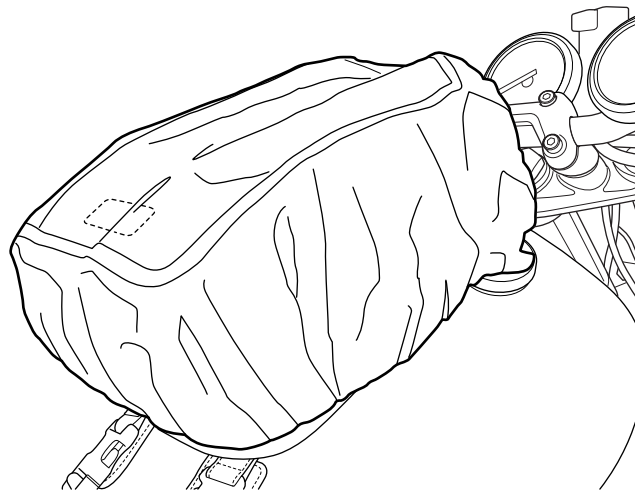

Care of Tank Bag



Caution

Use of chemicals or high-pressure spray washers is not recommended for cleaning the tank bag. Using chemicals or pressure washers may damage the tank bag.

Note:

- **Placing light coloured clothing or other items next to a waxed cotton tank bag may allow the wax to bleed, causing stains or marks.**
- **Waxed cotton tank bags are constructed from natural materials therefore scratches and scuffs will develop naturally, enhancing the appearance of the tank bag.**

To maintain the appearance of your product, we recommend that you periodically clean the tank bag. Your Triumph waxed cotton tank bag is a natural product and a lack of care can result in damage and permanent wear.

Cleaning Instructions

Frequent, regular cleaning is an essential part of the maintenance of your tank bag. If regularly cleaned, the appearance will be preserved for many years. Cleaning with cold water and a sponge is essential at all times but particularly so after exposure to sea breezes, sea water, dusty or muddy roads and in winter when roads are treated for ice and snow. A brush can be used to remove dirt or grit in extreme circumstances.

Do not use hot water or household detergent, as the use of such products will lead to premature deterioration.

Follow these simple instructions below to maintain the look of the tank bag:

- Do not use household cleaning products, bleach, detergents containing bleach or any kind of solvent to clean the tank bag; use a damp sponge only.
- Do not immerse the tank bag in water.
- Do not store items such as damp or wet clothing inside the tank bag as this can cause damage to the waxed cotton or the stored items.
- Avoid direct heat from fires and radiators which can dry out and distort the waxed cotton.
- Avoid direct sunlight for extended periods which can dry out and discolour the waxed cotton.

- Do not dry the tank bag by applying direct heat to it at any time.
- If the tank bag does get wet, absorb any excess water with a soft clean cloth then leave the product to dry naturally at room temperature.
- Avoid exposing the tank bag to high levels of salt, for example sea/salt water or road surfaces that have been treated during the winter for ice and snow.
- If exposure to salt is unavoidable, clean your product immediately after each exposure using a damp sponge then leave the product to dry naturally at room temperature.
- Allow mud to dry before wiping off. Use a soft cloth to remove the mud then leave them to dry naturally at room temperature.
- Gently clean any minor marks with a damp sponge then leave them to dry naturally at room temperature.
- Place the product into a fabric bag or cardboard box to protect them when in storage. Do not put the tank bag into a plastic bag.



Warning

The maximum safe load for the tank bag is 3 kg (6.6 lbs). Never exceed this loading limit as this may cause the motorcycle to become unstable leading to loss of control and an accident.



Warning

After fitting the accessory kit the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.



Warning

If, after fitting this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of motorcycle control and an accident.



Warning

Never ride an accessory-equipped motorcycle at speeds above 80 mph (130 km/h).

The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may result in loss of motorcycle control and an accident.

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.



Warning

The motorcycle must not be operated above the legal road speed limit except in closed-course conditions.



Warning

Only operate this Triumph motorcycle at high speed in closed-course, on-road competition or on closed-course racetracks. High-speed operation should only be attempted by riders who have been instructed in the techniques necessary for high-speed riding and are familiar with the motorcycle's characteristics in all conditions.

High-speed operation in any other circumstances is dangerous and may result in loss of motorcycle control and an accident.