

English

Fitting Instructions:


Daytona 675

A9640031 and A9640032

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory-equipped motorcycle is subsequently sold.

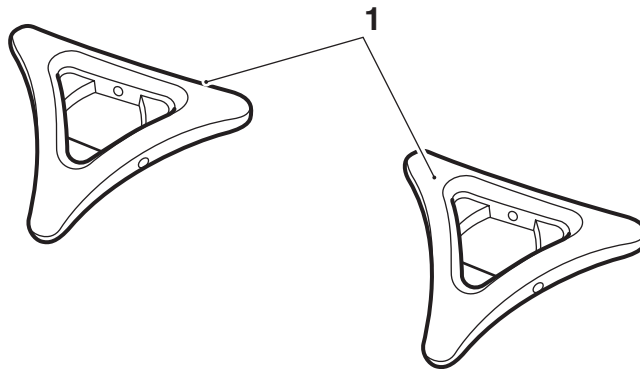

Parts Supplied:

- | | |
|-----------|-------|
| 1. Handle | 2 off |
|-----------|-------|



Warning

This accessory kit is designed for use on Triumph Daytona 675 motorcycles only and should not be fitted to any other manufacturer's motorcycle. Fitting this accessory kit to any other manufacturer's motorcycle will affect the performance, stability and handling of the motorcycle. This may affect the rider's ability to control the motorcycle and could cause an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation which may result in loss of motorcycle control and an accident.



Warning


Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.




Warning

A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability. This may result in loss of motorcycle control and an accident.

1. Prior to fitting the handle, clean the surface of the spring pre-load adjuster.

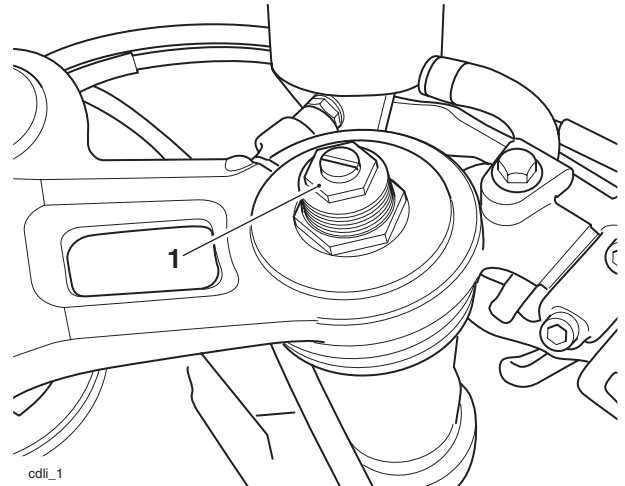

1. **Spring pre-load adjuster (right hand side shown)**
2. Fit the handle to the spring pre-load adjuster and tighten the three grub screws to **0.5 Nm**.

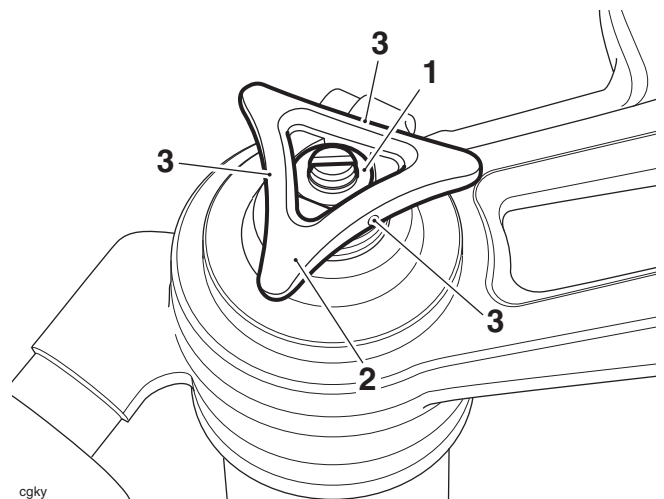

1. **Spring pre-load adjuster (left hand side shown)**
2. **Handle**
3. **Grub screws**
3. Repeat steps 1 and 2 for the other side.
4. For the adjustment of the spring pre-load for the front forks, refer to the owner's handbook.



Warning

After fitting the accessory kit and adjusting the spring pre-load, the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.