


Fitting Instructions:
Speed Triple from VIN 461332, Speed Triple S, Speed Triple R,
Speed Triple RS
A9640085 and A9640086

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory-equipped motorcycle is subsequently sold.

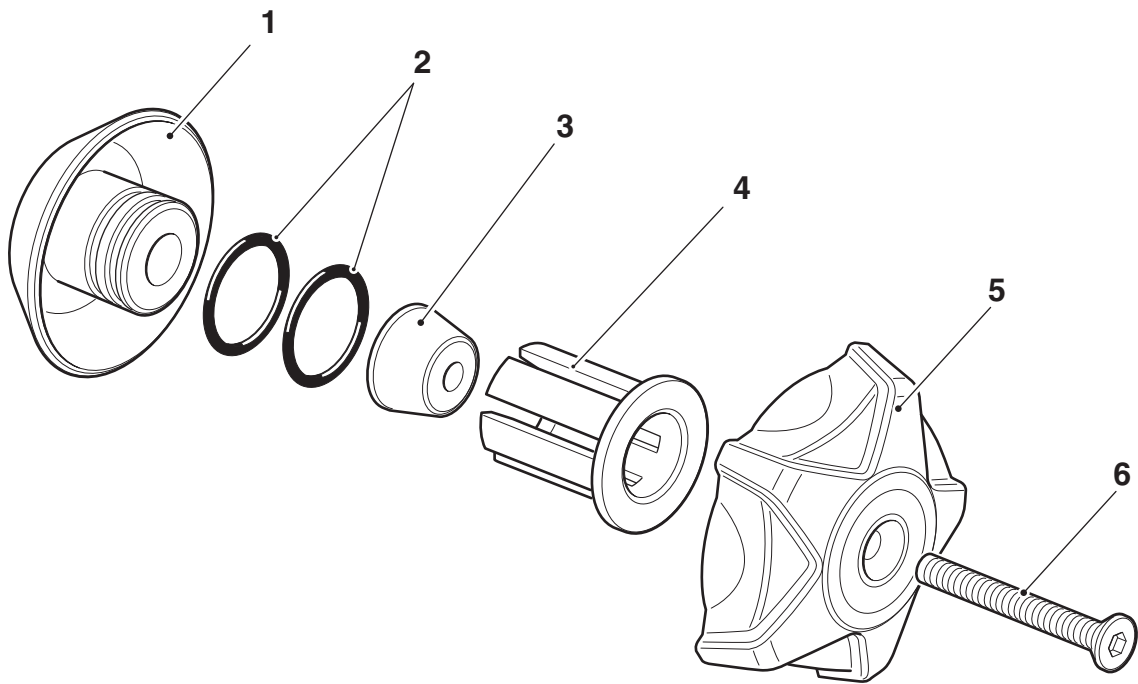

T1054

Parts Supplied:

1.	Axle nut finisher, left hand	1 off	4.	Collar	1 off
2.	O-ring	2 off	5.	Axle nut finisher, right hand	1 off
3.	Tapered nut	1 off	6.	Screw, M6 x 60 mm	1 off



Warning

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle will affect the performance, stability and handling of the motorcycle. This may affect the rider's ability to control the motorcycle and may result in loss of motorcycle control and an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation, which may result in loss of motorcycle control and an accident.



Warning


Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.



Warning

A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may result in loss of motorcycle control and an accident.


1. Clean the mounting surfaces on both sides of the rear axle.
2. Fit the left hand axle nut finisher to the left hand side of the rear axle.

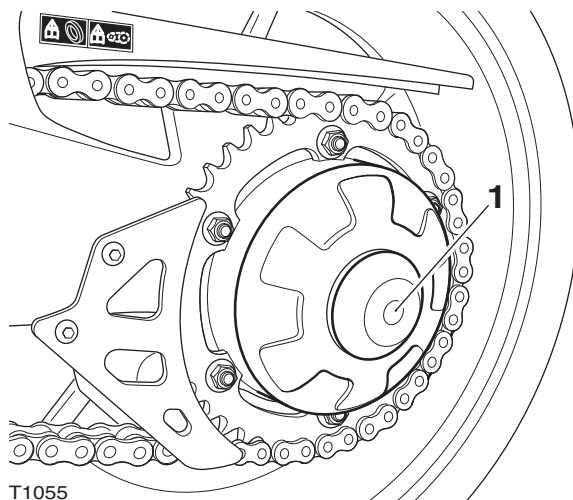

T1055

1. Axle nut finisher, left hand


3. Fit the tapered nut into the collar with the narrow end of the taper going into the collar.

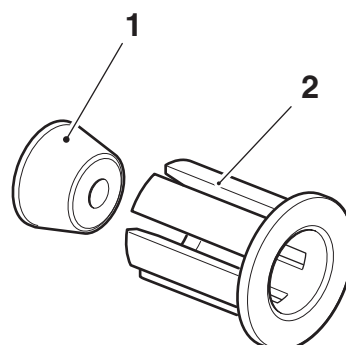

1. Tapered nut

2. Collar



4. Insert the M6 screw into the right hand axle nut finisher. Align the finisher and screw assembly to the collar and tapered nut assembly such that the M6 screw goes through the collar and is started into the threaded hole of the tapered nut.

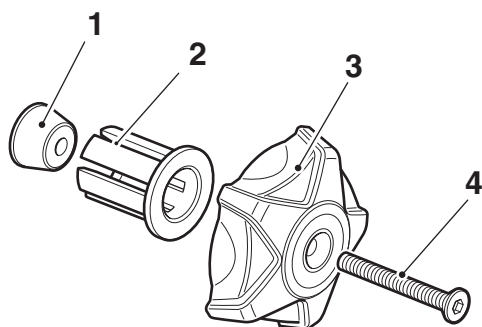

- 1. Tapered nut**
2. Collar
3. Axle nut finisher, right hand
4. Screw, M6 x 60 mm

5. Fit the right hand finisher assembly into the right hand side of the rear axle. If necessary, loosen the M6 screw slightly from the tapered nut to reduce the diameter size of the collar.

6. Align the right hand axle nut finisher to the rear wheel features as shown below and tighten the screw to **9 Nm**.

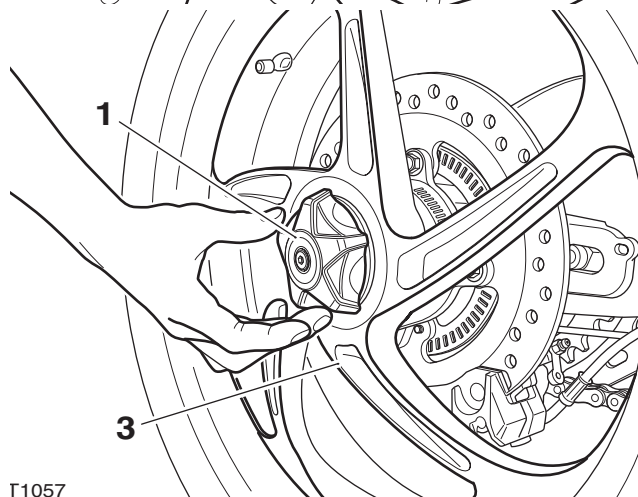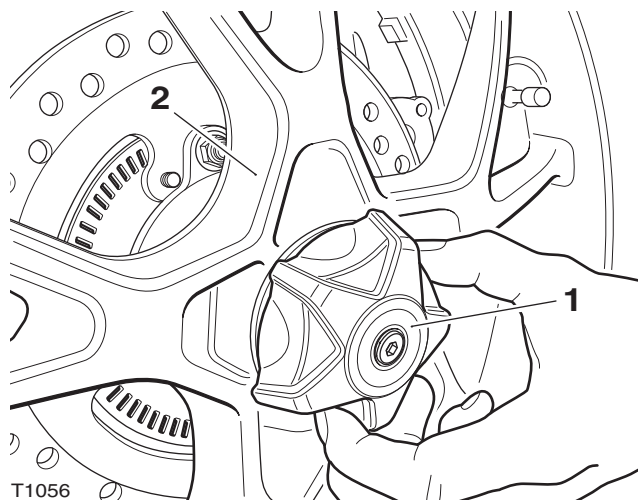

- 1. Axle nut finisher, right hand**
2. Wheel, Speed Triple models from VIN 416332 to 858022
3. Wheel, Speed Triple models from VIN 867601



Warning

If, after fitment of this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of control of the motorcycle, leading to an accident.