

## Accessory Fitting Instructions

### Swinging Arm Protector Kit


Kit Number	Models Affected
A9640188	Street Triple S, Street Triple S 660cc, Street Triple R from VIN 793032, Street Triple R LRH (Low Ride Height), Street Triple RS, Street Triple RS Moto2™

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

#### Parts supplied

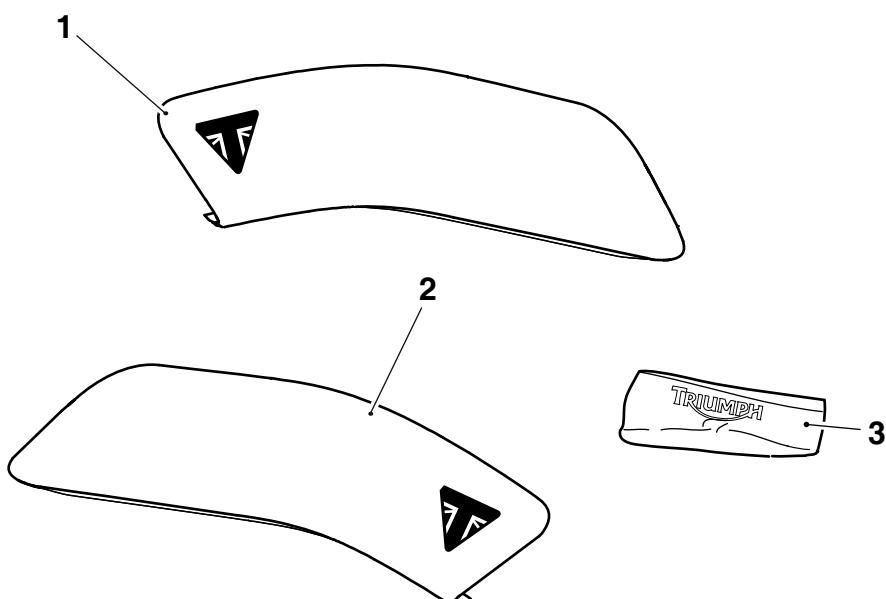

1. Swinging arm protector, left hand	1 off	3. Cleaning wipe	1 off
2. Swinging arm protector, right hand	1 off		



## Warning

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle will affect the performance, stability and handling of the motorcycle. This may result in loss of motorcycle control and an accident.



## Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation which may result in loss of motorcycle control and an accident.



## Warning

Make sure the motorcycle is stabilised and adequately supported. Do not support the motorcycle on any ancillary component, the exhaust system or any other non structural parts of the motorcycle frame. A correctly supported motorcycle will help prevent it from falling. An unstable motorcycle may fall, causing injury to the operator or damage to the motorcycle.

### Note:

- Triumph offers a broad range of approved genuine accessories for your motorcycle. We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit. To obtain additional copies of any Triumph accessory instructions, visit [www.triumphinstructions.com](http://www.triumphinstructions.com) or contact your authorised Triumph dealer.



## Caution

Before using any degreasing or cleaning agents, always test a small area of paintwork first, especially if applying to fresh paintwork.


1. Clean the swinging arm thoroughly by using a suitable degreasing or cleaning agent to remove any debris, grease or polish from the painted surface. Allow the swinging arm to dry completely before proceeding.

### Note:

- Read the warning notices printed on the cleaning wipe packet in the fitting kit.
- 2. Using the cleaning wipe provided clean the mounting surfaces of the swinging arm.


### Note:

- The swinging arm protectors are supplied with pre-applied adhesive tape, as shown below.

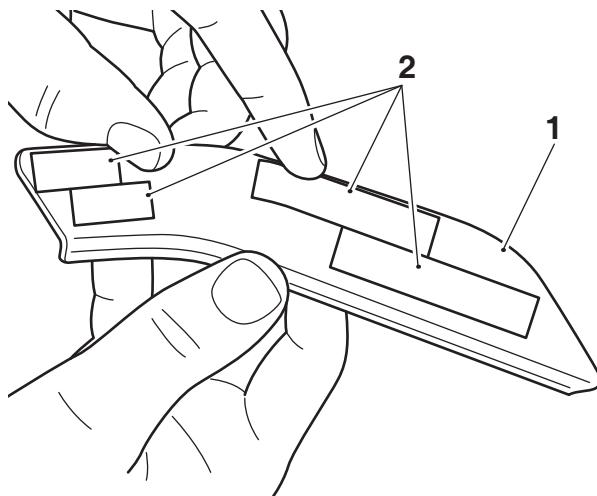

1. Protector, left hand  
2. Adhesive tape

3. Align the right hand protector to the right hand side of the swinging arm, such that it fits correctly to its contours. Mark the position of the protector edges using suitable adhesive masking tape (not supplied in the kit).

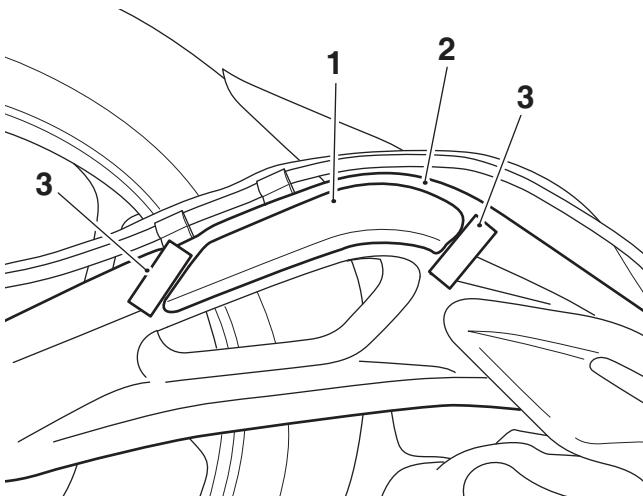

1. Protector
2. Swinging arm
3. Masking tape

4. Remove the backing strips from the adhesive tape.



### Caution

When fitting self adhesive parts care must be taken to ensure positioning is correct and accurate. Once the adhesive has been attached to the mounting surface, there is no satisfactory method of removal and re-positioning if incorrectly aligned. Initial bonding is instant, full bonding is achieved after 72 hours.

5. Carefully locate the right hand protector to the swinging arm to the previously marked position. Apply firm and even pressure to the entire protector to ensure a good bond is achieved.
6. Remove the masking tape from the swinging arm.
7. Repeat steps 3 to 6 for the left hand protector.



### Warning

After fitting the accessory kit the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.



### Warning

Never ride an accessory equipped motorcycle (including those fitted with Triumph approved windscreens and luggage systems) at speeds above 80 mph (130 km/h).

The presence of accessories such as windscreens and luggage systems will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may result in loss of motorcycle control and an accident.

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.



### Warning

This motorcycle must not be operated above the legal road speed limit except in authorised closed-course conditions.



### Warning

Only operate this Triumph motorcycle at high speed in closed-course, on-road competition or on closed-course racetracks. High-speed operation should only be attempted by riders who have been instructed in the techniques necessary for high-speed riding and are familiar with the motorcycle's characteristics in all conditions.

High-speed operation in any other circumstances is dangerous and may result in loss of motorcycle control and an accident.