



Accessory Fitting Instructions

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.


Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

Decal Kits	
Kit Number	Models
A9700933	TF250-X

Parts supplied

A9700933

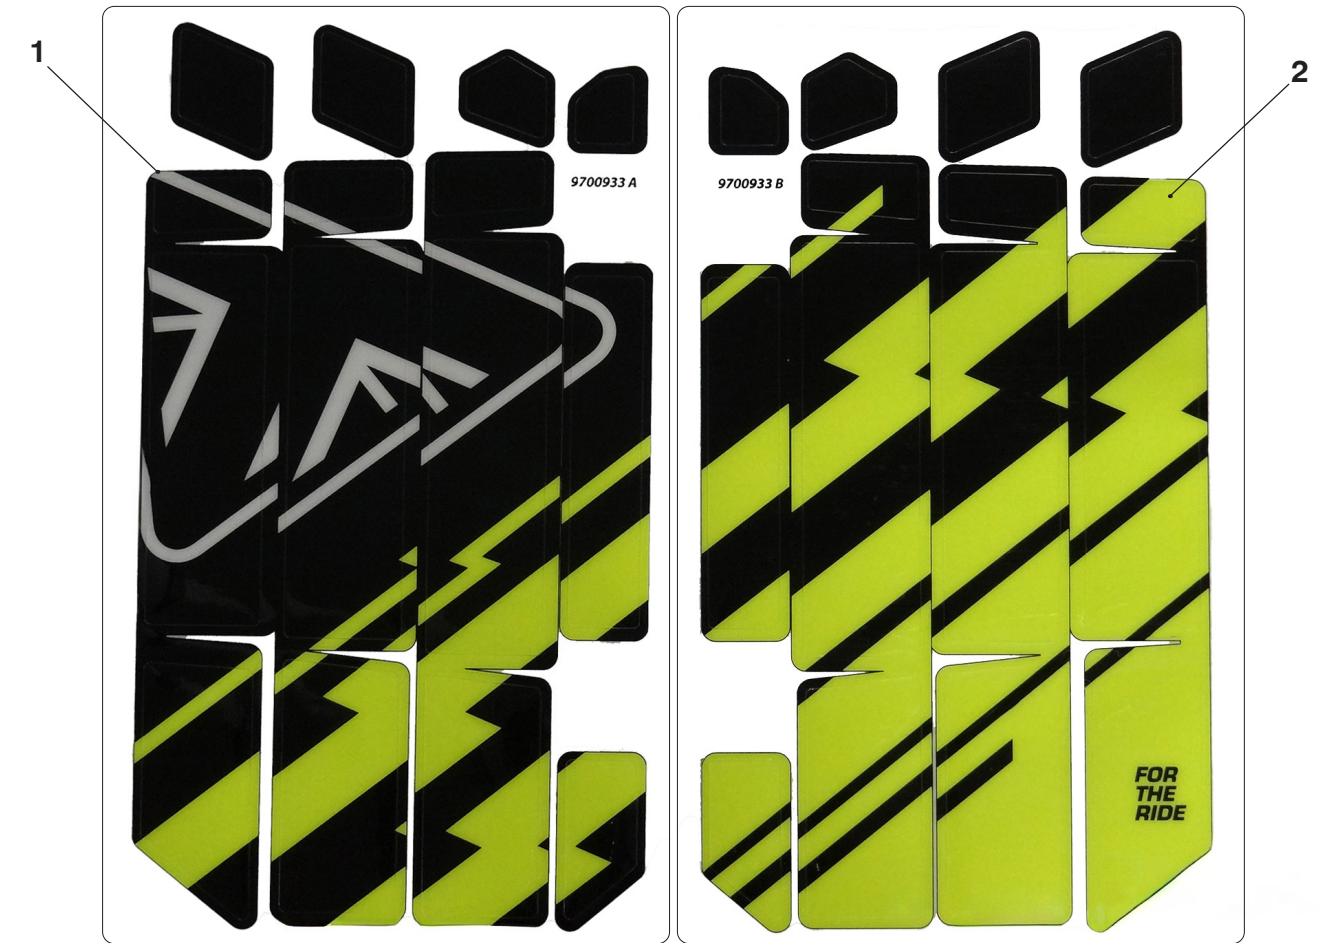

1. Right hand radiator guard decal kit	1 off	2. Left hand radiator guard decal kit	1 off
--	-------	---------------------------------------	-------

⚠ WARNING

Fit only genuine Triumph accessories to those models approved by Triumph as listed in the associated Triumph fitting instructions.

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should never be fitted to any other Triumph model or to any other manufacturer's motorcycle.

Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle, will affect the performance, stability and handling of the motorcycle.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Always have Triumph approved parts, accessories and conversions fitted by a competent person with the specialist knowledge and technical understanding of motorcycles, such as an authorised Triumph dealer.

The fitment of parts, accessories and conversions by a person without the specialist knowledge and technical understanding of motorcycles may affect the handling, stability or other aspects of the motorcycle's operation.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

A torque wrench of known accurate calibration must be used when fitting this accessory kit.

Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability.

Failure to follow the advice above may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Make sure the motorcycle is stabilised and adequately supported.

Do not support the motorcycle on any ancillary component, the exhaust system or any other non structural parts of the motorcycle frame.

A correctly supported motorcycle will help prevent it from falling.

An unstable motorcycle may fall resulting in motorcycle damage, serious injury or death.

NOTICE

Triumph offers a broad range of approved genuine accessories for your motorcycle.

We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit.

To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorised Triumph dealer.

Removal of Radiator Guard

NOTICE


Decals should be fitted to new/unused radiator guards.

1. Remove the seat as described in the Service Manual.
2. Remove the left and right side panel as described in the Service Manual.

NOTICE


Support the radiator while removing the radiator guard.

3. Remove the two right hand radiator fixings.

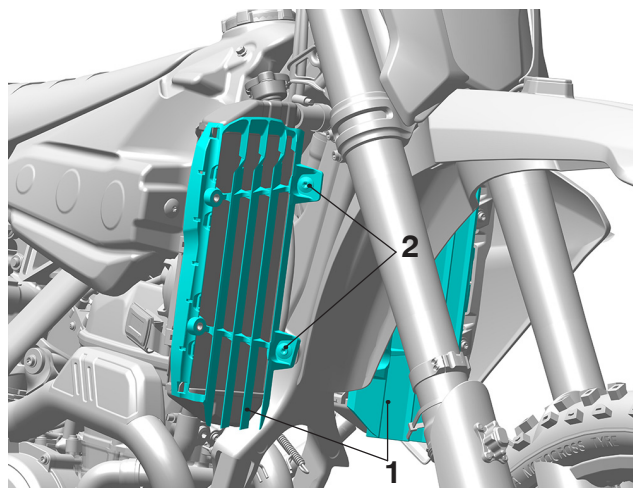

1. Radiator
2. Radiator fixing

4. Remove the radiator guard by lifting it out of its guide.

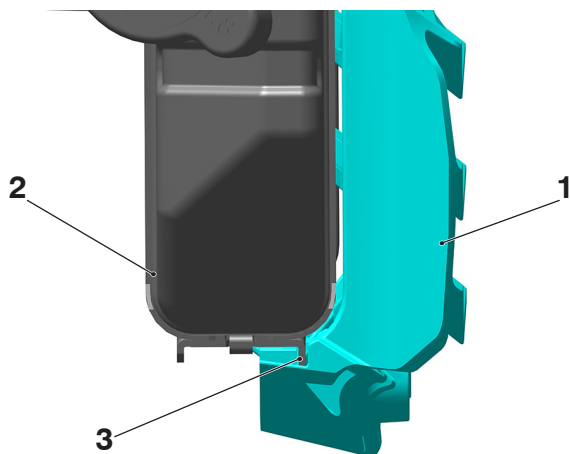

1. Radiator guard
2. Radiator
3. Guide

5. Refit the radiator to the frame. Do not fully tighten.
6. Repeat steps 3 to 5 for the left hand side.

Fitment of the Radiator Guard Decal Kit

7. Clean the right hand radiator guard with suitable cleaner and make sure the surface is dry and free from dust and oil.
8. Collect the right hand decals from the kit.

NOTICE

Remove the clear protective film from the decals prior to applying to the radiator guards.

NOTICE

Do not use water while applying the decals.

NOTICE


Make sure the hands are clean prior to applying the decals.

NOTICE

Decals should be applied one at a time.


9. Individually peel off the right hand decals from the adhesive backing sheet.

10. Carefully position the short decals one at a time on the respective fins of the right hand radiator guard, keeping it aligned with the edges.
11. Carefully position the long decals one at a time on the respective fins of the right hand radiator guard. Apply firm and even pressure starting from the center of the decals toward both ends of fins, keeping it aligned with the edges.

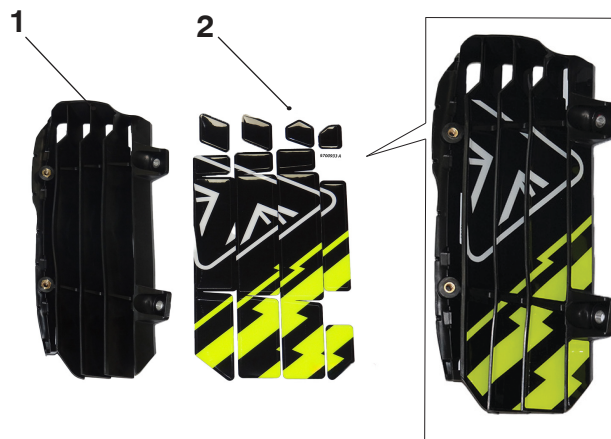

1. Right hand radiator guard
2. Right hand radiator guard decals

12. Repeat steps 7 - 11 for the left hand radiator guard decals.

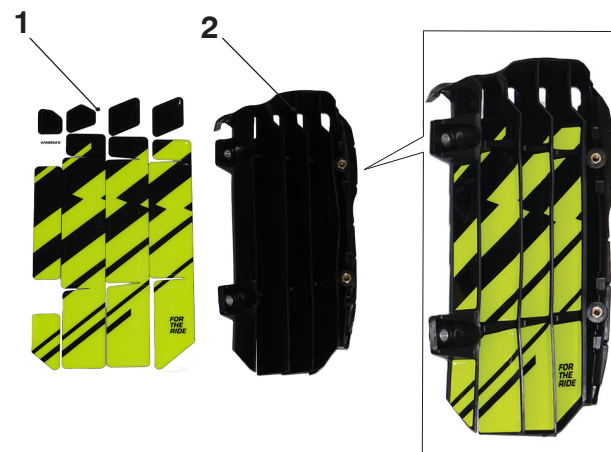


1. Left hand radiator guard decal kit
2. Left hand radiator guard

Installation of Radiator Guard

13. Remove the radiator guard fixings and refit the radiator guard to the radiator by slotting it into the guide.

14. Refit the radiator to the frame fixing and tighten the fixings to **10 Nm**.

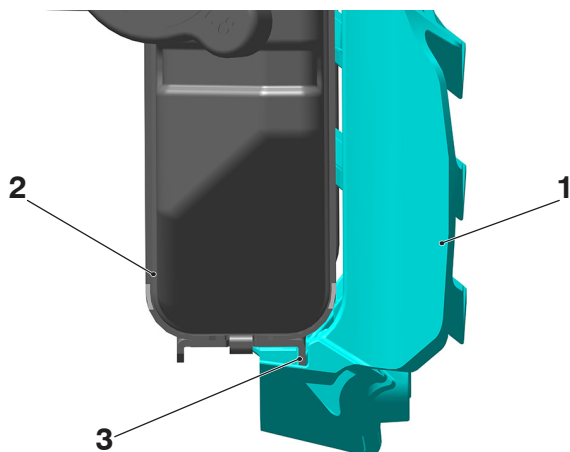

- 1. Radiator guard
- 2. Radiator
- 3. Guide

15. Refit the side panels as described in the Service Manual.
16. Refit the seat as described in the Service Manual.

⚠ WARNING

After fitting the accessory kit the motorcycle will exhibit new handling characteristics.

Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics.

Operation of the motorcycle when not familiar with any new handling characteristics may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

If, after fitting this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact a competent person with the specialist knowledge and technical understanding of motorcycles, such as an authorised Triumph dealer.

Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

Never ride an accessory-equipped motorcycle at speeds above 80 mph (130 km/h).

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.

The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of motorcycle control which could result in serious injury or death.

⚠ WARNING

High-speed operation should only be attempted by riders who have been instructed in the techniques necessary for high-speed riding and are familiar with the motorcycle's characteristics in all conditions.

Only operate this Triumph motorcycle at high speed in closed-course, on-road competition or on closed-course racetracks.

High-speed operation in any other circumstances is dangerous and may lead to loss of motorcycle control which could result in serious injury or death.

NOTICE

The motorcycle must not be operated above the legal road speed limit except in closed-course conditions.