



Accessory Fitting Instructions


Flyscreen Mounting Kit	
Kit number	Models Affected
A9708349	Street Twin
A9708302	Bonneville T100 and Bonneville T100 Black from VIN 759204, Bonneville T120, Bonneville T120 Black
A9708131	Thruxton 1200 and Thruxton 1200 R
A9708434	Street Scrambler
To be used with the following Flyscreens	
Flyscreen - Short Painted	
Kit number	Models Affected
A9708381	Street Twin, Street Cup, Street Scrambler, Bonneville T100 and Bonneville T100 Black from VIN 759204, Bonneville T120, Bonneville T120 Black, Thruxton 1200, Thruxton 1200 R
Flyscreen - Short Clear	
Kit number	Models Affected
A9708303	Street Twin, Street Cup, Street Scrambler, Bonneville T100 and Bonneville T100 Black from VIN 759204, Bonneville T120, Bonneville T120 Black, Thruxton 1200, Thruxton 1200 R
Flyscreen - Short Dark Tinted	
Kit number	Models Affected
A9708151	Street Twin, Street Cup, Street Scrambler, Bonneville T100 and Bonneville T100 Black from VIN 759204, Bonneville T120, Bonneville T120 Black, Thruxton 1200, Thruxton 1200 R
Flyscreen - Light Tinted	
Kit number	Models Affected
A9708407	Street Twin, Street Cup, Street Scrambler, Bonneville T100 and Bonneville T100 Black from VIN 759204, Bonneville T120, Bonneville T120 Black, Thruxton 1200, Thruxton 1200 R

Flyscreen - Tall Clear	
Kit Number	Models Affected
A9708408	Street Twin, Street Cup, Street Scrambler, Bonneville T100 and Bonneville T100 Black from VIN 759204, Bonneville T120, Bonneville T120 Black, Thruxton 1200, Thruxton 1200 R
Flyscreen - Tall Tinted	
Kit number	Models Affected
A9708409	Street Twin, Street Cup, Street Scrambler, Bonneville T100 and Bonneville T100 Black from VIN 759204, Bonneville T120, Bonneville T120 Black, Thruxton 1200, Thruxton 1200 R

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.


These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory-equipped motorcycle is subsequently sold.

Parts supplied: A9708349, A9708434

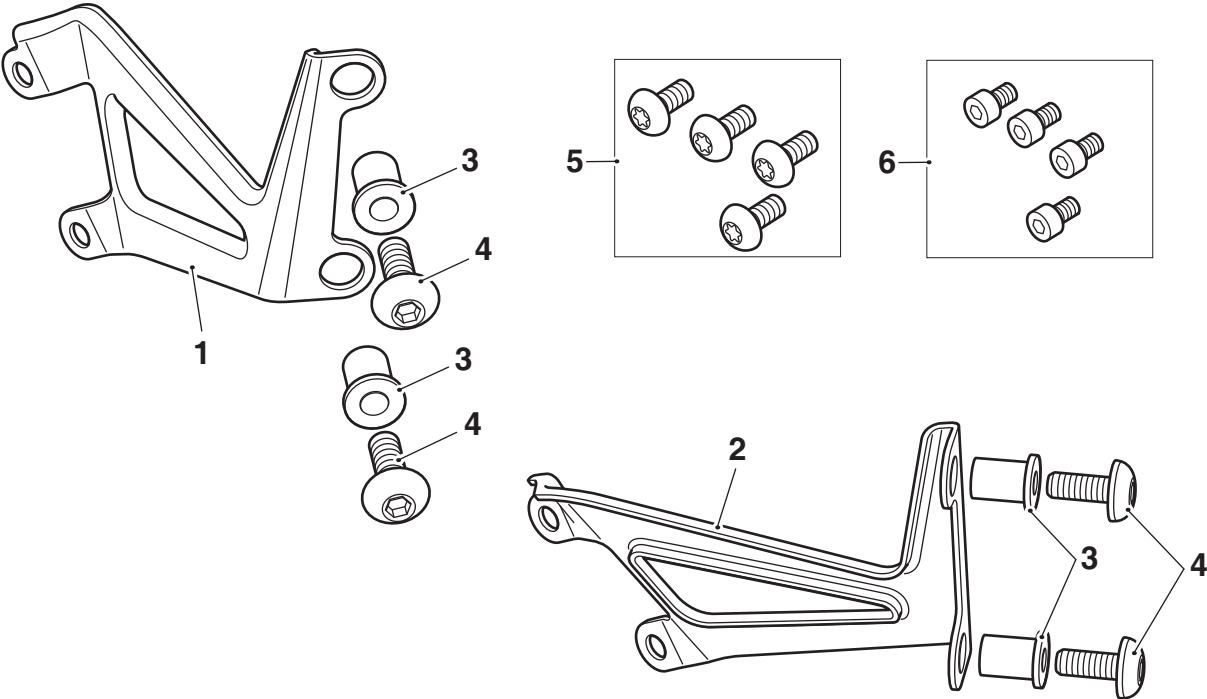


1. Mounting bracket, right hand	1 off	4. Fixing, M5 x 14 mm	4 off
2. Mounting bracket, left hand	1 off	5. Fixing, M6 x 12 mm A9708349 only	4 off
3. Well Nut, M5	4 off	6. Fixing, M5 x 10 mm A9708434 only	4 off

Parts supplied: A9708302

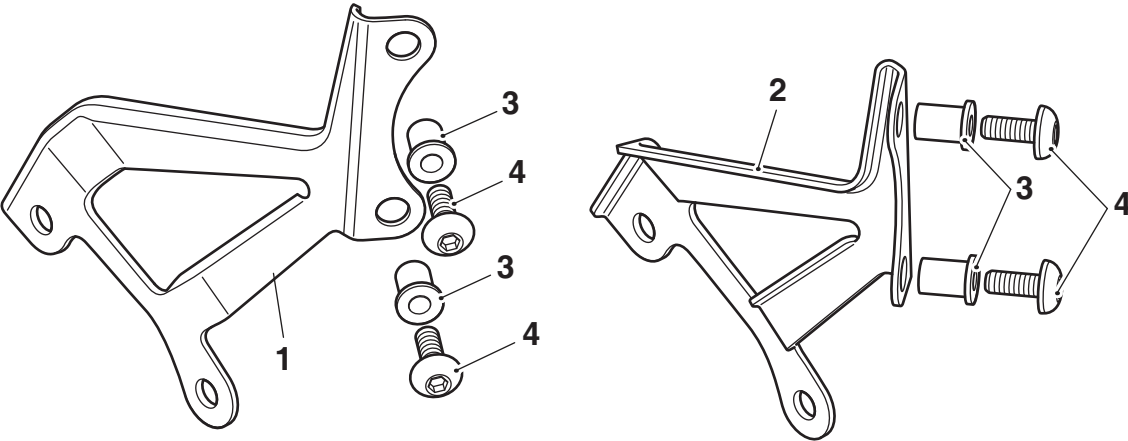


1. Mounting bracket, right hand	1 off	3. Well Nut, M5	4 off
2. Mounting bracket, left hand	1 off	4. Fixing, M5 x 14 mm	4 off

Parts supplied: A9708131

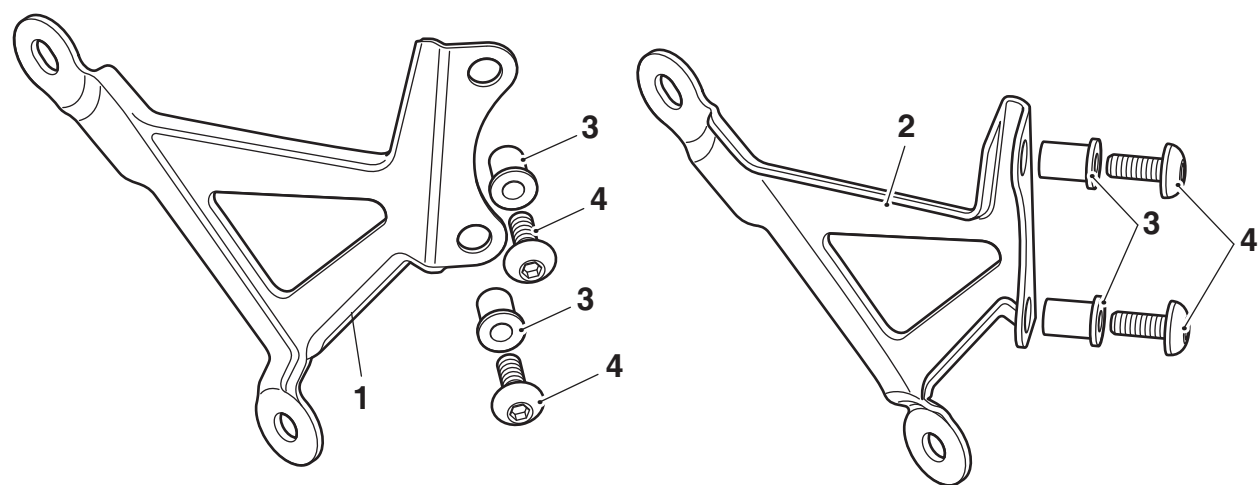

1. Mounting bracket, right hand	1 off	3. Well Nut, M5	4 off
2. Mounting bracket, left hand	1 off	4. Fixing, M5 x 14 mm	4 off

Parts supplied: A9708151, A9708303, A9708381, A9708407, A9708408, A9708409

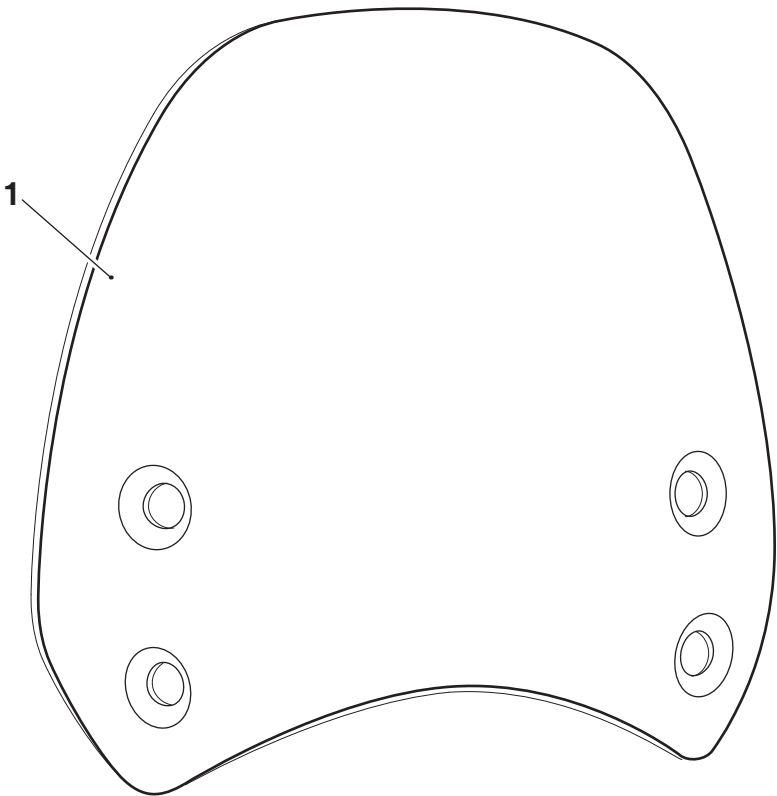

1. Flyscreen (A9708408 shown)	1 off		
-------------------------------	-------	--	--



Warning

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle will affect the performance, stability and handling of the motorcycle. This may result in loss of motorcycle control and an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation which may result in loss of motorcycle control and an accident.



Warning

Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.



Warning

A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability. This may result in loss of motorcycle control and an accident.

Note:

- Triumph offers a broad range of approved genuine accessories for your motorcycle. We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit. To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorised Triumph dealer.


Flyscreen Mounting Kit Installation

All Models

1. Remove the seat, as described in the Service Manual.
2. Disconnect the battery, negative (black) lead first.
3. Remove the headlight assembly, as described in the Service Manual.

Street Twin Models

4. Locate the left hand flyscreen mounting bracket on the left hand headlight bracket and align the fixing positions. Fit two M6 x 12 mm fixings from the kit. Tighten the fixings to **5 Nm**.

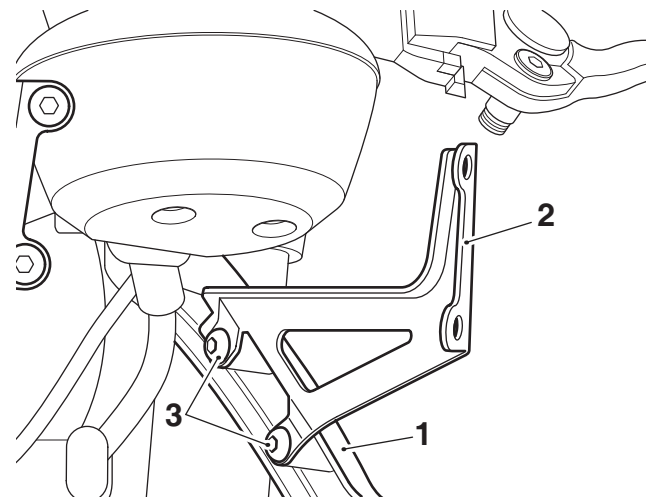


1. Headlight bracket
2. Flyscreen mounting bracket
3. Fixing, M6 x 12 mm

5. Repeat step 4 for the right hand side.
6. Refit the headlight, as described in the Service Manual.

Street Scrambler Models

7. Locate the left hand flyscreen mounting bracket on the left hand headlight bracket and align the fixing positions. Fit two M5 x 10 mm fixings from the kit. Tighten the fixings to **3 Nm**.

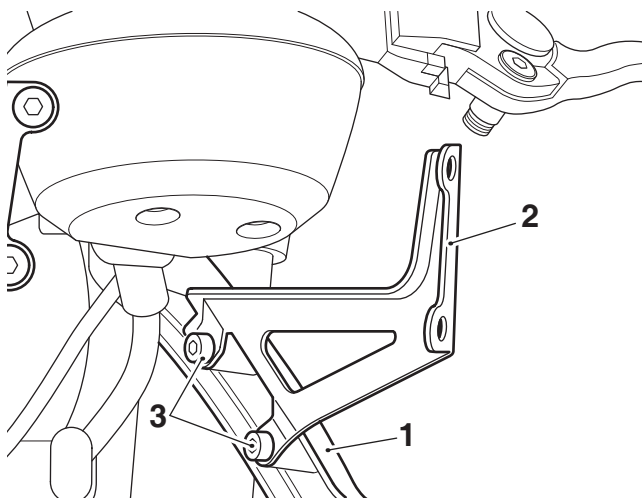


1. Headlight bracket
2. Flyscreen mounting bracket
3. Fixing, M5 x 10 mm

8. Repeat step 7 for the right hand side.
9. Refit the headlight, as described in the Service Manual.

Bonneville Models


Note:

- When removing the direction indicator fixing, if there is a washer used with the fixing the washer should be removed and retained for reuse if the motorcycle is to be returned to its original condition.
10. Remove the left hand direction indicator fixing. Retain the fixing for reuse.

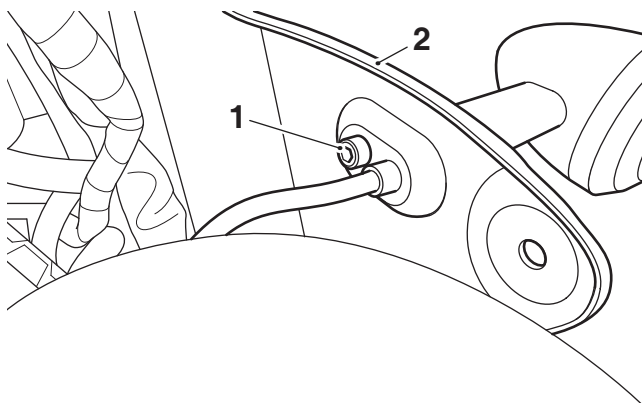


1. Direction indicator fixing
2. Headlight bracket

11. Locate the left hand flyscreen mounting bracket on the left hand headlight bracket and align the fixing holes with the direction indicator and headlight fixing positions.

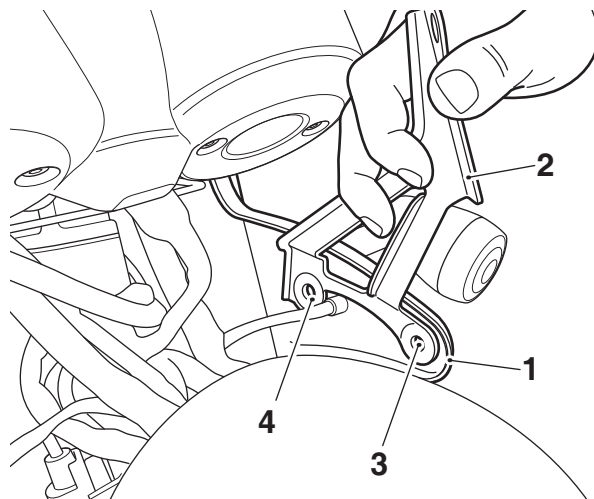

1. Headlight bracket
2. Flyscreen mounting bracket
3. Headlight fixing position
4. Direction indicator fixing position


12. Refit the direction indicator fixing. Tighten the fixing to **3 Nm**.
13. Repeat steps 10 to 12 for the right hand side.
14. Refit the headlight, as described in the Service Manual. The flyscreen mounting brackets should be positioned as shown.

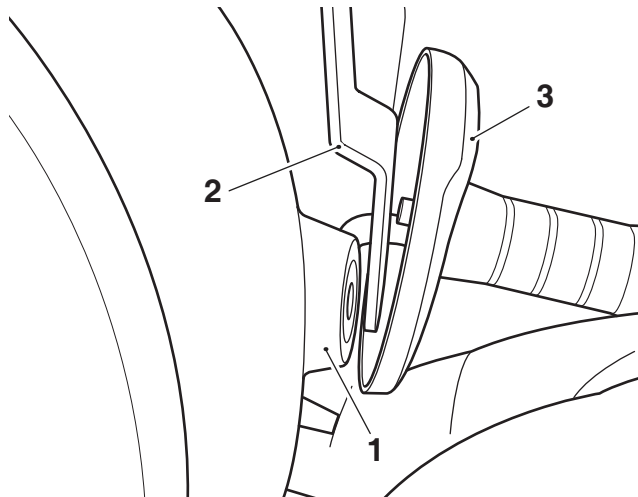

1. Headlight
2. Flyscreen mounting bracket
3. Headlight bracket


Thruxton Models

15. Remove the right hand side headlight bracket top and lower fixings and remove the headlight bracket from the sub-frame. Retain the fixings for reuse.

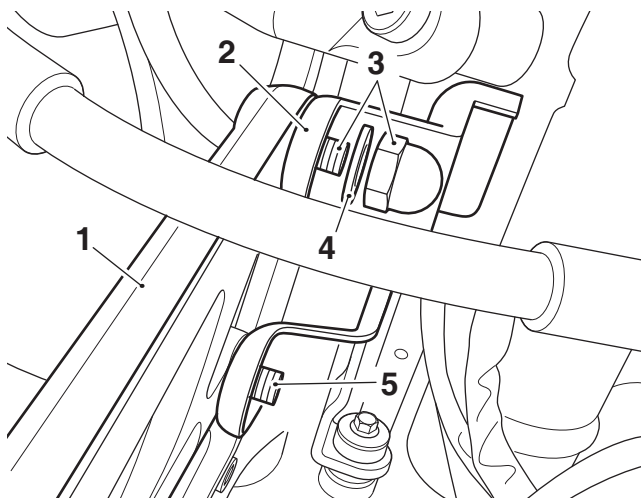


1. Headlight bracket
2. Sub-frame
3. Top fixings
4. Washer
5. Lower fixing

16. Refit the headlight bracket lower fixing with the original washer removed from the top fixing. Position the washer between the headlight bracket and sub-frame, as shown. Do not fully tighten the fixing at this stage.

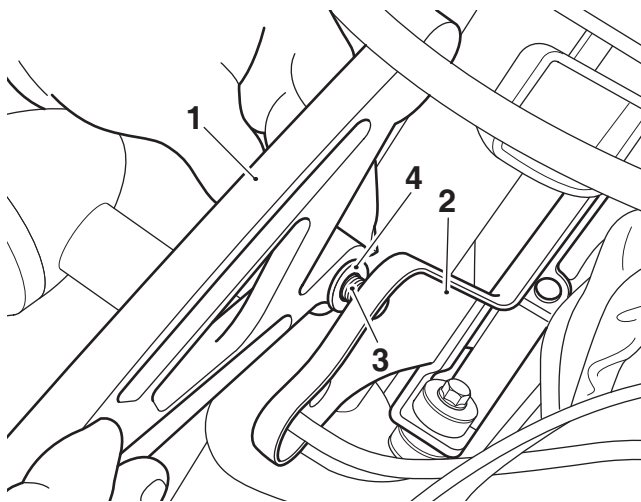

1. Headlight bracket
2. Sub-frame
3. Fixing
4. Washer

17. Locate the flyscreen mounting bracket onto the headlight bracket and align the top fixing position. Refit the original fixings.

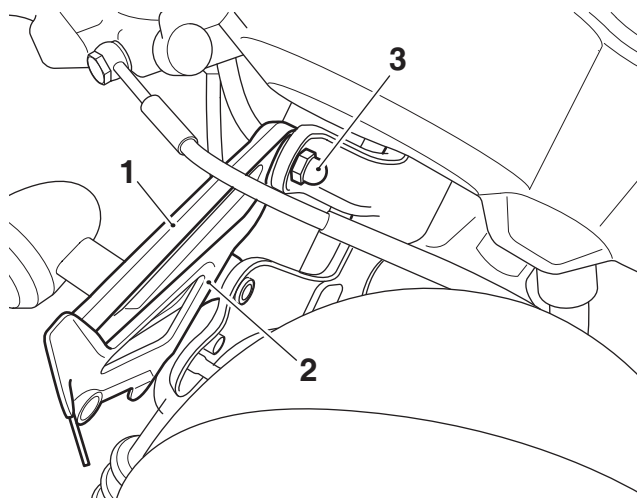

1. Headlight bracket
2. Flyscreen bracket
3. Fixings


18. Ensure the flyscreen bracket front fixing position is aligned with the headlight fixing position on the headlight bracket.
19. Tighten the top and lower headlight bracket fixings to **24 Nm**.
20. Repeat steps 15 to 19 for the left hand side.
21. Refit the headlight, as described in the Service Manual.

Flyscreen Fitment, All Models

! Caution


Care must be taken when fitting the new flyscreen. Damage to the flyscreen surfaces could result from inadequate care during the assembly process.

22. Collect the four Well Nuts from the kit and fit them in to the flyscreen mounting brackets, as shown.

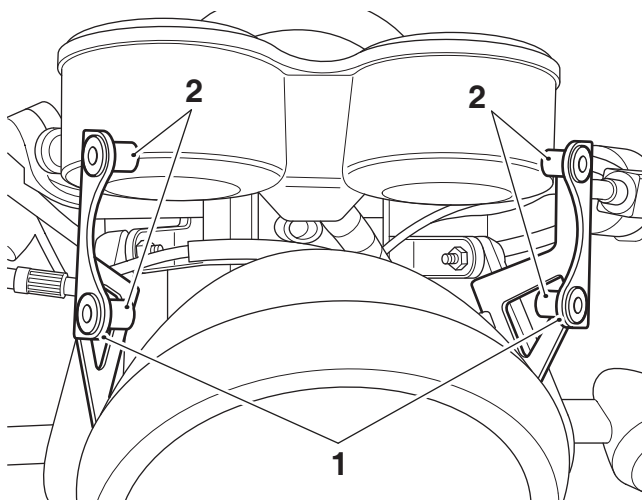

1. Flyscreen bracket
2. Well Nut

23. Align the flyscreen fixing holes with the Well Nuts in the mounting brackets and fit the M5 x 14 mm fixings. Tighten the fixings to 1.5 Nm.

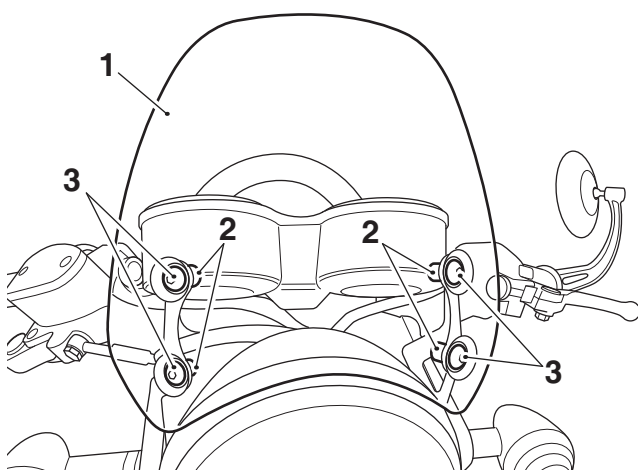

1. Flyscreen
2. Well Nut
3. Fixing, M5 x 14 mm

24. Reconnect the battery, positive (red) lead first and tighten the battery terminals to 4.5 Nm.
25. Adjust the alignment of the headlight, as described in the Service Manual.

26. Refit the seat, as described in the Service Manual.

! Warning

After fitting the flyscreen the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.

! Warning

Never attempt to clean the flyscreen while riding the motorcycle. Removal of the rider's hands from the handlebars while riding the motorcycle will diminish the ability of the rider to maintain control of the motorcycle. Attempting to clean the flyscreen while riding the motorcycle may result in loss of motorcycle control and an accident.

! Warning

The flyscreen is not a substitute for a safety helmet or eye protection. Flyscreens are designed to provide wind protection and increased riding comfort. They are not designed to provide protection in the event of a collision with another vehicle, the road, birds or any other object. When riding a motorcycle both rider and passenger must always wear a safety helmet, eye protection, gloves and trousers (close fitting around the knees and ankle). Although full protection is not possible, wearing correct protective clothing can reduce the risk of injury when riding.

! Warning

If, after fitting this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of motorcycle control and an accident.



Warning

Never ride an accessory-equipped motorcycle at speeds above 80 mph (130 km/h).

The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may result in loss of motorcycle control and an accident.

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.



Warning

Only operate this Triumph motorcycle at high speed in closed-course, on-road competition or on closed-course racetracks. High-speed operation should only be attempted by riders who have been instructed in the techniques necessary for high-speed riding and are familiar with the motorcycle's characteristics in all conditions.

High-speed operation in any other circumstances is dangerous and may result in loss of motorcycle control and an accident.



Warning

The motorcycle must not be operated above the legal road speed limit except in closed-course conditions.