


Fitting Instructions: Thunderbird Commander A9708267

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

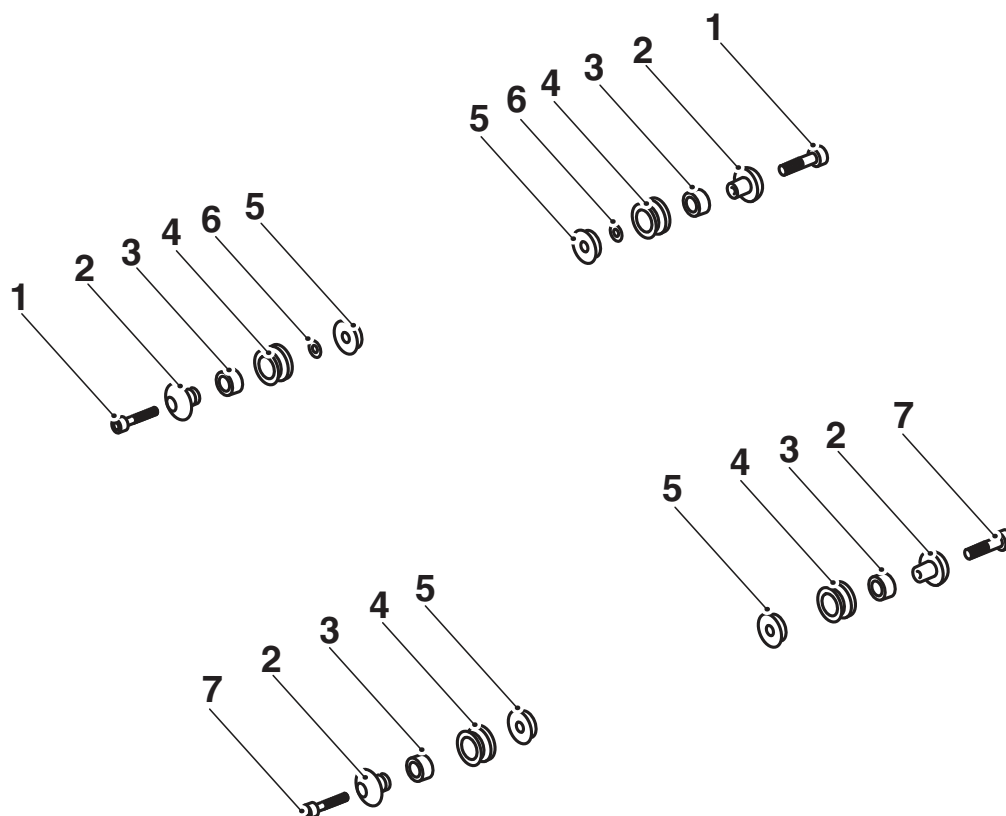

Parts Supplied:

1. Screw, M6 x 30 mm	2 off	5. Spacer	4 off
2. Finisher	4 off	6. Brass washer, M6	2 off
3. Sleeve	4 off	7. Screw, M6 x 35 mm	2 off
4. Spool	4 off		



Warning

This accessory kit is designed for use on Triumph Thunderbird Commander motorcycles only and should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting this accessory kit to any other Triumph model or to any other manufacturer's motorcycle, may interfere with the rider and could affect the stability and handling of the motorcycle, leading to loss of control and an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation which may result in loss of motorcycle control and an accident.



Warning

Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.



Warning

Failure to tighten any of the fasteners to the correct torque specification may result in loss of motorcycle control and an accident. Always use a calibrated torque wrench.




Warning

Before starting work, ensure the motorcycle is stabilised and adequately supported. This will help prevent it from falling and causing injury to the operator or damage to the motorcycle.

Windscreen Mountings

Right Hand Side


1. Undo and remove the fork shroud upper screw, retain the screw for re-use if the motorcycle is to be returned to its original condition.

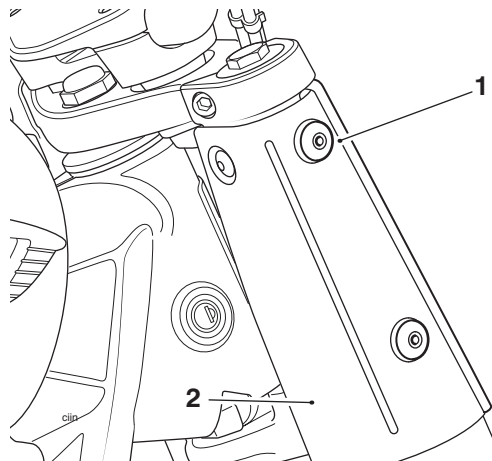

1. Screw, M6 x 8 mm
2. Fork shroud (right hand shown)


Note:

- **Note that the upper fixings for the windscreen mountings are shorter than the lower fixings.**
2. Collect an M6 x 30 mm screw, finisher, sleeve, spool, washer and spacer from the kit.
 3. In the orientation shown below, locate the assembly to the shroud and tighten to **9 Nm**.

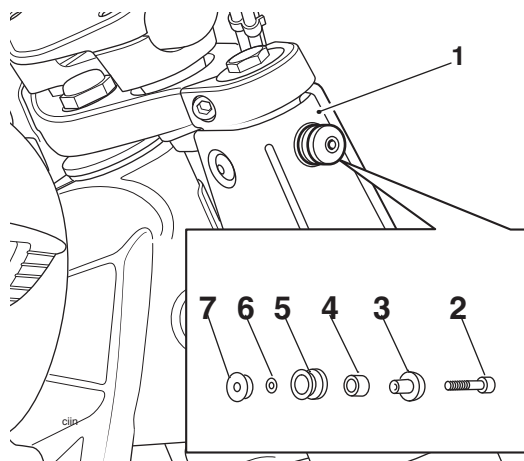


1. Shroud (right hand shown)
2. Screw, M6 x 30 mm
3. Finisher
4. Sleeve
5. Spool
6. Brass washer
7. Spacer

- Undo and remove the fork shroud lower screw, retain the screw for re-use if the motorcycle is to be returned to its original condition.

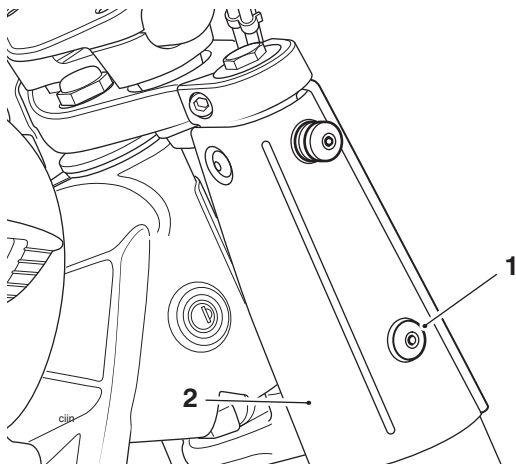

- 1. Screw, M6 x 12 mm**
- 2. Fork shroud (right hand shown)**

- Collect an M6 x 35 mm screw, finisher, sleeve, spool, and spacer from the kit.
- In the orientation shown below, locate the assembly to the shroud and tighten to **9 Nm**.

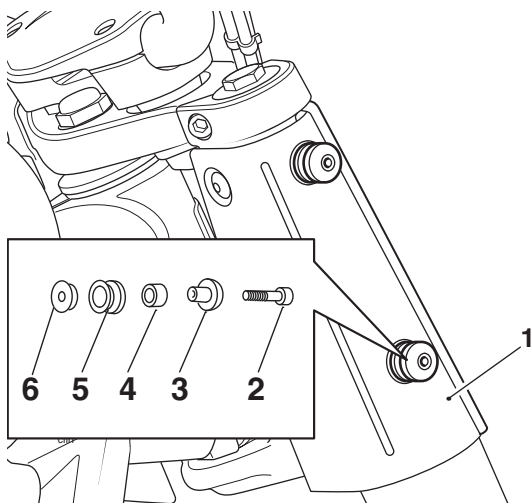

- 1. Fork shroud (right hand shown)**
- 2. Screw, M6 x 35 mm**
- 3. Finisher**
- 4. Sleeve**
- 5. Spool**
- 6. Spacer**

Left Hand Side

- Repeat the procedure for the left hand side upper and lower windscreen mountings.
- Tighten the screws to **9 Nm**.

Windscreen (supplied separately)

For removal and installation of the windscreen, refer to the Owner's Handbook.



Warning

After fitting the accessory kit, the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.



Warning

If, after fitment of this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of control of the motorcycle leading to an accident.



Warning

Never ride an accessory equipped motorcycle at speeds above 80 mph (130 km/h).

The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of control or an accident.

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.



Warning

Only operate this Triumph motorcycle at high speed in closed course, on-road competitions or on closed course racetracks. High speed operation should only be attempted by riders who have been instructed in the techniques necessary for high speed riding and are familiar with the motorcycle's characteristics in all conditions.

High speed operation in any other circumstances is dangerous and will lead to loss of motorcycle control and an accident.



Warning

The motorcycle must not be operated above the legal road speed limit except in closed course conditions.