

Fitting Instructions:
Sprint ST 1050
Carbon Fibre Tank Pad Kit - A9720129



Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.




Warning

This accessory kit is designed for use on Triumph Sprint ST 1050 motorcycles only and should not be fitted to any other Triumph model or to any other manufacturers motorcycle. Fitting this accessory kit to any other Triumph model, or to any other manufacturers motorcycle, may interfere with the rider and could affect the handling, stability or other aspects of the motorcycles operation which may result in loss of motorcycle control and an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycles operation which may result in loss of motorcycle control and an accident.

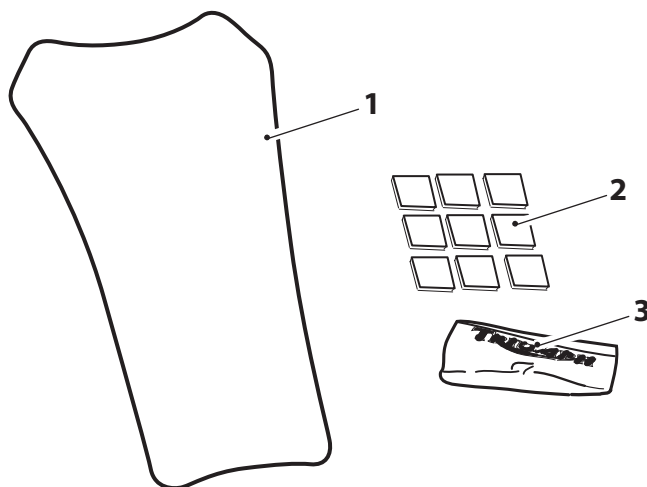

Parts Supplied:

- | | |
|--|----------------------------------|
| 1. Carbon fibre tank pad 1 off | 3. Cleaning wipe 1 off |
| 2. Adhesive foam pads 9 off | |



Warning


Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.




Warning

Read the warning notices printed on the cleaning wipe packet in the fitting kit.

1. Clean the surface of the fuel tank and the rear surface of the tank pad with the cleaning wipe provided in the kit.
2. Remove the protective strips from one side of the adhesive foam pads and apply the pads to the rear surface of the tank pad as shown below. Do not remove the protective strips from the reverse side of the adhesive foam pads at this stage.
3. Position the tank pad on the fuel tank. Carefully apply masking tape to the fuel tank to mark the fitted position of the tank pad, as shown below.

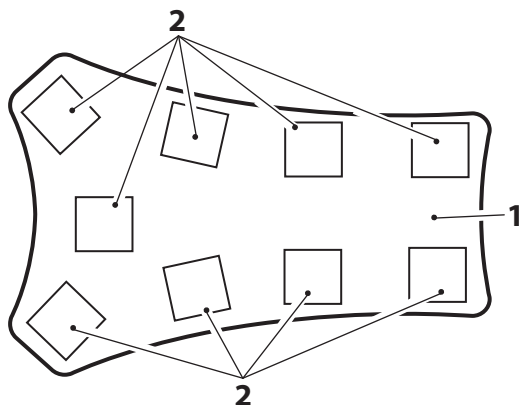

- 1. Tank pad
- 2. Adhesive foam pads

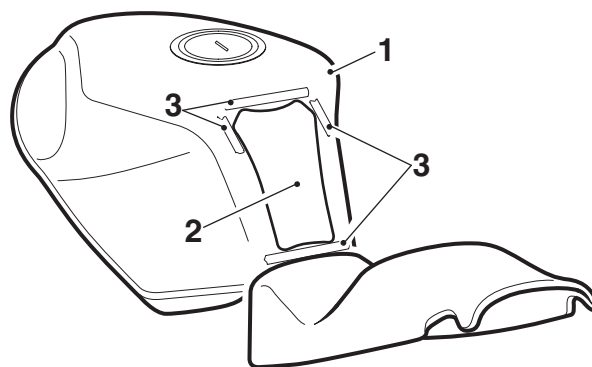

- 1. Fuel tank
 - 2. Tank pad
 - 3. Masking tape
4. Remove the protective strips from the adhesive foam pads. Carefully align the tank pad with the masking tape and press firmly to secure to the fuel tank.
 5. Remove the masking tape.



Warning

If, after fitment of this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of control of the motorcycle leading to an accident.



Warning

The motorcycle must not be operated above the legal road speed limit except in closed course conditions.



Warning

Only operate this Triumph motorcycle at high speed in closed-course on road competition or on closed course racetracks. High speed operation should only be attempted by riders who have been instructed in the techniques necessary for high speed riding and are familiar with the motorcycle's characteristics in all conditions.

High speed operation in any other circumstances is dangerous and will lead to loss of motorcycle control and an accident.