

Fitting Instructions: Rocket III Touring Pannier Embellisher Kit, Chrome - A9738065



Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.




Warning

This accessory kit is designed for use on Triumph Rocket III Touring motorcycles only and should not be fitted to any other Triumph model or to any other manufacturers motorcycle. Fitting this accessory kit to any other Triumph model, or to any other manufacturers motorcycle, may interfere with the rider and could affect the handling, stability or other aspects of the motorcycles operation which may result in loss of motorcycle control and an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycles operation which may result in loss of motorcycle control and an accident.

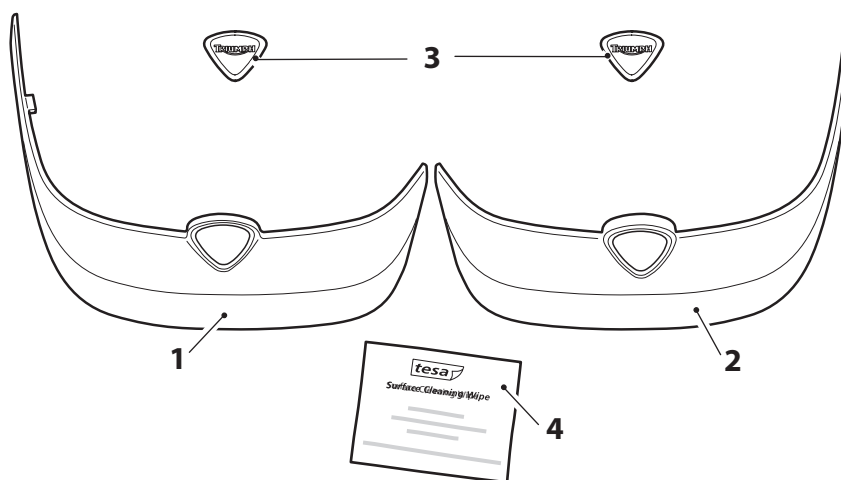

Parts Supplied:

- | | | | |
|--------------------------------------|-------|----------------------------|-------|
| 1. Embellisher, right hand | 1 off | 3. Badge, 30 mm | 2 off |
| 2. Embellisher, left hand | 1 off | 4. Cleaning wipe | 1 off |



Warning

Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.


1. Remove the panniers as described in the owner's handbook.
2. Using the wipe provided, clean both pannier lids and the badge recess area of both embellishers.



Caution


When fitting self adhesive parts care must be taken to ensure positioning is correct and accurate. Once the adhesive has been attached to the mounting surface, there is no satisfactory method of removal and re-positioning if incorrectly aligned. Initial bonding is instant, full bonding is achieved after 72 hours.

3. Remove the protective film from the back of the badge inserts and attach them to the embellishers, as shown. Press firmly to secure.

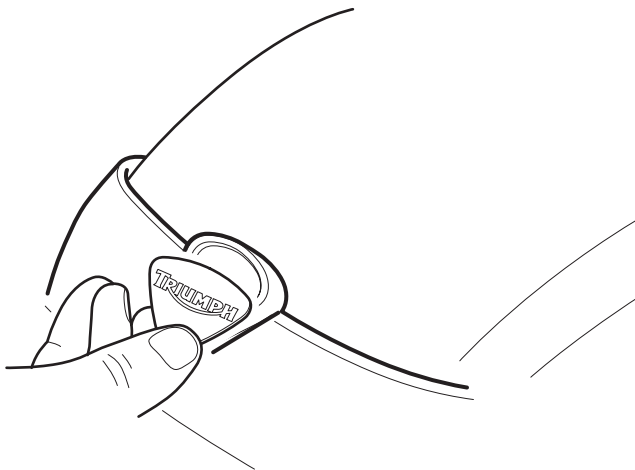


4. Cut three pieces of masking tape approximately 45 mm long, using scissors. The ends must be cut square.

5. Mark a straight line on each length of tape, at 30 mm, as shown below.

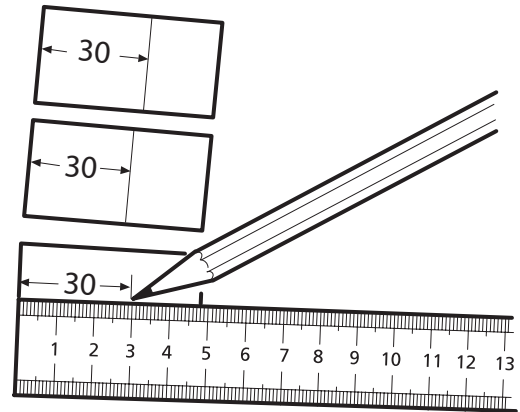


6. Start with the left hand pannier lid. Place the three pieces of masking tape on the pannier lid. Position one near the pannier hinge and the remaining two at each side of the pannier front face. Align the marked line on the tape with the lower edge of the pannier lid, as shown. Smooth the tape to the lid surface.

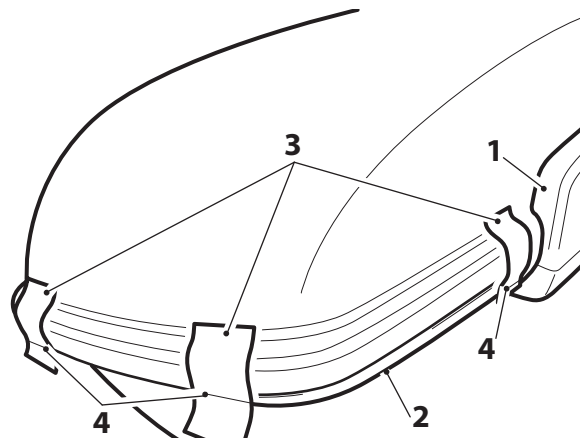

1. Pannier lid hinge
2. Pannier lid lower edge
3. Masking tape
4. 30 mm tape mark

7. Before removing the protective film from the rear of the embellisher, position the left hand embellisher on the pannier lid. Align the bottom edge of the embellisher with the top edge of the three tape markers.

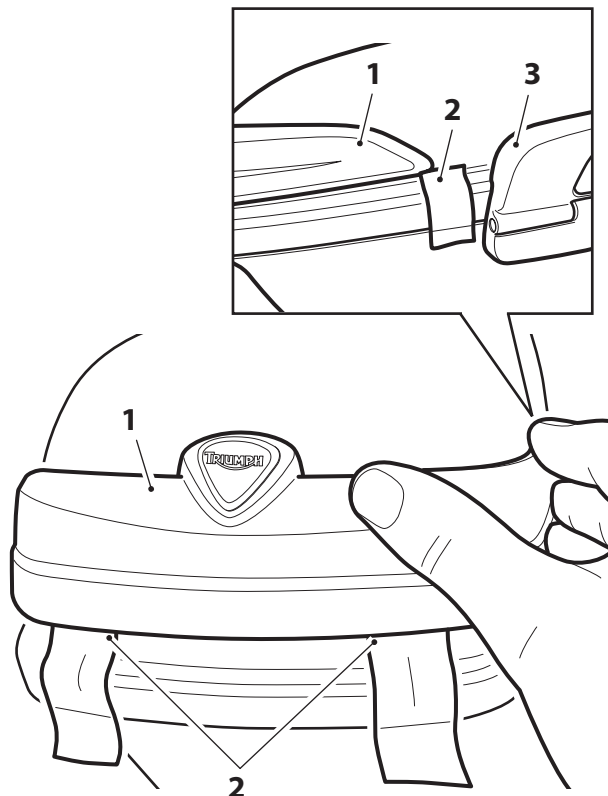

- 1. Embellisher, left hand
- 2. Tape marker
- 3. Pannier lid hinge


8. Before continuing, ensure the front and long sides of the embellisher are a close fit to the pannier lid without any large visible gaps. Adjust the position of the masking tape by plus/minus 2 mm if necessary.



Caution


When fitting self adhesive parts care must be taken to ensure positioning is correct and accurate. Once the adhesive has been attached to the mounting surface, there is no satisfactory method of removal and re-positioning if incorrectly aligned. Initial bonding is instant, full bonding is achieved after 72 hours.

9. Using a sharp knife, carefully cut down the centre of the protective film on the rear of the embellisher. Peel back the protective film to expose only a small portion of the adhesive, as shown. Do not fully remove the protective film at this stage.

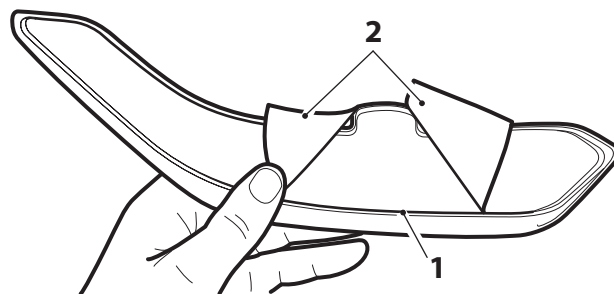

- 1. Embellisher, left hand
- 2. Protective film

10. While pressing the long side of the embellisher firmly onto the pannier lid, carefully slide the embellisher into place using the top edge of the tape markers as a guide. Ensure the position is correct before pressing the centre section of the embellisher to secure.

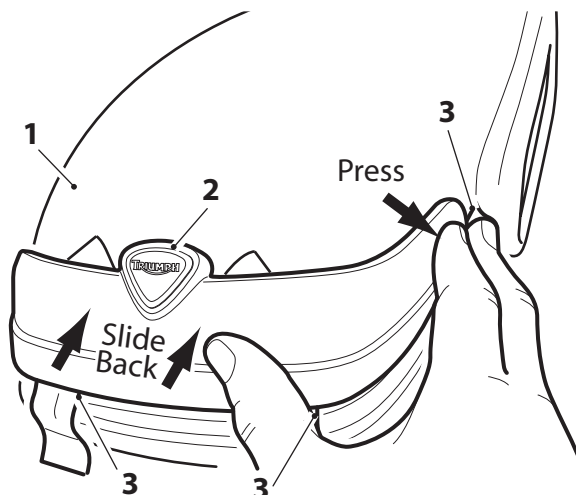

- 1. Pannier lid, front
- 2. Embellisher, left hand
- 3. Tape marker

11. With the embellisher correctly positioned, carefully peel out the remaining sections of protective film. Apply firm and even pressure to the entire embellisher to ensure a good bond is achieved.
12. Remove the masking tape.
13. Repeat steps 4 to 12 for the right hand embellisher.
14. Refit the panniers as described in the owner's handbook.



Warning

If, after fitment of this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of control of the motorcycle leading to an accident.



Warning

The motorcycle must not be operated above the legal road speed limit except in closed course conditions.



Warning

Only operate this Triumph motorcycle at high speed in closed-course on road competition or on closed course racetracks. High speed operation should only be attempted by riders who have been instructed in the techniques necessary for high speed riding and are familiar with the motorcycle's characteristics in all conditions.

High speed operation in any other circumstances is dangerous and will lead to loss of motorcycle control and an accident.