



Accessory Fitting Instructions


Adjustable Highway Peg Mounting Kit	
Kit Number	Models Affected
A9750455	America, Speedmaster up to VIN 739142, Rocket III, Rocket III Touring, Rocket III Touring SE, Rocket III Classic, Rocket III Touring ABS, Thunderbird, Thunderbird ABS, Thunderbird ABS (1700 cc), Thunderbird SE ABS
A9759204	America, Speedmaster up to VIN 739142, Rocket III, Rocket III Touring, Rocket III Touring SE, Rocket III Classic, Rocket III Touring ABS, Thunderbird, Thunderbird ABS, Thunderbird ABS (1700 cc), Thunderbird SE ABS, Bonneville Bobber, Bonneville Bobber Black, Bonneville Speedmaster from VIN 739143
Short Highway Peg Mounting Kit	
Kit Number	Models Affected
A9750463	America, Speedmaster up to VIN 739142, Rocket III, Rocket III Touring, Rocket III Touring SE, Rocket III Classic, Rocket III Touring ABS, Thunderbird, Thunderbird ABS, Thunderbird ABS (1700 cc), Thunderbird SE ABS
The above Highway Peg Mountings Kits are to be fitted with	
Highway Pegs, Logo - Chrome	
Kit Number	Models Affected
A9750459 A9750840	America, Speedmaster up to VIN 739142, Rocket III, Rocket III Touring, Rocket III Touring SE, Rocket III Classic, Rocket III Touring ABS, Thunderbird, Thunderbird ABS, Thunderbird ABS (1700 cc), Thunderbird SE ABS, Bonneville Bobber, Bonneville Bobber Black, Bonneville Speedmaster from VIN 739143

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

Parts Supplied

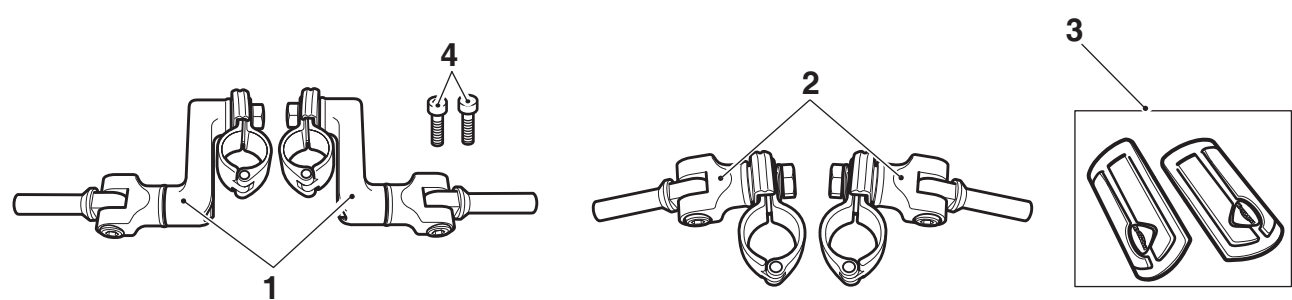

1. Adjustable Highway Peg Mounting Kit	1 off	3. Highway Pegs, Logo - Chrome	1 off
or		4. Fixing, M5 x 30 mm (A9759204 only)	2 off
2. Short Highway Peg Mounting Kit	1 off		

 Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycles operation which may result in loss of motorcycle control and an accident.

 Warning

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle will affect the performance, stability and handling of the motorcycle. This may affect the rider's ability to control the motorcycle and may result in loss of motorcycle control and an accident.

 Warning

A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may result in loss of motorcycle control and an accident.

 Warning

Throughout this operation, ensure that the motorcycle is stabilised and adequately supported on a paddock stand to prevent risk of injury from the motorcycle falling.

 Warning

When fitting highway pegs to the front dresser bar on a motorcycle ensure that they are positioned such that they do not impede any motorcycle controls and do not compromise the operation of the gear lever or rear brake pedal. Any compromise to the effective operation of the motorcycle gear lever or brake pedal could lead to loss of motorcycle control and an accident.

Note:

- Triumph offers a broad range of approved genuine accessories for your motorcycle. We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit. To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorised Triumph dealer.



Warning

The highway peg mounts must only be fitted in conjunction with the highway pegs. Any attempt to balance feet on the highway peg mount spindles without the highway pegs fitted will affect the performance, stability and handling of the motorcycle. This may affect the riders ability to control the motorcycle and may result in loss of motorcycle control and an accident.



Warning

The highway pegs must only be used when the motorcycle is in motion. Any attempt to balance feet on the pegs while the motorcycle is stationary will result in instability of the motorcycle and an accident.

Note:


- The highway peg kit can only be used when a Triumph accessory dresser bar is fitted to the motorcycle.
- The highway pegs should be fitted to the outer vertical straight section of the front dresser bar.
- The highway pegs are supplied in a loosely assembled condition.
- Fitting the highway peg mounting clamps may permanently mark the dresser bars.
- Highway pegs must not be fitted to powder coated dresser bars. They must only be fitted to chrome dresser bars.

All Kits

1. Remove the M12 bolt and washer securing the clamp to the right hand highway peg.

A9759204 Kit Only

2. Assemble the two halves of the clamp together as shown ensuring the hinge sections of the clamps are aligned. Fit an M5 x 30 mm fixing from the kit and tighten to **6 Nm**.

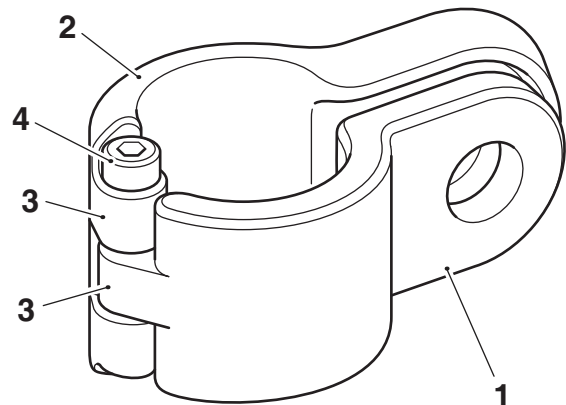


1. Clamp, plain face
2. Clamp, serrated face
3. Hinge sections
4. Fixing, M5 x 30 mm

3. Fit the clamp to the vertical portion of the right hand side dresser bar, ensuring the serrated face of the clamp is positioned towards the outside of the motorcycle as shown.

Note:

- The hinge section of the clamp can be fitted to the front or rear of the dresser bar.

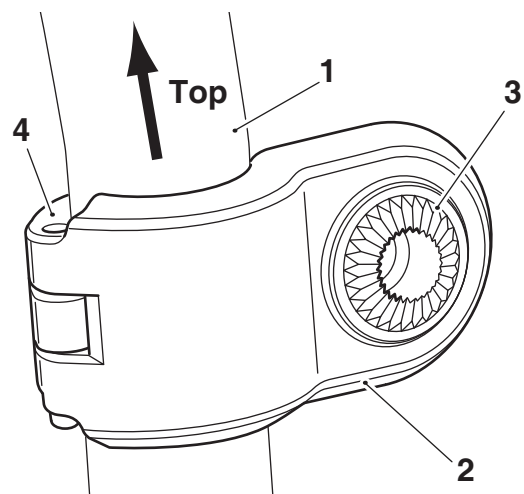


1. Dresser bar
2. Clamp
3. Serrated face
4. Hinge

A9750455 and A9750463 Kits Only

- Fit the clamp to the vertical portion of the right hand side dresser bar, ensuring the head of the clamp hinge pivot pin is positioned to the top as shown. Assemble the serrated plate onto the clamp ensuring the serrated face is positioned towards the outside of the motorcycle, as shown. Hold the plate in this position.

Note:


- The hinge section of the clamp can be fitted to the front or rear of the dresser bar.

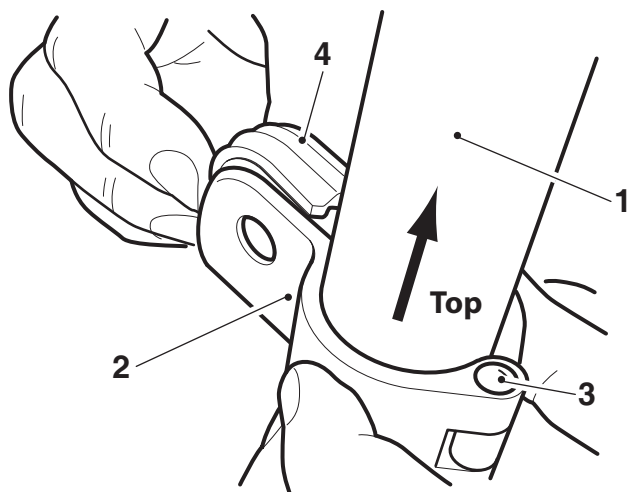

- Dresser bar
- Clamp
- Hinge pivot pin
- Serrated plate


All Kits

- Re-fit the M12 bolt and washer to the clamp, as shown below.

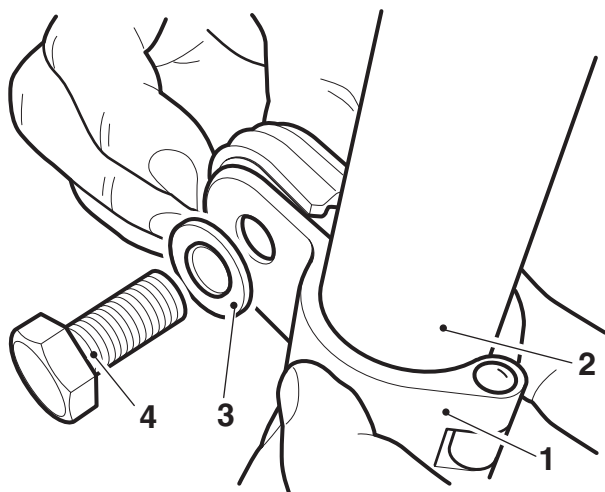

- Clamp
- Dresser bar
- Washer
- Bolt, M12


- If fitting the adjustable mount highway pegs, fit the adjustable mount to the clamp and retain with the M12 bolt. If fitting the short mount highway pegs fit the foot peg bracket to the clamp and retain with the M12 bolt.

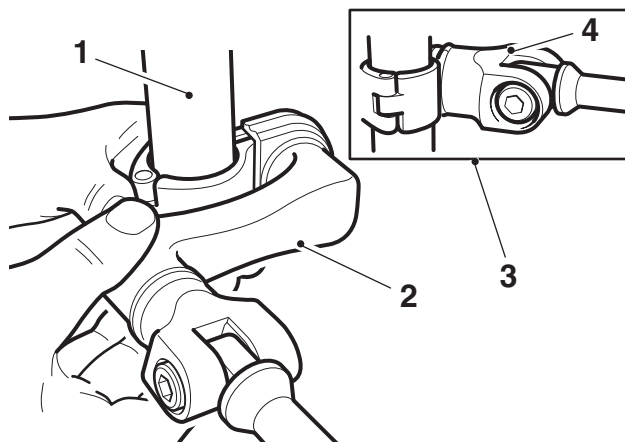

- Dresser bar, right hand side
- Adjustable mount
- Short mount
- Foot peg bracket


- Tighten the M12 bolt sufficiently to hold the highway peg assembly in the preferred position on the dresser bar. Do not fully tighten the fixing at this stage.
- Repeat steps 1 - 7 for the left hand highway peg assembly.
- Ensure the left hand and right hand highway pegs are positioned at the same height and orientation on the dresser bar.

10. If fitting the adjustable mount highway pegs, adjust the foot peg brackets so that the pivot bolt is in a horizontal plane as shown below. Tighten the fixings to **81 Nm**. This operation is not necessary when fitting short mount highway pegs as alignment is carried out at step 11.

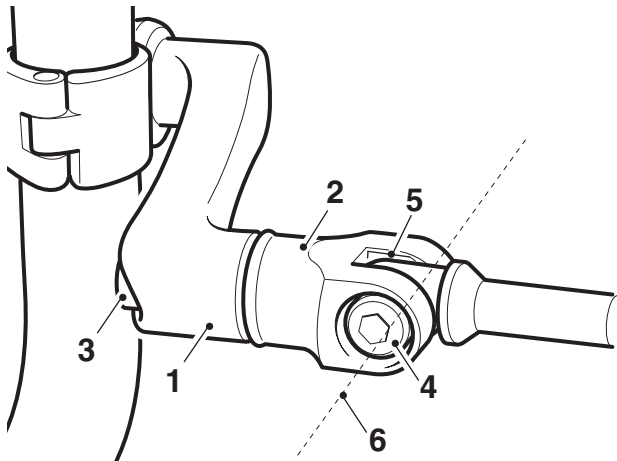


- 1. Adjustable mount, right hand shown
- 2. Foot peg bracket
- 3. Fixing
- 4. Pivot bolt
- 5. Horizontal plane

11. Fit the left and right hand side foot pegs onto the foot peg bracket spindles and secure with the fixings provided. Do not fully tighten the fixings at this stage.

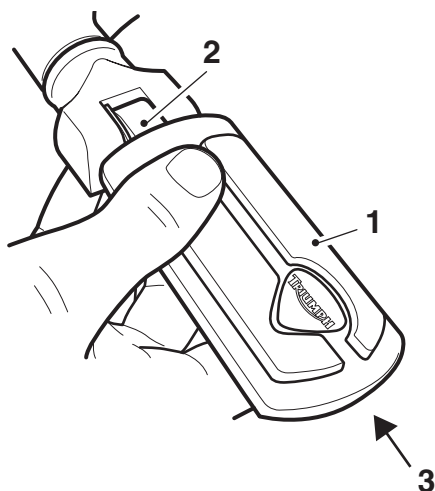


- 1. Foot peg, right hand shown
- 2. Foot peg bracket spindle
- 3. Spindle fixing location

12. Fold the foot pegs up and ensure they are aligned with the dresser bar as shown below.

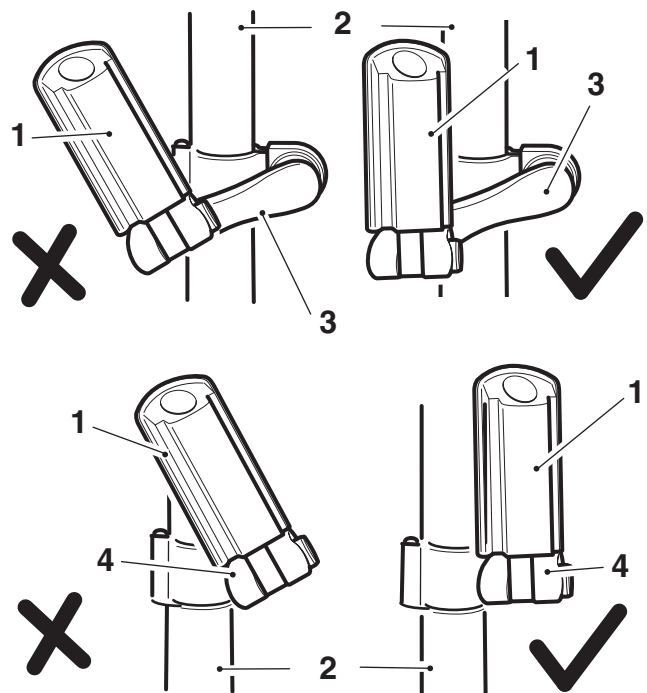

- 1. Foot peg, right hand shown
- 2. Dresser Bar
- 3. Adjustable mount
- 4. Foot peg bracket, short mount

13. Tighten the M12 clamp bolt to **100 Nm**.
14. Lower the foot pegs into the normal riding position.
15. Adjust the angle of the foot pegs into the desired position and tighten the spindle fixing to **29 Nm**.

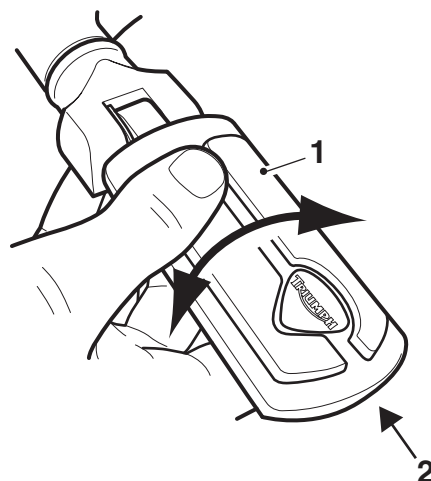

- 1. Foot peg, right hand shown
- 2. Spindle fixing location



Warning

After fitting the accessory kit the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.



Warning

If, after fitment of this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of control of the motorcycle leading to an accident.



Warning

The motorcycle must not be operated above the legal road speed limit except in closed course conditions.



Warning

Only operate this Triumph motorcycle at high speed in closed-course on road competition or on closed course racetracks. High speed operation should only be attempted by riders who have been instructed in the techniques necessary for high speed riding and are familiar with the motorcycle's characteristics in all conditions.

High speed operation in any other circumstances is dangerous and will lead to loss of motorcycle control and an accident.