

Fitting Instructions: Rocket III Touring Solo Luggage Rack Kit - A9758058




Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

Warning

This accessory kit is designed for use on Triumph Rocket III Touring motorcycles only and should not be fitted to any other Triumph model or to any other manufacturers motorcycle. Fitting this accessory kit to any other Triumph model, or to any other manufacturers motorcycle, may interfere with the rider and could affect the handling, stability or other aspects of the motorcycles operation which may result in loss of motorcycle control and an accident.

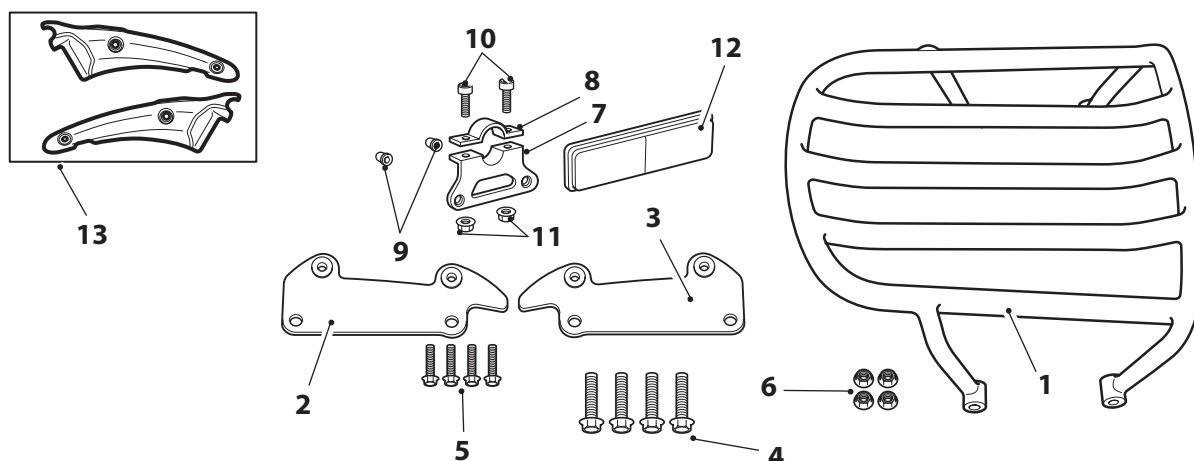

Parts Supplied:

- | | | | |
|-----------------------------------|-------|---|-------|
| 1. Solo luggage rack | 1 off | 8. Reflector bracket clamp | 1 off |
| 2. Mounting bracket, LH | 1 off | 9. Bush, retaining | 2 off |
| 3. Mounting bracket, RH | 1 off | 10. Screw, M5 x 16 | 2 off |
| 4. Bolt, M10 x 25 | 4 off | 11. Nut, M5 | 2 off |
| 5. Bolt, M8 x 33 | 4 off | 12. Reflector | 1 off |
| 6. Nut, M10 | 4 off | 13. Rear fender trim kit: (A9758075 - not included) | |
| 7. Reflector bracket | 1 off | | |

Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycles operation which may result in loss of motorcycle control and an accident.

Warning

Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.


Warning

A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may result in loss of motorcycle control and an accident.

Note:


- **This kit must be used in conjunction with A9758075, Rear fender trim kit (item 13).**
- **The solo luggage rack kit must only be used when the solo seat option is fitted.**

1. Remove the panniers and dual seat (if fitted) as described in the service manual.
2. If the solo seat option is already fitted to the motorcycle, remove the two M8 fixings and remove the seat.

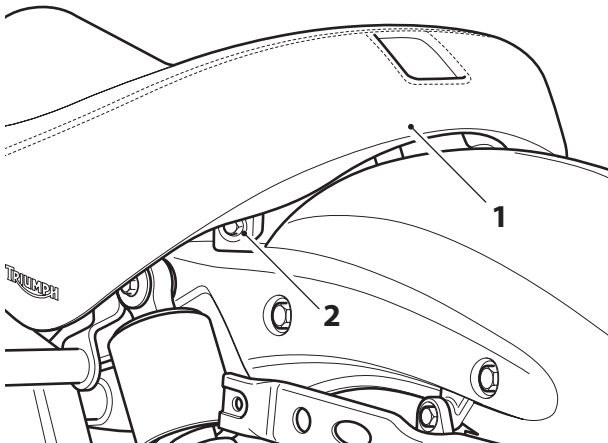


1. Solo seat
2. Fixing, left hand shown

3. Remove the left and right hand rear fender trims. Retain the trims if the motorcycle is to be returned to its original condition. Retain the fixings for reuse.

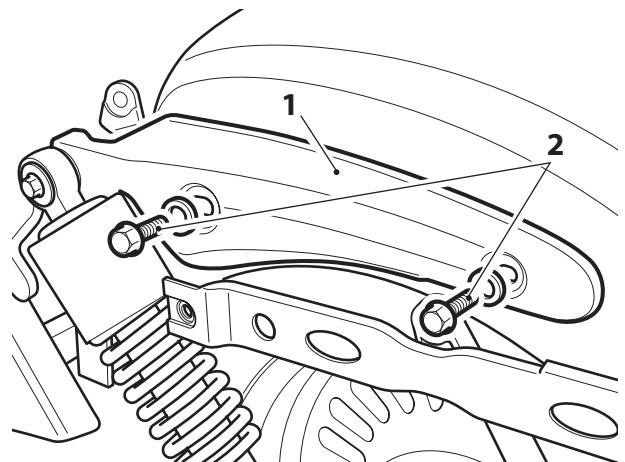


1. Rear fender trim, left hand shown
2. Fixings

4. Fit the left and right hand mounting brackets onto the luggage rack and secure with the M8 bolts provided. Ensure the bosses on the bracket face the luggage rack. Do not fully tighten at this stage.

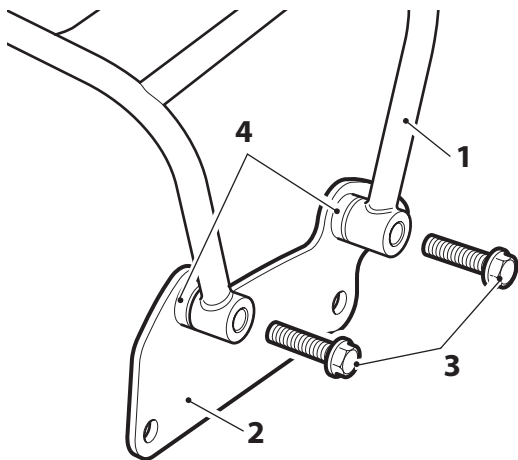


1. Luggage rack
2. Mounting bracket, left hand shown
3. Bolt, M8
4. Boss

5. Fit the reflector to the reflector bracket and secure with the retaining bushes. Ensure the reflector is positioned correctly on the bracket with the markings positioned at the top.

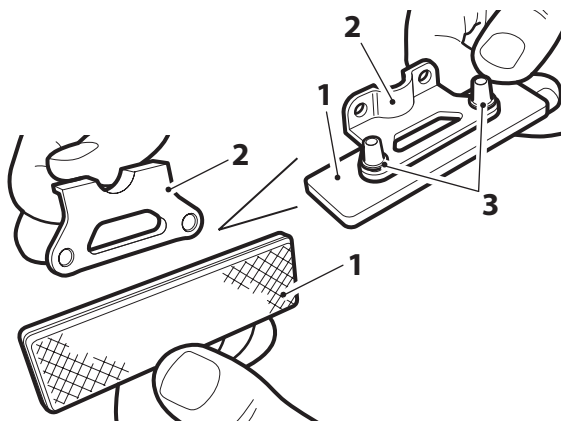


1. Reflector
2. Reflector bracket
3. Retaining bushes

6. Fit the reflector assembly onto the luggage rack centre bar, on a straight section of the bar as close as possible to the rear. Fit the reflector clamp and secure with the two M5 screws and nuts. Tighten the fixings to **3 Nm**.

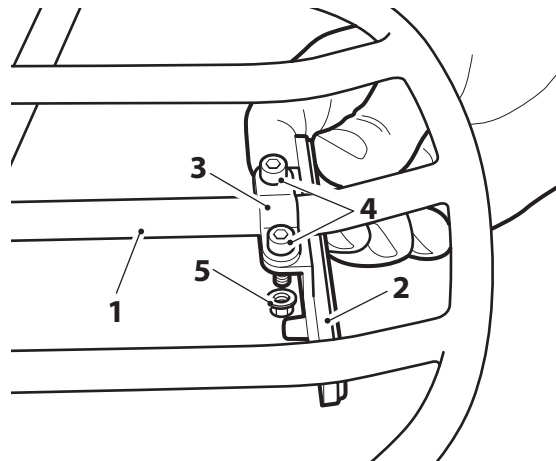

1. Centre bar, luggage rack
2. Reflector assembly
3. Reflector clamp
4. Screw, M5
5. Nut, M5


7. Locate the luggage rack onto the motorcycle ensuring the mounting brackets are positioned behind the motorcycle frame. Secure with the M10 bolts and nuts provided. Tighten the fixings to **45 Nm**.

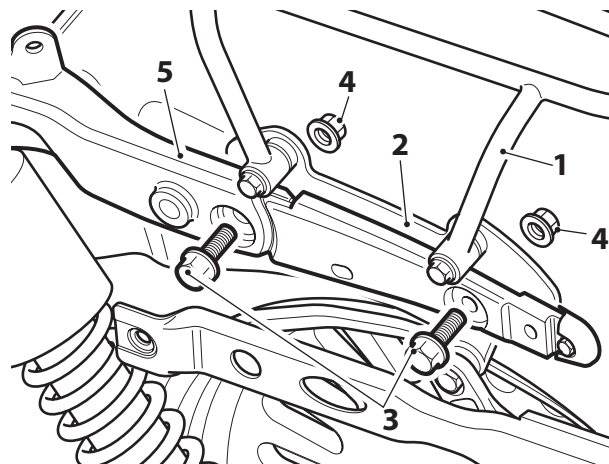

1. Luggage rack
2. Mounting bracket, left hand shown
3. Bolts, M10
4. Nuts, M10
5. Motorcycle frame


8. Tighten the M8 luggage rack fixings to **27 Nm**.

9. Remove the rubber edge trim from the original rear fender trims and fit to the new rear fender trims provided in kit A9758075 (item 13).

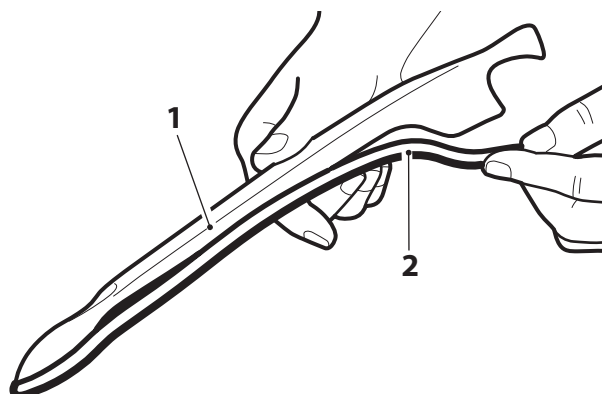


- 1. Rear fender trim, left hand shown**
2. Rubber edge trim

10. Fit the new left and right hand rear fender trims (item 13) to the motorcycle and secure with the original fixings, M10 bolts to the front fixing points and M8 bolts to the rear fixing points. Tighten the M10 fixings to **45 Nm** and the M8 fixings to **26 Nm**.

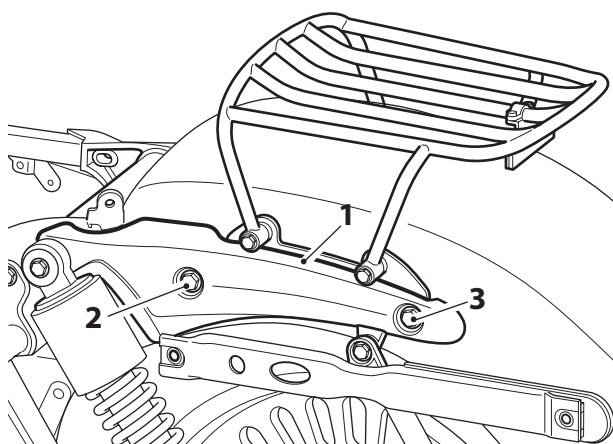

- 1. Rear fender trim, left hand shown**
2. M10 fixing
3. M8 fixing

11. Remove the single fixing and reflector from the rear of the solo seat, as shown. Retain the reflector and fixings for use if the solo luggage rack is removed.

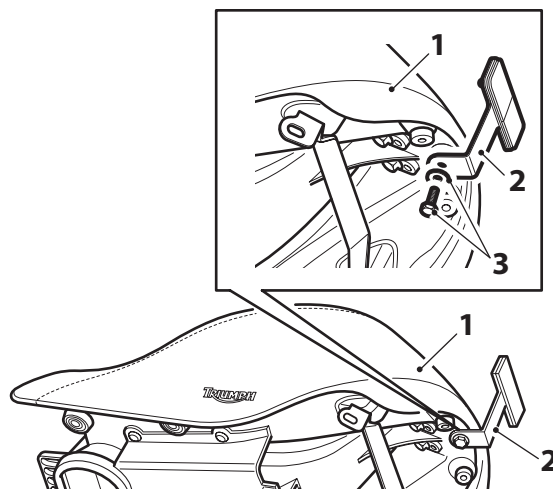

- 1. Solo seat**
2. Reflector
3. Fixings

12. Fit the solo seat as described in the solo seat fitting instructions. Refit the panniers as described in the service manual.



Warning

After fitting the accessory kit the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.



Warning

If, after fitment of this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of control of the motorcycle leading to an accident.



Warning

The maximum safe load for the luggage rack is **5 Kg (11 lbs)**. Never exceed this loading limit as this may cause the motorcycle to become unstable leading to loss of control and an accident.



Warning

Never ride an accessory equipped motorcycle (including those fitted with Triumph approved windscreens and luggage systems) at speeds above 80 mph (130 km/h).

The presence of accessories such as windscreens and luggage systems will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of control or an accident.

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.



Warning

The motorcycle must not be operated above the legal road speed limit except in closed course conditions.



Warning

Only operate this Triumph motorcycle at high speed in closed-course on road competition or on closed course racetracks. High speed operation should only be attempted by riders who have been instructed in the techniques necessary for high speed riding and are familiar with the motorcycle's characteristics in all conditions.

High speed operation in any other circumstances is dangerous and will lead to loss of motorcycle control and an accident.