


Fitting Instructions: Thunderbird Commander and Thunderbird LT A9788009

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

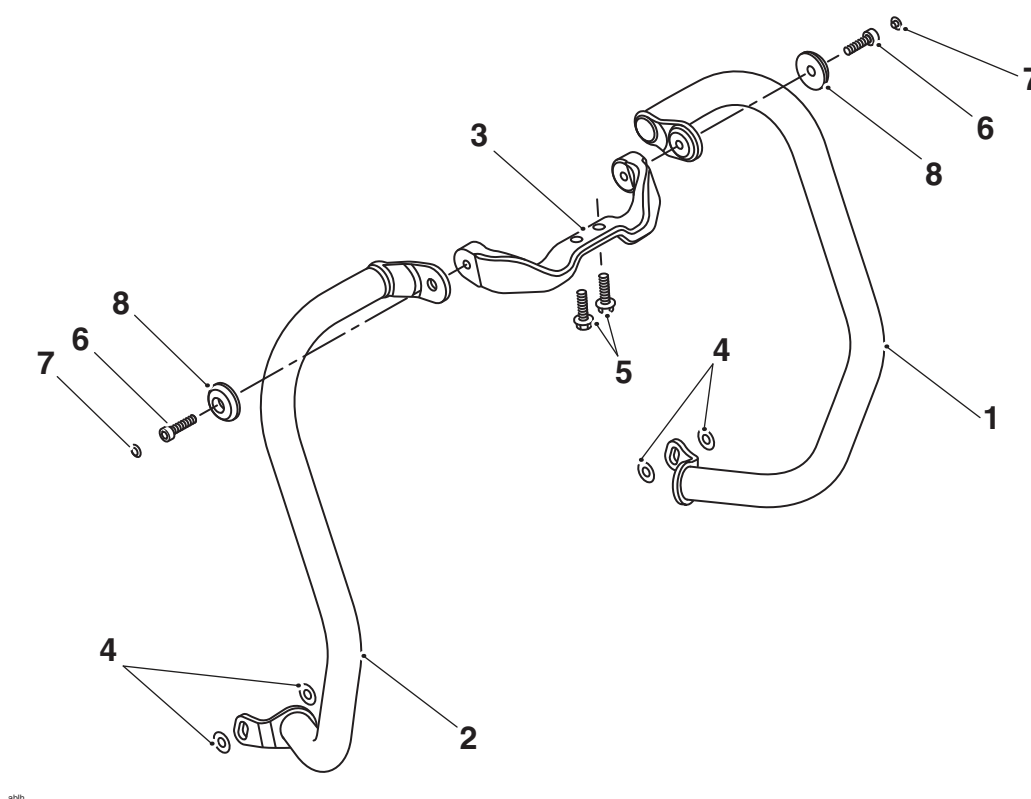

Parts Supplied:

1. Dresser bar, left hand	1 off	5. Bolt, M8 x 25 mm	2 off
2. Dresser bar, right hand	1 off	6. Screw, M8 x 30 mm	2 off
3. Centre bracket	1 off	7. Protective cap	2 off
4. Washer, M10	4 off	8. Finisher	2 off



Warning

This accessory kit is designed for use on Triumph Thunderbird Commander and Thunderbird LT motorcycles only and should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting this accessory kit to any other Triumph model, or to any other manufacturer's motorcycle, may interfere with the rider and could affect the handling, stability or other aspects of the motorcycle's operation which may result in loss of motorcycle control and an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation which may result in loss of motorcycle control and an accident.



Warning


A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability. This may result in loss of motorcycle control and an accident.



Warning

Before starting work, ensure the motorcycle is stabilised and adequately supported. This will help prevent it from falling and causing injury to the operator or damage to the motorcycle.


1. Release the fixing and remove the radiator cowl.

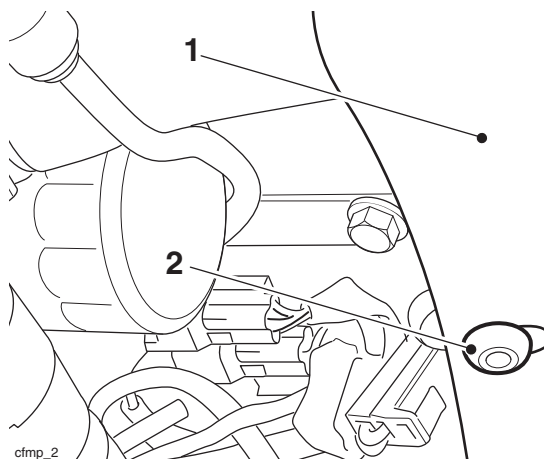

1. Radiator cowl

2. Fixing

2. Recover the centre bracket and the two M8 x 25 mm bolts from the kit.
3. Align the centre bracket to the threaded holes in the front of the frame. Tighten the bolts to **20 Nm**.

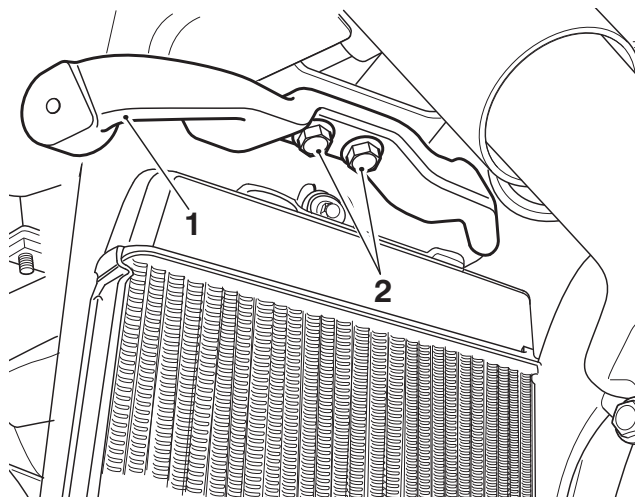


1. Centre bracket

2. Bolts


4. Refit the radiator cowl and tighten the fixing to **4 Nm**.

5. Remove the front bolt from the rider's foot rest, retain the bolt for re-use during installation.

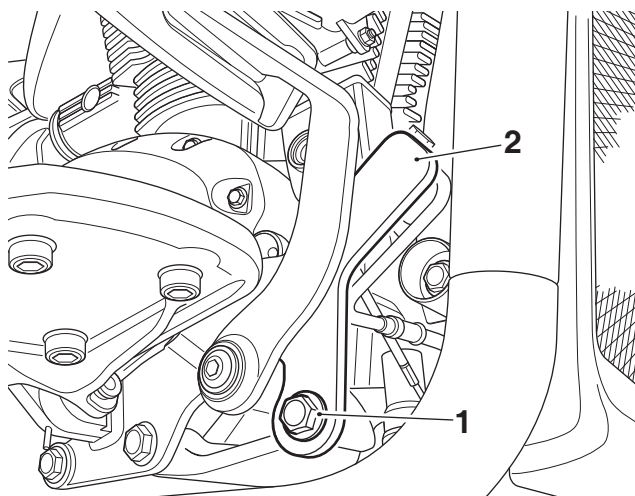


1. Bolt
2. Footrest

6. Place a finisher and an M8 x 30 mm screw from the kit to the dresser bar as shown below.

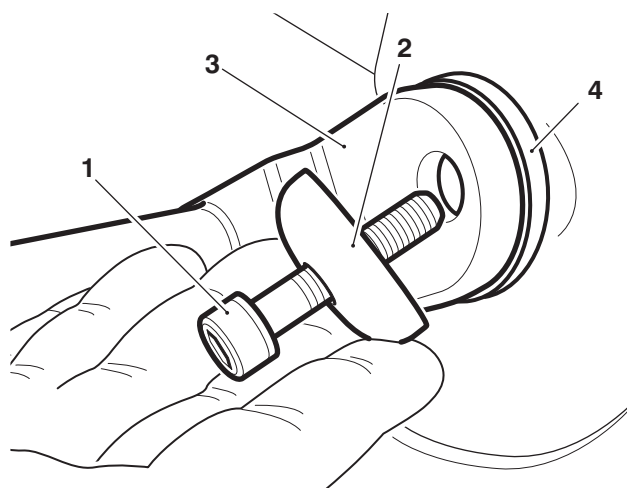


1. Screw, M8 x 30 mm
2. Finisher
3. Dresser bar
4. Centre bracket

7. Fit the dresser bar to the threaded hole in the centre bracket. Do not fully tighten the screw at this stage.

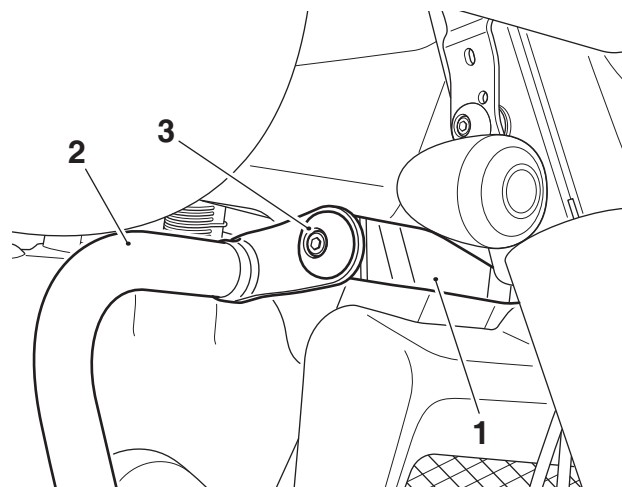


1. Centre bracket
2. Dresser bar (right hand shown)
3. Screw, M8 x 30 mm

8. Align the lower mounting of the dresser bar to the footrest bracket, fit the bolt removed previously and two M10 washers from the kit as shown below. Tighten the bolt to **50 Nm**.

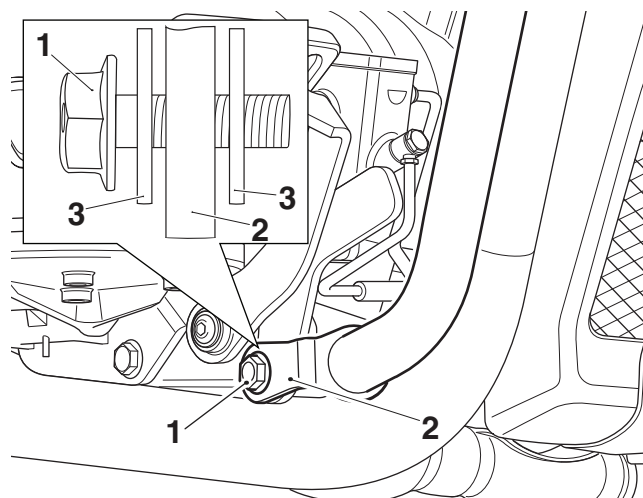

1. Bolt
2. Dresser bar (right hand shown)
3. Washer

9. Tighten the upper mounting screw of the dresser bar to **20 Nm**.
10. Fit the protective cap to the upper mounting screw.

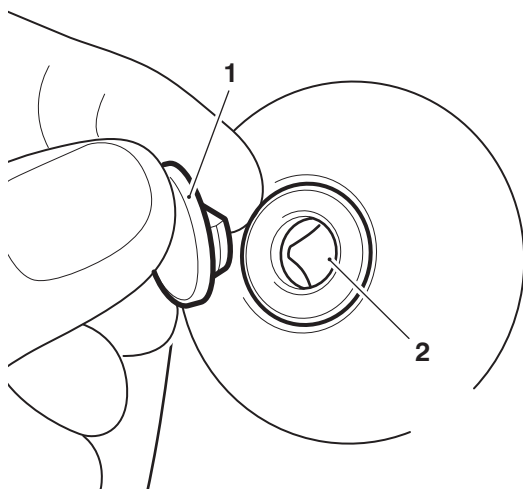

1. Protective cap
2. Screw, M8 x 30 mm

11. Repeat steps 5 to 10 for the left hand engine dresser bar.



Warning

After fitting the accessory kit, the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new handling characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.



Warning

Never ride an accessory equipped motorcycle (including those fitted with Triumph approved windshields and luggage systems) at speeds above 80 mph (130 km/h). The presence of accessories such as windshields and luggage systems will cause changes to the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of control or an accident.

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.



Warning

This motorcycle must not be operated above the legal road speed limit except in authorised closed-course conditions.



Warning

If after the fitment of this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of control of the motorcycle leading to an accident.