


Fitting Instructions: Tiger Explorer and Tiger Explorer XC A9828001 and A9828026

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory-equipped motorcycle is subsequently sold.

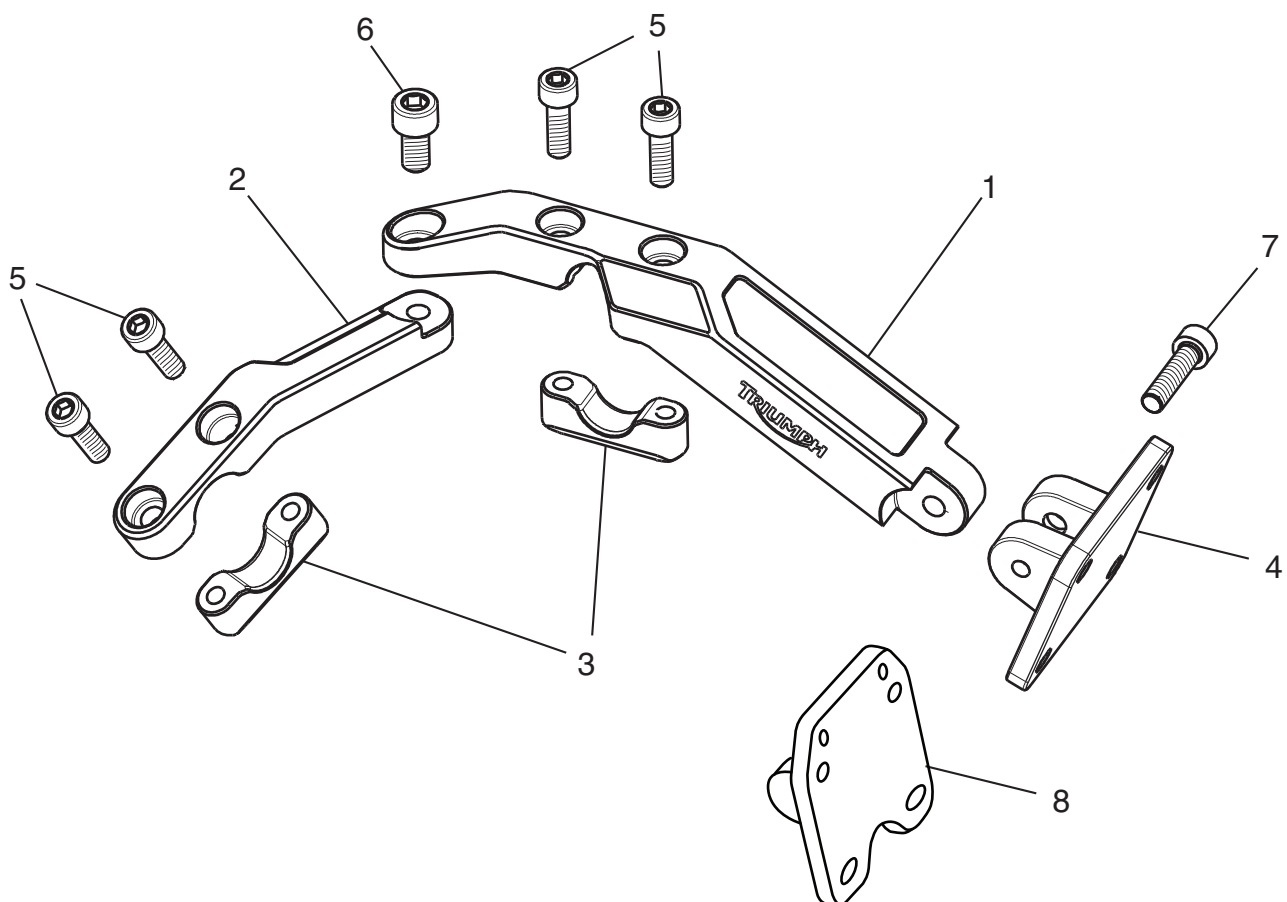

Parts Supplied:

1. Arm GPS mount (upper)	1 off	5. Screw, M5 x 16 mm	4 off
2. Arm GPS mount (lower)	1 off	6. Screw, M6 x 12 mm	1 off
3. Clamp GPS mount	2 off	7. Screw, M5 x 20 mm	1 off
4. Mount plate - in accessory kit A9828001	1 off	8. Mount plate - in accessory kit A9828026	1 off



Warning

This accessory kit is designed for use on Triumph Tiger Explorer and Tiger Explorer XC motorcycles only and should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting this accessory kit to any other Triumph model or to any other manufacturer's motorcycle will affect the performance, stability and handling of the motorcycle. This may affect the rider's ability to control the motorcycle and could cause an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation, which may result in loss of motorcycle control and an accident.



Warning

Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.



Warning


A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability. This may result in loss of motorcycle control and an accident.

Note:

- Triumph offers a broad range of approved Genuine Accessories for your motorcycle. We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories always refer to the instructions supplied with the respective accessory kit. To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorised Triumph dealer.

GPS Mounting Arm Assembly


- Assemble the upper and lower GPS mount arms as shown below using the M6 x 12 mm screw from the kit. Do not fully tighten at this stage.

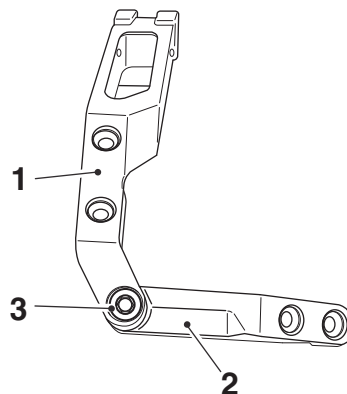

- GPS mount (upper)
- GPS mount (lower)
- M6 x 12 mm screw


Installation

- Position the motorcycle on a paddock stand.
- Release the four mounting screws and remove the windscreen. Retain the screws for re-use.

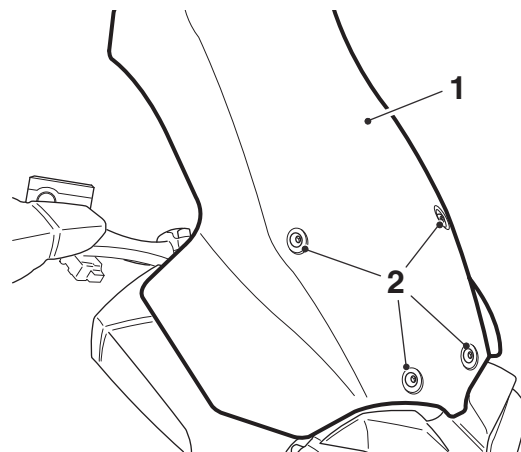


- Windscreen
- Screws

3. Fit the GPS mount and clamps to the windscreen mounting bracket and secure with the M5 x 16 mm screws as shown below. Do not fully tighten the screws at this stage.

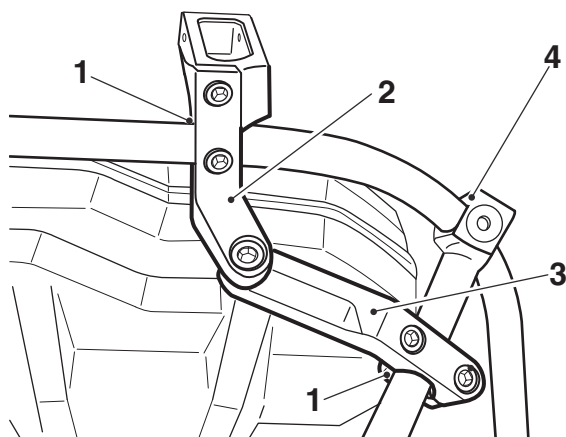

1. Clamp
2. GPS mount (upper)
3. GPS mount (lower)
4. Windscreen mounting bracket


4. Tighten the fixing screws in the following sequence.
 - Tighten the upper mount bracket screws (1) to **5 Nm**.
 - Tighten the lower mount bracket screws (2) to **5 Nm**.
 - Tighten the M6 screw (3) to **8 Nm**.

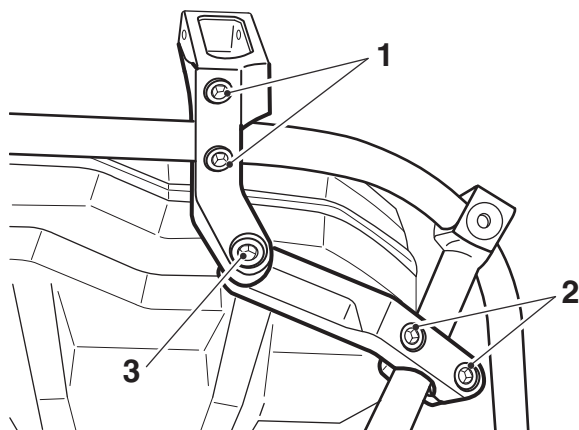

GPS Mount Tightening Sequence

Accessory Kit A9828001

5. Align the GPS mount plate to the upper mount bracket, and secure using the M5 x 20 mm screw from the kit.

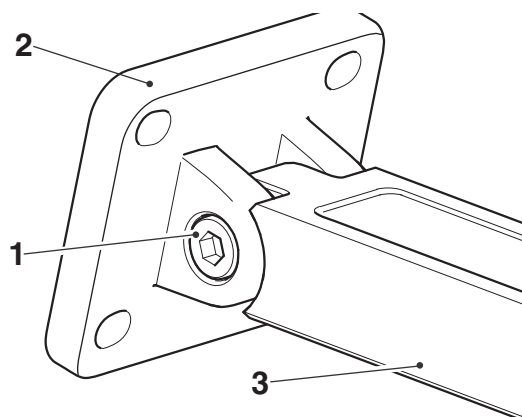


1. M5 x 20 mm screw
2. Mount plate
3. GPS mount (upper)

Accessory Kit A9828026

Note:


- When fitting the mount plate, ensure the edge of the mount with the cut out is positioned at the bottom as shown in the following illustration.
6. Align the GPS mount plate to the upper mount bracket as shown in the illustration below, and secure using the M5 x 20 mm screw from the kit.

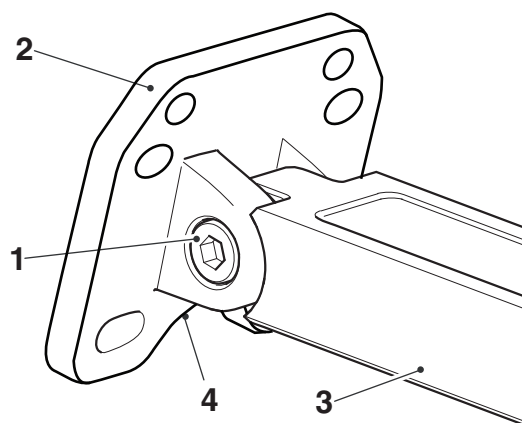

1. M5 x 20 mm screw
2. Mount plate
3. GPS mount (upper)
4. Cut out

Both Accessory Kits

7. Install the GPS unit (not supplied) to the mount following the GPS unit manufacturer's instructions, adjust to the required position and tighten the M5 x 20 mm screw to **4 Nm**.
8. Position the windscreen to the frame and secure with the four mounting screws. Tighten to **4 Nm**.

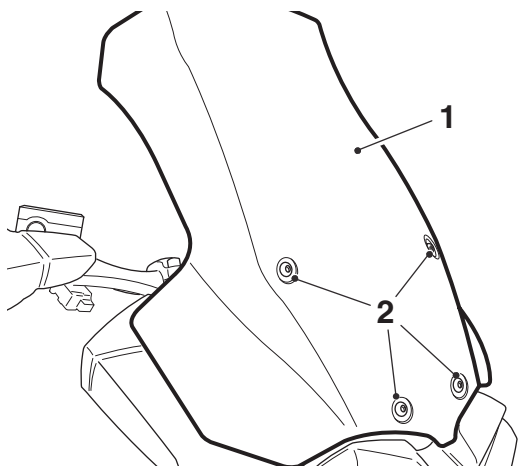

1. Windscreen

2. Screws



Caution

Damage to the windscreen or other parts of the motorcycle will result if the GPS unit or mountings are incorrectly adjusted. Adjust the GPS mounting as required to ensure the GPS unit does not impede the rider's view of the instruments or interfere with any part of the motorcycle.

9. Move the windscreen through its full range of travel while checking that the GPS unit does not contact any other part of the motorcycle.



Warning

Move the handlebars to left and right full lock while checking that cables and harnesses do not bind. Cables or harness that bind will restrict the steering and may cause loss of control and an accident.

10. Move the handlebars to left and right full lock while checking that the GPS mounting does not restrict full lock operation. Check cables or harnesses do not bind or restrict steering movement.



Warning

After fitting the accessory kit the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.



Warning

If, after fitting this accessory kit, you have any doubt about the performance of any aspect of the motorcycle, contact an authorised Triumph dealer and do not ride the motorcycle until the authorised dealer has declared it fit for use. Riding a motorcycle when there is any doubt as to any aspect of the performance of the motorcycle may result in loss of control of the motorcycle, leading to an accident.



Warning

Never ride an accessory equipped motorcycle at speeds above 80 mph (130 km/h).

The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of control or an accident.

Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.



Warning

The motorcycle must not be operated above the legal road speed limit except in closed-course conditions.



Warning

Only operate this Triumph motorcycle at high speed in closed-course on-road competition or on closed-course racetracks. High-speed operation should only be attempted by riders who have been instructed in the techniques necessary for high-speed riding and are familiar with the motorcycle's characteristics in all conditions.

High-speed operation in any other circumstances is dangerous and will lead to loss of motorcycle control and an accident.