



Accessory Fitting Instructions


Headlamp Cover Kit	
Kit Number	Models Affected
A9830108	Tiger 800 XR _T , Tiger 800 XC _A , Tiger 1200 XR _x , Tiger 1200 XC _x , Tiger 1200 XR _x Low, Tiger 1200 XR _T , Tiger 1200 XC _A ,

Thank you for choosing this Triumph genuine accessory kit. This accessory kit is the product of Triumph's use of proven engineering, exhaustive testing, and continuous striving for superior reliability, safety and performance.

Completely read all of these instructions before commencing the installation of the accessory kit in order to become thoroughly familiar with the kit's features and the installation process.

These instructions should be considered a permanent part of your accessory kit, and should remain with it even if your accessory equipped motorcycle is subsequently sold.

Parts Supplied

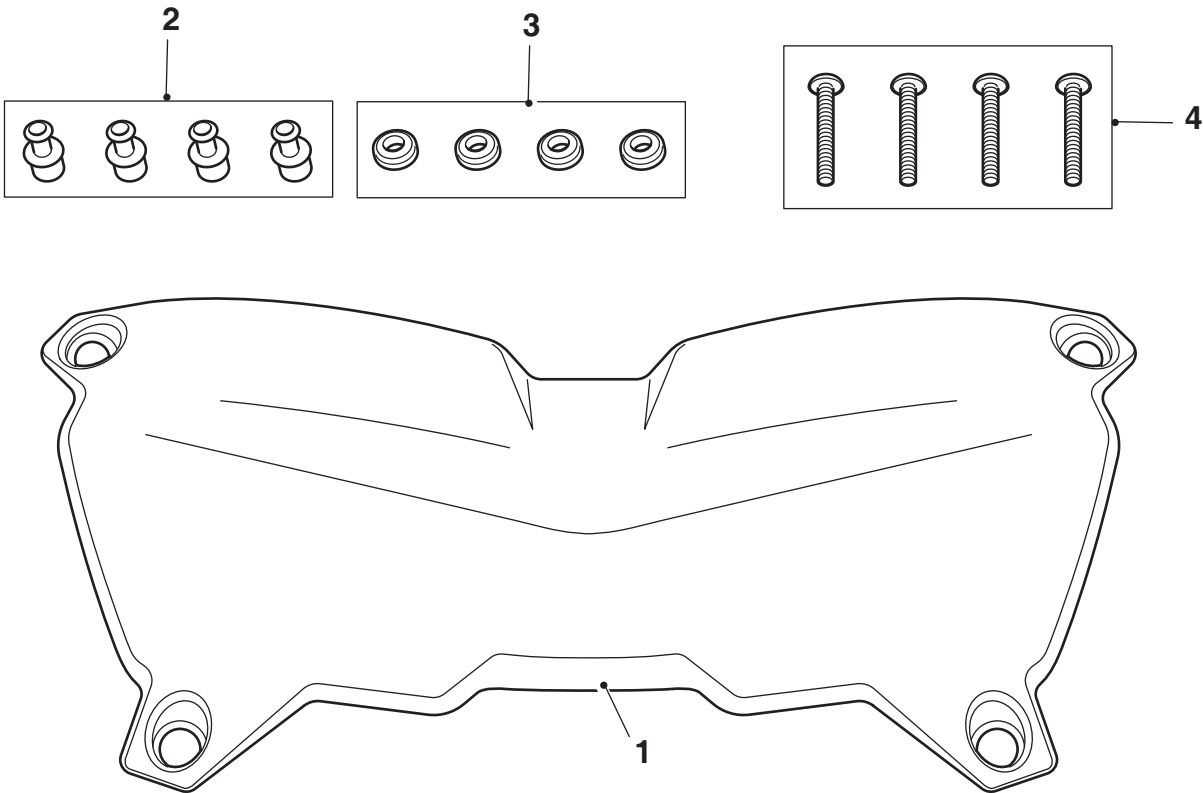

1. Headlamp cover	1 off	3. Grommet	4 off
2. Spacer	4 off	4. Screw, M5 x 50 mm	4 off

Notice

OFF ROAD USE ONLY. In some countries, use of a motorcycle fitted with this accessory kit on public roads may render the user liable to prosecution. Always remove the headlamp protector before using the motorcycle on public roads.



Warning

The accessory kits covered in this instruction are designed for use on specific models of Triumph motorcycle. The accessory kits and the models applicable are listed at the start of the instruction. They should not be fitted to any other Triumph model or to any other manufacturer's motorcycle. Fitting an accessory kit to a Triumph model not listed, or to any other manufacturer's motorcycle will affect the performance, stability and handling of the motorcycle. This may result in loss of motorcycle control and an accident.



Warning

Always have Triumph approved parts, accessories and conversions fitted by a trained technician of an authorised Triumph dealer. The fitment of parts, accessories and conversions by a technician who is not of an authorised Triumph dealer may affect the handling, stability or other aspects of the motorcycle's operation which may result in loss of motorcycle control and an accident.



Warning

Throughout this operation, ensure that the motorcycle is stabilised and adequately supported to prevent risk of injury from the motorcycle falling.




Warning

A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may affect motorcycle performance, handling and stability. This may result in loss of motorcycle control and an accident.

Note:


- Triumph offers a broad range of approved genuine accessories for your motorcycle. We cannot therefore cover all possible equipment variations in these instructions. For removal and installation of Triumph Genuine Accessories, always refer to the instructions supplied with the respective accessory kit. To obtain additional copies of any Triumph accessory instructions, visit www.triumphinstructions.com or contact your authorised Triumph dealer.

- Remove one of the four headlamp bezel fixings. Do not remove all of the fixings at the same time.

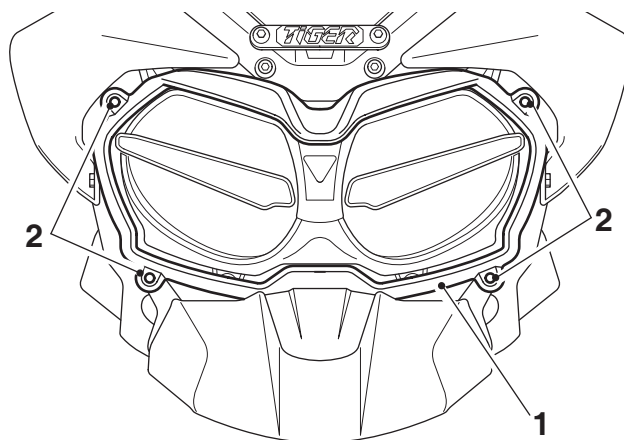

- Headlamp bezel
- Fixings


- Fit a spacer to one of the M5 x 50 mm screws as shown below and install it to the headlamp bezel fixing positions.

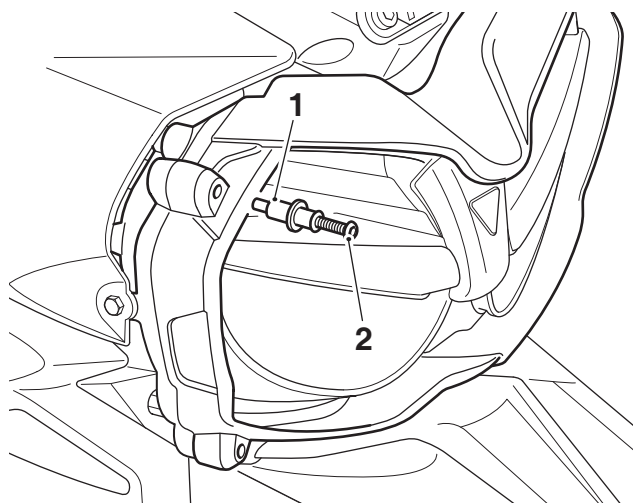

- Spacer
- Screw, M5 x 50 mm


- Repeat steps 1 and 2 for the remaining fixings. Do not tighten the fixings at this stage.

4. Retain the original fixings if the motorcycle is to be returned to its original condition.
5. Fit the four grommets to the headlamp protector.

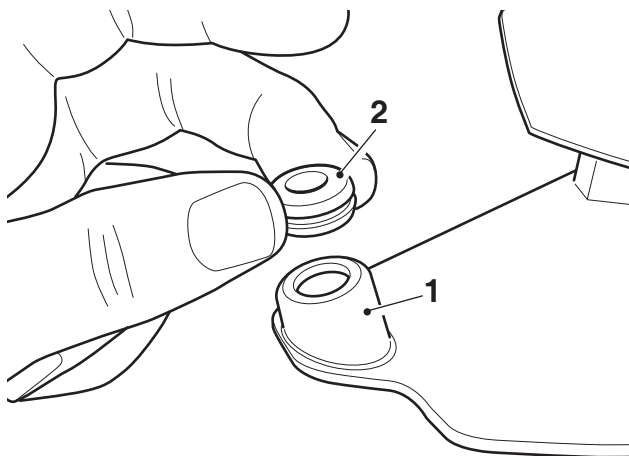

1. Headlamp protector
2. Grommet

6. Install the headlamp protector to the four spacers, one at a time, ensuring the grommets do not become dislodged as they pass over the spacers.
7. If necessary, lubricate the grommet with a thin smear of suitable water based lubricant, such as tyre mounting paste, to aid assembly.

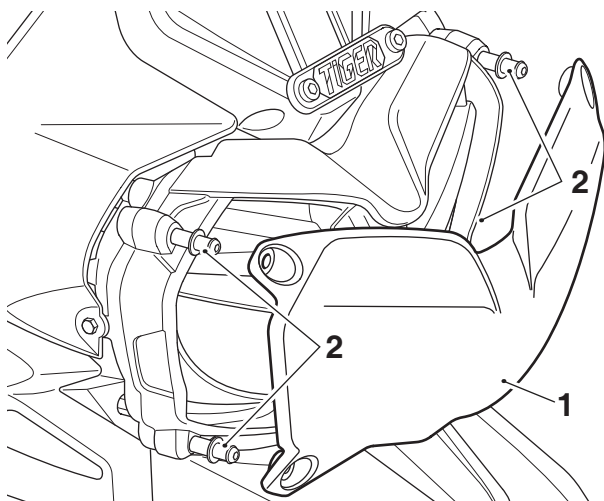

1. Headlamp protector
2. Spacers

8. Tighten the headlamp protector fixings to **3 Nm**.

Cleaning



Caution

Products such as window cleaning fluids, insect remover, rain repellent, scouring compounds, petrol or strong solvents such as alcohol, acetone, carbon tetrachloride, etc. will damage the headlamp protector. Never allow these products to contact the headlamp protector.

Clean the headlamp protector with a solution of mild soap or detergent and lukewarm water. After cleaning, rinse well and then dry with a soft, lint free cloth.



Warning

After fitting the accessory kit the motorcycle will exhibit new handling characteristics. Operate the motorcycle in a safe area free from traffic to gain familiarity with any new characteristics. Operation of the motorcycle when not familiar with any new handling characteristics may result in loss of motorcycle control and an accident.



Warning

Never ride an accessory equipped motorcycle at speeds above 80 mph (130 km/h). The presence of accessories will cause changes in the stability and handling of the motorcycle. Failure to allow for changes in motorcycle stability may lead to loss of control or an accident. Remember that the 80 mph (130 km/h) limit will be reduced by the fitting of non-approved accessories, incorrect loading, worn tyres, overall motorcycle condition and poor road or weather conditions.



Warning

This motorcycle must not be operated above the legal road speed limit except in authorised closed-course conditions.



Warning

Only operate this Triumph motorcycle at high speed in closed-course on road competition or on closed course racetracks. High speed operation should only be attempted by riders who have been instructed in the techniques necessary for high speed riding and are familiar with the motorcycle's characteristics in all conditions. High speed operation in any other circumstances is dangerous and may result in loss of motorcycle control and an accident.